# HYUNDAI



# OWNER'S MANUAL

Operation
Maintenance
Specifications

تلفن شبانه روزی: ۱۹۸۸۶۲۰۸۵ تلفن شبانه روزی: ۱۹۸۸۶۲۰۸۵

# FarmaSOS.com

All information in this Owner's Manual is current at the time of publication. However, Hyundai reserves the right to make changes at any time so that our policy of continual product improvement may be carried out.

This manual applies to all models of this vehicle and includes descriptions and explanations of optional as well as standard equipment. As a result, you may find material in this manual that does not apply to your specific vehicle.

#### **CAUTION: MODIFICATIONS TO YOUR HYUNDAI**

Your Hyundai should not be modified in any way. Such modifications may adversely affect the performance, safety or durability of your Hyundai and may, in addition, violate conditions of the limited warranties covering the vehicle. Certain modifications may also be in violation of regulations established by the Department of Transportation and other government agencies in your country.

# تلفن شبانه روزی: ۱۹۰۸۸۶۲۰۸۸ الفن شبانه روزی:

#### TWO-WAY RADIO OR CELLULAR TELEPHONE INSTALLATION

Your vehicle is equipped with electronic fuel injection and other electronic components. It is possible for an improperly installed/adjusted two-way radio or cellular telephone to adversely affect electronic systems. For this reason, we recommend that you carefully follow the radio manufacturer's instructions or consult your Hyundai dealer for precautionary measures or special instructions if you choose to install one of these devices.

#### SAFETY AND VEHICLE DAMAGE WARNING

This manual includes information titled as WARNING, CAUTION and NOTICE.

These titles indicate the following:

#### **A** WARNING

This indicates that a condition may result in harm, serious injury or death to you or other persons if the warning is not heeded. Follow the advice provided with the warning.

#### **!** CAUTION

This indicates that a condition may result in damage to your vehicle or its equipment if the caution is not heeded. Follow the advice provided with the caution.

تلفن شبانه روزی: ۱۹۸۸۶۲۰۸۵ تلفن شبانه روزی:

# FarmaSOS.com

#### \* NOTICE

This indicates that interesting or helpful information is being provided.

#### **FOREWORD**

Thank you for choosing Hyundai. We are pleased to welcome you to the growing number of discriminating people who drive Hyundais. The advanced engineering and high-quality construction of each Hyundai we build is something of which we're very proud.

Your Owner's Manual will introduce you to the features and operation of your new Hyundai. It is suggested that you read it carefully because the information it contains can contribute greatly to the satisfaction you receive from your new car.

The manufacturer also recommends that all service and maintenance on your car be performed by an authorized Hyundai dealer. Hyundai dealers are prepared to provide high-quality service, maintenance and any other assistance that may be required.

### HYUNDAI MOTOR COMPANY

Note : Because future owners will also need the information included in this manual, if you sell this Hyundai, please leave the manual in the vehicle for their use. Thank you. ملك المحالية ال

#### **A** CAUTION

Severe engine and transmission damage may result from the use of poor quality fuels and lubricants that do not meet Hyundai specifications. You must always use high quality fuels and lubricants that meet the specifications listed on Page 8-4 in the Vehicle Specifications section of the Owner's Manual.

Copyright 2012 Hyundai Motor Company. All rights reserved. No part of this publication may be reproduced, stored in any retrieval system or transmitted in any form or by any means without the prior written permission of Hyundai Motor Company.

	Introduction	1
	Your vehicle at a glance	2
	Safety features of your vehicle	3
6.16	Features of your vehicle	4
TABLE OF CONTENTS  •Y\-\\\ Farm	Driving your vehicle	5
	What to do in an emergency	6
	Maintenance	7
	Specifications & Consumer information	8
	Index	Ι

# Introduction

How to use this manual / 1-2

Fuel requirements / 1-2
Vehicle break-in process / 1-4
Indicator symbols on the instrument cluster / 1-5

+ ۲۱-۸۸۸۶۲۰۸۵ :روزی: ماده دروزی: تلفن شبانه روزی: ۱

FarmaSOS.com

#### **HOW TO USE THIS MANUAL**

A010000AHM

We want to help you get the greatest possible driving pleasure from your vehicle. Your Owner's Manual can assist you in many ways. We strongly recommend that you read the entire manual. In order to minimize the chance of death or injury, you must read the WARNING and CAUTION sections in the manual.

Illustrations complement the words in this manual to best explain how to enjoy your vehicle. By reading your manual, you learn about features, important safety information, and driving tips under various road conditions.

The general layout of the manual is provided in the Table of Contents. A good place to start is the index; it has an alphabetical listing of all information in your manual.

Sections: This manual has eight sections plus an index. Each section begins with a brief list of contents so you can tell at a glance if that section has the information you want.

You will find various WARNINGS, CAUTIONS, and NOTICEs in this manual. These WARNINGS were prepared to enhance your personal safety. You should carefully read and follow ALL procedures and recommendations provided in these WARNINGS, CAUTIONS and NOTICES.

## **A WARNING**

A WARNING indicates a situation in which harm, serious bodily injury or death could result if the warning is ignored.

## **CAUTION**

A CAUTION indicates a situation in which damage to your vehicle could result if the caution is ignored.

#### \* NOTICE

A NOTICE indicates interesting or helpful information is being provided.

#### **FUEL REQUIREMENTS**

#### Gasoline engine

A020101ABH

Unleaded

#### For Europe

For the optimal vehicle performance, we recommend you to use unleaded gasoline which complies with EN 228 and has an octane rating of RON (Research Octane Number) 95/AKI (Anti Knock Index) 91 or higher.

You may use unleaded gasoline with an octane rating of RON 91~94/AKI 87~90 but it may result in slight performance reduction of the vehicle.

#### **Except Europe**

Your new HYUNDAI vehicle is designed to use only unleaded fuel having an Octane Rating of RON (Research Octane Number) 91/AKI (Anti-Knock Index) 87 or higher.

Your new vehicle is designed to obtain maximum performance with UNLEADED FUEL, as well as minimize exhaust emissions and spark plug fouling.

## **A** CAUTION

NEVER USE LEADED FUEL. The use of leaded fuel is detrimental to the catalytic converter and will damage the engine control system's oxygen sensor and affect emission control.

Never add any fuel system cleaning agents to the fuel tank other than what has been specified. (Consult an authorized HYUNDAI dealer for details.)

#### **WARNING**

- Do not "top off" after the nozzle automatically shuts off when refueling.
- Always check that the fuel cap is installed securely to prevent fuel spillage in the event of an accident.

#### Leaded (if equipped)

For some countries, your vehicle is designed to use leaded gasoline. When you are going to use leaded gasoline, ask to an authorized HYUNDAI dealer whether leaded gasoline in your vehicle is available or not.

Octane Rating of leaded gasoline is same with unleaded one.





FarmaSOS.com

#### A020103AUN

# Gasoline containing alcohol and methanol

Gasohol, a mixture of gasoline and ethanol (also known as grain alcohol), and gasoline or gasohol containing methanol (also known as wood alcohol) are being marketed along with or instead of leaded gasoline.

Do not use gasohol containing more than 10% ethanol, and do not use gasoline or gasohol containing any methanol. Either of these fuels may cause drivability problems and damage to the fuel system.

Discontinue using gasohol of any kind if drivability problems occur.

Vehicle damage or drivability problems may not be covered by the manufacturer's warranty if they result from the use of:

- 1. Gasohol containing more than 10% ethanol.
- 2. Gasoline or gasohol containing methanol.
- 3. Leaded fuel or leaded gasohol.

## **A** CAUTION

Never use gasohol which contains methanol. Discontinue use of any gasohol product which impairs drivability.

#### A020104AEN

#### Use of MTBE

HYUNDAI recommends avoiding fuels containing MTBE (Methyl Tertiary Butyl Ether) over 15.0% vol. (Oxygen Content 2.7% weight) in your vehicle.

Fuel containing MTBE over 15.0% vol. (Oxygen Content 2.7% weight) may reduce vehicle performance and produce vapor lock or hard starting.

#### **A** CAUTION

Your New Vehicle Limited Warrantv may not cover damage to the fuel system and any performance problems that are caused by the use of fuels containing methanol or fuels containing MTBE (Methyl Tertiary Butyl Ether) over 15.0% vol. (Oxygen Content 2.7% weight.)

#### A020105AUN

#### Do not use methanol

Fuels containing methanol (wood alcohol) should not be used in your vehicle. This type of fuel can reduce vehicle performance and damage components of the fuel system.

#### Fuel Additives

HYUNDAI recommends that you use good quality gasoline that meets Europe Fuel standards (EN228) or equivalents. For customers who do not use good quality gasoline including fuel additives regularly, and have problems starting or the engine does not run smoothly, one bottle of additives added to the fuel tank at every 15.000km (for Europe)/5.000km (except Europe). Additives are available from your authorized HYUNDAI dealer along with information on how to use them.

#### A020107AUN

#### Operation in foreign countries

If you are going to drive your vehicle in another country, be sure to:

- · Observe all regulations regarding registration and insurance.
- Determine that acceptable fuel is available.

#### VEHICLE BREAK-IN PROCESS

#### A030000AUN

No special break-in period is needed. By following a few simple precautions for the first 1,000 km (600 miles) you may add to the performance, economy and life of your vehicle.

- Do not race the engine.
- While driving, keep your engine speed (rpm, or revolutions per minute) between 2,000 rpm and 4,000 rpm.
- Do not maintain a single speed for long periods of time, either fast or slow. Varving engine speed is needed to properly break-in the engine.
- · Avoid hard stops, except in emergencies, to allow the brakes to seat properlv.
- Don't let the engine idle longer than 3 minutes at one time.
- Don't tow a trailer during the first 2,000 km (1,200 miles) of operation.

#### INDICATOR SYMBOLS ON THE INSTRUMENT CLUSTER

A050000BBH-EE



Door ajar warning light



Seat belt warning light



High beam indicator



Turn signal indicator



**ESP** indicator



**ESP OFF indicator** 



ABS warning light



Parking brake & Brake fluid warning light



Engine oil pressure warning



Low windshield washer fluid level warning light (if equipped)



Charging system warning light



Malfunction indicator light



Air bag warning light



CRUISE Cruise indicator (if equipped)



Cruise SET indicator (if equipped)



SCC malfunction indicator تلفن شیانه روزی: ۱۴ (if equipped)



SCC sensor malfunction indicator (if equipped)



Immobilizer indicator



Low fuel level warning light



LDWS indicator (if equipped)



LDWS malfunction indicator. (if equipped)



Overspeed warning light (if equipped)



Front fog light indicator (if equipped)



Trunk ajar warning light



EPB malfunction indicator **EPB** (if equipped)



AUTO HOLD indicator (if equipped)



AFLS malfunction indicator (if equipped)



SPORT indicator (if equipped)



ECS malfunction indicator (if equipped)



ECO indicator (if equipped)

<sup>\*</sup> For more detailed explanations, refer to "Instrument cluster" in section 4.

#### Introduction



ECO-P indicator (if equipped)



Tail light indicator



TPMS (Tire Pressure Monitoring System) malfunction indicator (if equipped)



Low tire pressure telltale (if equipped)



Low tire pressure position telltale (if equipped)



تلفن شبانه روزی: ۱۵۸۰۲۰۸۵ - ۲۱ م

FarmaSOS.com


# Your vehicle at a glance

Interior overview / 2-2 Instrument panel overview / 2-3 Engine compartment / 2-4

تلفن شبانه روزی: ۱۵۸۸۶۲ مراکبات

FarmaSOS.com

#### **INTERIOR OVERVIEW**

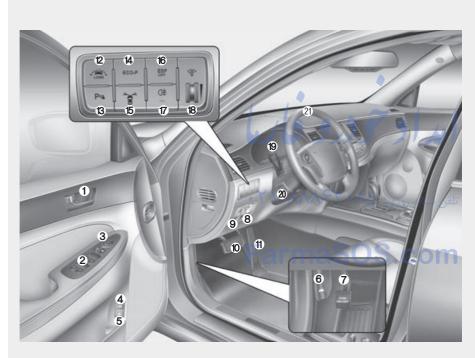

<sup>\*</sup> The actual vehicle may differ from the illustration.

1. Door lock/unlock button	4-16
2. Power window switches	4-27
Outside rearview mirror control switch	4-46
Trunk lid release switch or power main control switch*4-	19, 4-22
5. Fuel filler lid release button	4-32
6. Hood release lever	4-30
7. Foot parking brake*	5-18
8. Electric parking brake*	
9. Auto hold control button*	5-24
10. Brake pedal	5-17
11. Accelerator pedal	.5-6, 5-9
12. Lane departure warning system swich*	5-55
13. Parking assist button*	4-73
14. ECO-P (Pedal) button*	5-58
15. Front blind spot monitoring system ON button*	4-76
16. ESP OFF button*	5-29
17. Rear fog light switch*	4-82
18. Instrument panel illumination control knob	4-50
19. Light control/Turn signals	4-78
20. Steering wheel manual tilt or power tilt control*	4-43
21. Steering wheel	4-42
* · if aguipped	

OBH012001D

B010000BBH-EE

## **INSTRUMENT PANEL OVERVIEW**




1. Instrument cluster	4-48
2. Horn	4-44
3. Driver's front air bag	3-45
4. Wiper/Washer	4-85
5. Ignition switch or engine start/ stop button*	5-4. 5-7
6. Climate control system	
7. Digital clock	4-113
8. Hazard warning flasher switch	4-77 6-2
9. Shift lever	,
10. Central control panel*	
11. Seat warmer or climate control seat*	3-8, 3-9
12. Vehicle height control button*.	5-36
13. Sport mode button*	
14. Passenger's front air bag	
*: if equipped	

OBH012002L

B020000ABH-EE


#### **ENGINE COMPARTMENT**

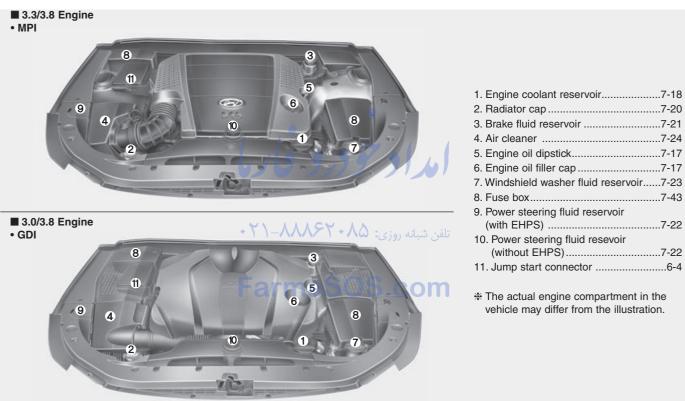

B030000ABH-EE

#### ■ 4.6 Engine

• MPI

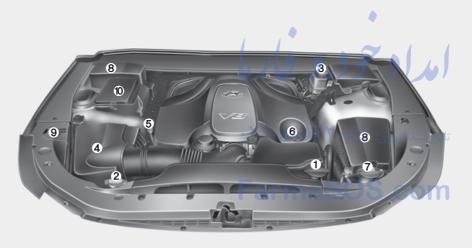

- 1. Engine coolant reservoir
   7-18

   2. Radiator cap
   7-20

   3. Brake fluid reservoir
   7-21

   4. Air cleaner
   7-24

   5. Engine oil dipstick
   7-17

   6. Engine oil filler cap
   7-17

   7. Windshield washer fluid reservoir
   7-23

   8. Fuse box
   7-43

   9. Power steering fluid reservoir
   7-22

   10. Jump start connector
   6-4
- \* The actual engine compartment in the vehicle may differ from the illustration.

OBH018005N

Seats / 3-2

Seat belts / 3-17


Child restraint system / 3-29 Air bag - supplemental restraint system / 3-39

# Safety features of your vehicle

ال را و حور و فار ل تلفن شبانه روزی: ۸۵۰۲۹۸۸۸-۲۱-

FarmaSOS.com

#### **SEATS**

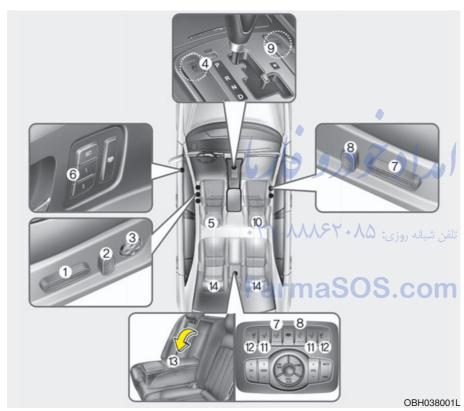

C010000ABH-FF

#### Driver's seat

- (1) Forward and backward/Seat cushion height
- (2) Seatback angle
- (3) Lumbar support
- (4) Seat warmer or climate control seat\*
- (5) Headrest
- (6) Driver position memory system\*

#### Front passenger's seat

- (7) Forward and backward
- (8) Seatback angle\*
- (9) Seat warmer or climate control seat\*
- (10) Headrest

#### Rear seat

- (11) Forward and backward\*
- (12) Seat warmer\*
- (13) Armrest
- (14) Headrest

\*: if equipped

WARNING - Loose objects
Loose objects in the driver's foot
area could interfere with the operation of the foot pedals, possibly
causing an accident. Do not place
anything under the front seats.

# WARNING - Driver responsibility for passengers

Riding in a vehicle with the seat-back reclined could lead to serious or fatal injury in an accident. If a seat is reclined during an accident, the occupant's hips may slide under the lap portion of the seat belt applying great force to the unprotected abdomen. Serious or fatal internal injuries could result. The driver must advise the passenger to keep the seatback in an upright position whenever the vehicle is in motion.

## **WARNING**

Do not use a sitting cushion that reduces friction between the seat and passenger. The passenger's hips may slide under the lap portion of the seat belt during an accident or a sudden stop. Serious or fatal internal injuries could result because the seat belt can't operate normally.

## **WARNING** - Driver's seat

- Never attempt to adjust the seat while the vehicle is moving. This could result in loss of control, and an accident causing death, serious injury, or property damage.
- Do not allow anything to interfere with the normal position of the seatback. Storing items against a seatback or in any other way interfering with proper locking of a seatback could result in serious or fatal injury in a sudden stop or collision.

(Continued)

#### (Continued)

- Always drive and ride with your seatback upright and the lap portion of the seat belt snug and low across the hips. This is the best position to protect you in case of an accident.
- In order to avoid unnecessary and perhaps severe air bag injuries, always sit as far back as possible from the steering wheel while maintaining comfortable control of the vehicle. We recommend that your chest be at least 250 mm (10 inches) away from the steering wheel.

#### **WARNING**

- Do not adjust the seat while wearing seat belts. Moving the seat cushion forward may cause strong pressure on the abdomen.
- Use extreme caution so that hands or other objects are not caught in the seat mechanisms while the seat is moving.
- Do not put a cigarette lighter on the floor or seat. When you operate the seat, gas may gush out of the lighter and cause fire.

#### C010200AEN

#### Front seat adjustment - power

The front seat can be adjusted by using the control knob located on the outside of the seat cushion. Before driving, adjust the seat to the proper position so as to easily control the steering wheel, pedals and switches on the instrument panel.



The power seat is operable with the ignition OFF.

Therefore, children should never be left unattended in the car.

#### **A** CAUTION

- The power seat is driven by an electric motor. Stop operating once the adjustment is completed. Excessive operation may damage the electrical equipment.
- When in operation, the power seat consumes a large amount of electrical power. To prevent unnecessary charging system drain, don't adjust the power seat longer than necessary while the engine is not running.
- Do not operate two or more power seat control knobs at the same time. Doing so may result in power seat motor or electrical component malfunction.


OBH038002

C010201AUN

#### Forward and backward

Push the control knob forward or backward to move the seat to the desired position. Release the knob once the seat reaches the desired position.


FarmaSOS.com

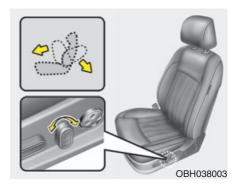

C010202ABH


#### Seatback angle (if equipped)

Push the control knob forward or backward to move the seatback to the desired angle. Release the knob once the seat reaches the desired position.

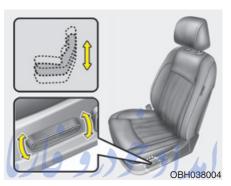

C010203ABH

Seat cushion height (for driver's seat)
Pull the front portion of the control knob
up to raise or push down to lower the
front part of the seat cushion. Pull the
rear portion of the control knob up to
raise or push down to lower the rear part
of the seat cushion. Release the knob
once the seat reaches the desired position.

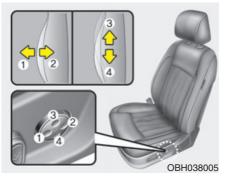


C010204ABH

#### Lumbar support (for driver's seat)

The lumbar support can be adjusted by pressing the lumbar support switch on the side of the drivers seat. Press the front portion of the switch (1) to increase support, or the rear portion of the switch (2), to decrease support.

Move the support position up and down by pressing the switch (3) or (4).

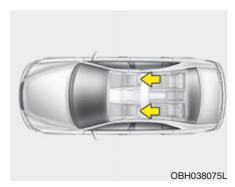


#### C010104ABH Headrest

The driver's and front passenger's seats are equipped with a headrest for the occupant's safety and comfort.

The headrest not only provides comfort for the driver and front passenger, but also helps to protect the head and neck in the event of a collision.


## **A** WARNING

- For maximum effectiveness in case of an accident, the headrest should be adjusted so the middle of the headrest is at the same height of the center of gravity of an occupant's head. Generally, the center of gravity of most people's head is similar with the height of the top of their eyes. Also, adjust the headrest as close to your head as possible. For this reason, the use of a cushion that holds the body away from the seatback is not recommended.
- Do not operate the vehicle with the headrests removed as severe injury to the occupants may occur in the event of an accident. Headrests may provide protection against neck injuries when properly adjusted.
- Do not adjust the headrest position of the driver's seat while the vehicle is in motion.

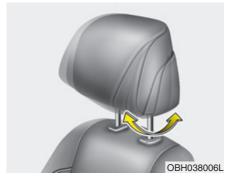

#### Forward and backward adjustment

The headrest may be adjusted forward or backward by pulling the lower part of the headrest forward or backward to the desired detent in the direction of the arrow. Adjust the headrest so that it properly supports the head and neck.

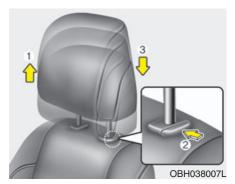

#### Adjusting the height up and down

To raise the headrest, pull it up to the desired position (1). To lower the headrest, push and hold the release button (2) on the headrest support and lower the headrest to the desired position (3).

#### Removal

For your safety, the front headrest can't be removed. If there is any problem with the front headrest, take your vehicle to an authorized HYUNDAI dealer and have the system checked.

## **A WARNING**

Do not operate the vehicle with the headrests removed as severe injury to the occupants may occur in the event of an accident. Headrests may provide protection against neck injuries when properly adjusted.

تلفن شبانه روزی: ۱-۸۸۸۶۲۰۸۵ تلفن شبانه روزی: ۱-۸۸۸۶۲۰۸۵

FarmaSOS.com



#### **Electronic active headrest (if equipped)**

The electronic active headrest is designed to trigger the headrest forward and upward when impact sensor detects a rear impact. This helps to prevent the driver's and front passenger's heads from moving backward and thus helps minimize neck injuries.

## **A** CAUTION

The active headrest is a safety device to reduce injuries from a rear impact. Do not hit or pull the headrest intentionally.



C010107ABH

#### Seat warmer (if equipped)

The seat warmer is provided to warm the front seats during cold weather. While the engine is running, push either of the switches to warm the driver's seat or the front passenger's seat.

During mild weather or under conditions where the operation of the seat warmer is not needed, keep the switches in the OFF position.

 Each time you push the switch, the temperature setting of the seat is changed as follows:



- When pressing the switch for more than 1.5 seconds with the seat warmer operating, the seat warmer will turn OFF.
- The seat warmer defaults to the OFF position whenever the ignition switch is turned on.

#### \* NOTICE

With the seat warmer switch in the ON position, the heating system in the seat turns off or on automatically depending on the seat temperature.

#### **!** CAUTION

- When cleaning the seats, do not use an organic solvent such as thinner, benzene, alcohol and gasoline. Doing so may damage the surface of the heater or seats.
- To prevent overheating the seat warmer, do not place anything on the seats that insulates against heat, such as blankets, cushions or seat covers while the seat warmer is in operation.
- Do not place heavy or sharp objects on seats equipped with seat warmers. Damage to the seat warming components could occur.

# A WARNING - Seat warmer burns

Passengers should use extreme caution when using seat warmers due to the possibility of excess heating or burns. The occupants must be able to feel if the seat is becoming too warm and to turn the seat warmer off. The seat warmer may cause burns even at low temperatures, especially if used for long periods of time. In particular, the driver must exercise extreme care for the following types of passengers:

- 1. Infants, children, elderly or disabled persons, or hospital outpatients
- 2. Persons with sensitive skin or those that burn easily
- 3. Fatigued individuals
- 4. Intoxicated individuals
- 5. Individuals taking medication that can cause drowsiness or sleepiness (sleeping pills, cold tablets, etc.)



C010109ABH

#### Climate control seat (if equipped)

The climate control seat is provided to cool or warm the front seats during hot or cold weather by blowing air through small vent hole on the surface of the seats and seatbacks. While the engine is running, push the rear portion of the switch to cool the driver's seat or the front passenger's seat (if equipped), and push the front portion of the switch to warm the driver's seat or the front passenger's seat (if equipped).

When the operation of the climate control seat is not needed, keep the switches in the OFF position.

• Each time you push the switch, the airflow is changed as follows:

OFF→HIGH(黨黨黨)→MIDDLE(黨黨)→LOW(黨)

- When pressing the switch for more than 1.5 seconds with the climate control seat operating, the climate control seat will turn OFF.
- The climate control seat defaults to the OFF position whenever the ignition switch is turned on.

تلفن شبائه روزی: ۵۸۰۲۶۸۸۸–۲۲

FarmaSOS.com

#### **A** CAUTION

- The climate control seat is a supplementary cooling/heating system. Use the climate control seat when the climate control system is on. Using the climate control seat for prolonged periods of time with the climate control system off could cause the climate control seat performance to impair.
- When cleaning the seats, do not use an organic solvent such as thinner, benzene, alcohol and gasoline. Doing so may damage the surface of the seats.
- Do not spill liquid such as water or beverages on the surface of the front seats and seatbacks, or the air vent holes may be blocked and prevented from working properly.
- Do not place materials such as plastic bags or newspapers under the seats. The air vent may not work properly as the air intake can be blocked.
- When the air vent does not operate, restart the vehicle. If there is no change, have your vehicle inspected by an authorized HYUNDAI dealer.

## **WARNING**

Passengers should use extreme caution when using the climate control seat to warm due to the possibility of excess heating or burns. The occupants must be able to feel if the seat is becoming too warm and to turn the seat warmer off. In particular, the driver must exercise extreme care for the following types of passengers:

- 1. Infants, children, elderly or disabled persons, or hospital outpatients
- 2. Persons with sensitive skin or those that burn easily
- 3. Fatigued individuals
- 4. Intoxicated individuals
- 5. Individuals taking medication that can cause drowsiness or sleepiness (sleeping pills, cold tablets, etc.)




C010108AUN
Seatback pocket

The seatback pocket is provided on the back of the front passenger's and driver's seatbacks.



Do not put heavy or sharp objects in the seatback pockets. In an accident they could come loose from the pocket and injure vehicle occupants.

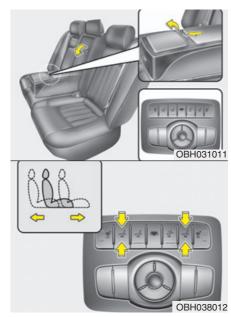

#### Rear seat adjustment

C010301ABH

Forward and backward (if equipped)
Push the front portion of the control switch, then seat cushion moves forward and seathack reclines

Push the rear portion of the control switch, then seat cushion moves backward and seatback returns to upright position.

For easier passenger loading, if the rear seat is in any forward position and the rear door is opened, the seat will automatically move to the rear position. The seat will not move back to the original position when the door is closed and must be repositioned by the passenger if desired.


#### \* NOTICE

Do not continue to push the control switch once the seat is moved to the farthest forward or rear positions. Doing so may damage the related parts.

### **MARNING**

Use extreme caution so that hands or other objects are not caught in the seat mechanisms while the seat is moving.


Do not adjust the seat while wearing seat belts. Moving the seat cushion forward may cause strong pressure on the abdomen.

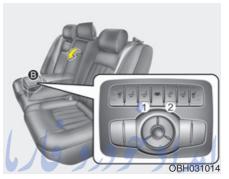

C010305ABH

Additional switches for adjusting the front passenger seat (if equipped)

In some vehicles, additional switches are provided to move front passenger seat forward and backward (1), and adjust the recliner (2) from the rear seats. The switches are located on the rear seat center armrest (B). Do not use these switches while the front passenger seat is occupied.

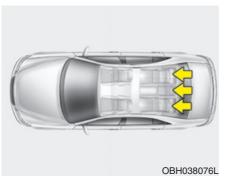

C010303ABH


#### Headrest

The rear seat is equipped with headrests in all the seating positions for the occupant's safety and comfort.

The headrest not only provides comfort for passengers, but also helps to protect the head and neck in the event of a collision.

#### **WARNING**


- For maximum effectiveness in case of an accident, the headrest should be adjusted so the middle of the headrest is at the same height of the center of gravity of an occupant's head. Generally, the center of gravity of most people's head is similar with the height of the top of their eyes. Also adjust the headrest as close to your head as possible. The use of a cushion that holds the body away from the seatback is not recommended.
- Do not operate the vehicle with the headrests removed as severe injury to an occupant may occur in the event of an accident. Headrests may provide protection against severe neck injuries when properly adjusted.

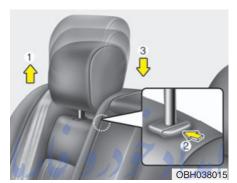

#### Adjusting the height up and down

To raise the headrest, pull it up to the desired position (1). To lower the headrest, push and hold the release button (2) on the headrest support and lower the headrest to the desired position (3).

FarmaSOS.com

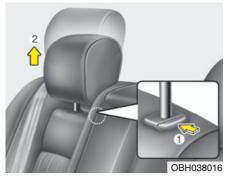

#### Removal

To remove the headrest, raise it as far as it can go then press the release button (1) while pulling upward (2).

# **WARNING**

Do not operate the vehicle with the headrests removed as severe injury to the occupants may occur in the event of an accident. Headrests may provide protection against neck injuries when properly adjusted.




#### Reinstall

To reinstall the headrest, put the headrest poles (1) into the holes while pressing the release button (2). Then adjust it to the appropriate height.



Make sure the headrest locks in position after adjusting it to properly protects the occupants.

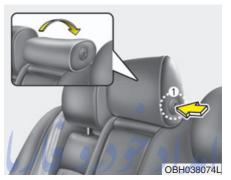

#### Rear center seat headrest

You can fold the rear center seat's headrest by pressing the upper part of the headrest while pushing the button (1). To use the headrest, pull up the upper part of the headrest.

# WARNING OS.COT


Do not operate the vehicle with the headrests folded as severe injury to an occupant may occur in the event of an accident. Headrests may provide protection against severe neck injuries when properly adjusted.



C010304ABH

#### Armrest

To use the armrest, pull the strap (1) forward from the seatback.

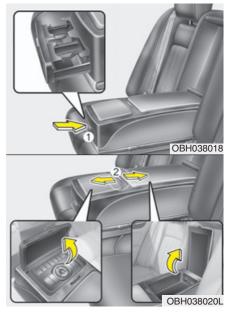

#### Multi box and cup holder

- To use the cup holder push the button (1).
- To use the multi box, push the lever (2) backward. To use the switch for the rear seat passenger's convenience (if equipped), push the lever (2) forward.

Close the cover after use.



Carrying long/narrow cargo (if equipped)
Pull the armrest down using the strap
provided on the armrest. Pull the cover
down while pushing the release lever
down. Additional cargo space is provided
to accommodate long/narrow cargo
(skis, poles, lumber, etc.) not able to fit
properly in the trunk when closed.


#### **A** CAUTION

- Make sure the engine is off, the shift lever is in P and the parking brake is applied whenever loading or unloading cargo. The Vehicle may move if the shift lever is inadvertently moved to another position.
- Be careful when loading cargo through the rear passenger seats to prevent damage to the vehicle interior.
- When cargo is loaded through the rear passenger seats, ensure the cargo is properly secured to prevent it from moving while driving. Unsecured cargo in the passenger compartment can cause damage to the vehicle or injury to it's occupants.

# **A WARNING - Cargo**

Cargo should always be secured to prevent it from being thrown about the vehicle in a collision and causing injury to the vehicle occupants. Do not place objects in the rear seats, since they cannot be properly secured and may hit the front seat occupants in a collision.

WARNING - Cargo loading Make sure the engine is off, the shift lever is in P (Park) and the parking brake is securely applied whenever loading or unloading cargo. Failure to take these steps may allow the vehicle to move if the shift lever is inadvertently moved to another position.

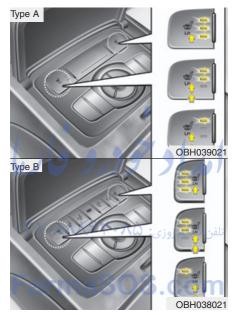

C010306ABH

#### Seat warmer (if equipped)

The seat warmer is provided to warm the rear seats during cold weather. While the engine is running, push the switch to warm the rear seat. During mild weather or under conditions where the operation of the seat warmer is not needed, keep the switches in the OFF position.

 Each time you push the switch, the temperature setting of the seat is changed as follows:

OFF→HIGH( 黨黨 黨)→MIDDLE( 黨黨)→LOW(黨)

↑

- When pressing the switch for more than 1.5 seconds with the seat warmer operating, the seat warmer will turn OFF.
- The seat warmer defaults to the OFF position whenever the ignition switch is turned on.

#### \* NOTICE

With the seat warmer switch in the ON position, the heating system in the seat turns off or on automatically depending on the seat temperature.

#### **A** CAUTION

- When cleaning the seats, do not use an organic solvent such as thinner, benzene, alcohol and gasoline. Doing so may damage the surface of the heater or seats.
- To prevent overheating the seat warmer, do not place anything on the seats that insulates against heat, such as blankets, cushions or seat covers while the seat warmer is in operation.
- Do not place heavy or sharp objects on seats equipped with seat warmers. Damage to the seat warming components could occur.

# A WARNING - Seat warmer burns

Passengers should use extreme caution when using seat warmers due to the possibility of excess heating or burns. The occupants must be able to feel if the seat is becoming too warm and to turn the seat warmer off. The seat warmer may cause burns even at low temperatures, especially if used for long periods of time. In particular, the driver must exercise extreme care for the following types of passengers:

- Infants, children, elderly or disabled persons, or hospital outpatients
- 2. Persons with sensitive skin or those that burn easily
- 3. Fatiqued individuals
- 4. Intoxicated individuals
- 5. Individuals taking medication that can cause drowsiness or sleepiness (sleeping pills, cold tablets, etc.)

#### **SEAT BELTS**

C020100AUN

#### Seat belt restraint system

## **A WARNING**

- For maximum restraint system protection, the seat belts must always be used whenever the car is moving.
- Seat belts are most effective when seatbacks are in the upright position.
- Children age 12 and under must always be properly restrained in the rear seat. Never allow children to ride in the front passenger seat. If a child over 12 must be seated in the front seat, he/she must be properly belted and the seat should be moved as far back as possible.
- Never wear the shoulder belt under your arm or behind your back. An improperly positioned shoulder belt can cause serious injuries in a crash. The shoulder belt should be positioned midway over your shoulder across your collarbone.

(Continued)

#### (Continued)

- Avoid wearing twisted seat belts.
   A twisted belt can't do its job as well. In a collision, it could even cut into you. Be sure the belt webbing is straight and not twisted.
- Be careful not to damage the belt webbing or hardware. If the belt webbing or hardware is damaged, replace it.

The third (وزی:  $\Delta \Lambda + \gamma \Lambda \Lambda \Lambda \Lambda - \gamma \Lambda \Lambda \Lambda$ ) Third third (eq. (2))

FarmaSOS.com

## **WARNING**

Seat belts are designed to bear upon the bony structure of the body, and should be worn low across the front of the pelvis or the pelvis, chest and shoulders, as applicable; wearing the lap section of the belt across the abdominal area must be avoided.

Seat belts should be adjusted as firmly as possible, consistent with comfort, to provide the protection for which they have been designed. A slack belt will greatly reduce the protection afforded to the wearer.

Care should be taken to avoid contamination of the webbing with polishes, oils and chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water. The belt should be replaced if webbing becomes frayed, contaminated or damaged.

It is essential to replace the entire assembly after it has been worn in a severe impact even if damage to the assembly is not obvious. Belts should not be worn with straps twisted.

(Continued)

#### (Continued)

Each belt assembly must only be used by one occupant; it is dangerous to put a belt around a child being carried on the occupant's lap.

#### **WARNING**

- No modifications or additions should be made by the user which will either prevent the seat belt adjusting devices from operating to remove slack, or prevent the seat belt assembly from being adjusted to remove slack.
- When you fasten the seat belt, be careful not to latch the seat belt in buckles of other seat. It's very dangerous and you may not be protected by the seat belt properly.
- Do not unfasten the seat belt and do not fasten and unfasten the seat belt repeatedly while driving. This could result in loss of control, and an accident causing death, serious injury, or property damage.
- · When fastening the seat belt, make sure that the seat belt does not pass over objects that are hard or can break easily.
- Make sure there is nothing in the buckle. The seat belt may not be fastened securely.




C020101ABH-EE

#### Seat belt warning

As a reminder to the driver, the seat belt warning light will blink for approximately 6 seconds each time you turn the ignition switch ON regardless of belt fastening.

If the driver's seat belt is unfastened after the ignition switch is ON, the seat belt warning light blinks again for approximately 6 seconds.

If the driver's seat belt is not fastened when the ignition switch is turned to ON or if it is unfastened after the ignition switch is ON, the seat belt warning chime will sound for approximately 6 seconds. At this time, if the seat belt is fastened. the chime will stop at once.

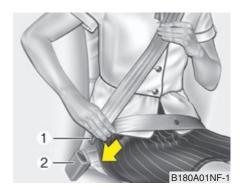

#### C020102ABH

# Lap/shoulder belt

#### To fasten your seat belt:

To fasten your seat belt, pull it out of the retractor and insert the metal tab (1) into the buckle (2). There will be an audible "click" when the tab locks into the buckle. The seat belt automatically adjusts to the proper length only after the lap belt portion is adjusted manually so that it fits snugly around your hips. If you lean forward in a slow, easy motion, the belt will extend and let you move around. If there is a sudden stop or impact, however, the belt will lock into position. It will also lock if you try to lean forward too quickly.


#### \* NOTICE

If you are not able to pull out the seat belt from the retractor, firmly pull the belt out and release it. Then you will be able to pull the belt out smoothly.





FarmaSOS.com

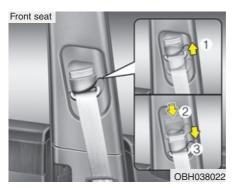

#### Height adjustment (front seat)

You can adjust the height of the shoulder belt anchor to one of 4 positions for maximum comfort and safety.

The height of the adjusting seat belt should not be too near your neck. The shoulder portion should be adjusted so that it lies across your chest and midway over your shoulder nearest the door and not your neck.

To adjust the height of the seat belt anchor, lower or raise the height adjuster into an appropriate position.

To raise the height adjuster, pull it up (1). To lower it, push it down (3) while pressing the height adjuster button (2).

Release the button to lock the anchor into position. Try sliding the height adjuster to make sure that it has locked into position.

#### **WARNING**


- Verify the shoulder belt anchor is locked into position at the appropriate height. Never position the shoulder belt across your neck or face. Improperly positioned seat belts can cause serious injuries in an accident.
- Failure to replace seat belts after an accident could leave you with damaged seat belts that will not provide protection in the event of another collision leading to personal injury or death. Replace your seat belts after being in an accident as soon as possible.




## **WARNING**

You should place the lap belt portion as low as possible and snugly across your hips, not on your waist. If the lap belt is located too high on your waist, it may increase the chance of injury in the event of a collision. Both arms should not be under or over the belt. Rather, one should be over and the other under. as shown in the illustration.

Never wear the seat belt under the arm nearest the door.

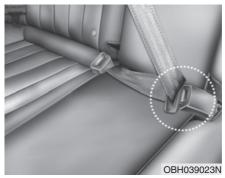

When using the rear center seat belt, the buckle with the "CENTER" mark must be used. (if equipped)

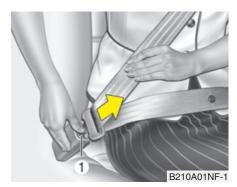

#### To release the seat belt:

The seat belt is released by pressing the release button (1) in the locking buckle. When it is released, the belt should automatically draw back into the retractor. If this does not happen, check the belt to be sure it is not twisted, then try again.




C020103AUN

# Lap belt (if equipped)

## To fasten your seat belt:

To fasten a 2-point static type belt, insert the metal tab (1) into the locking buckle (2). There will be an audible "click" when the tab locks into the buckle. Check to make sure the belt is properly locked and that the belt is not twisted.

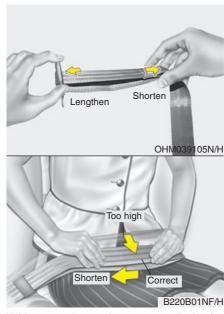

With a 2-point static type seat belt, the length must be adjusted manually so it fits snugly around your body. Fasten the belt and pull on the loose end to tighten. The belt should be placed as low as possible on your hips, not on your waist. If the belt is too high, it could increase the possibility of your being injured in an accident.



When using the rear center seat belt, the buckle with the "CENTER" mark must be used.



To release the seat belt:

When you want to release the seat belt, press the button (1) in the locking buckle.

# **WARNING**

The center lap belt latching mechanism is different from those for the rear seat shoulder belts. When fastening the rear seat shoulder belts or the center lap belt, make sure they are inserted into the correct buckles to obtain maximum protection from the seat belt system and assure proper operation.



C020200BBH

# Pre-tensioner seat belt (if equipped)


Your vehicle is equipped with driver's and front passenger's pre-tensioner seat belts. The purpose of the pre-tensioner is to make sure that the seat belts fit tightly against the occupant's body in certain frontal collisions. The pre-tensioner seat belts may be activated in crashes where the frontal collision is severe enough.

# **WARNING**

For your safety, be sure that the belt webbing is not loose or twisted and always sit properly on your seat.

When the vehicle stops suddenly, or if the occupant tries to lean forward too quickly, the seat belt retractor will lock into position. In certain frontal collisions, the pre-tensioner will activate and pull the seat belt into tighter contact against the occupant's body.

If the system senses excessive tension on the driver or passenger's seat belt when the pre-tensioner activates, the load limiter inside the pre-tensioner will release some of the pressure on the affected seat belt. (if equipped)

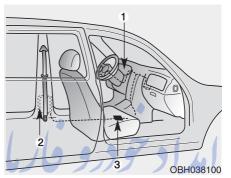

The seat belt pre-tensioner system consists mainly of the following components. Their locations are shown in the illustra-تلفن شبانه روزي: ۱. SRS air bag warning light

- 2. Retractor pre-tensioner assembly
- 3 SBS control module

FarmaSOS.com

# **WARNING**

To obtain maximum benefit from a pre-tensioner seat belt:

- 1. The seat belt must be worn correctly and adjusted to the proper position. Please read and follow all of the important information and precautions about your vehicle's occupant safety features including seat belts and air bags - that are provided in this manual.
- 2. Be sure you and your passengers always wear seat belts properly.

#### \* NOTICE

- Both the driver's and front passenger's pre-tensioner seat belts may be activated in certain frontal collisions.
- When the pre-tensioner seat belts are activated, a loud noise may be heard and fine dust, which may appear to be smoke, may be visible in the passenger compartment. These are normal operating conditions and are not hazardous.
- Although it is harmless, the fine dust may cause skin irritation and should not be breathed for prolonged periods. Wash all exposed skin areas thoroughly after an accident in which the pre-tensioner seat belts were activated.

## \* NOTICE

The sensor that activates the SRS air bag is connected with the pre-tensioner seat belt, and the SRS air bag warning light on the instrument panel will illuminate for approximately 6 seconds after the ignition switch has been turned to the ON position, and then it should turn off.

# **!** CAUTION

If the pre-tensioner seat belt is not working properly, this warning light will illuminate even if there is no malfunction of the SRS air bag. If the SRS air bag warning light does not illuminate when the ignition switch is turned to ON, or if it remains illuminated after illuminating for approximately 6 seconds, or if it illuminates while the vehicle is being driven, have an authorized HYUNDAI dealer inspect the pretensioner seat belt and SRS air bag system as soon as possible.

# **WARNING**

- Pre-tensioners are designed to operate only one time. After activation, pre-tensioner seat belts must be replaced. All seat belts, of any type, should always be replaced after they have been worn during a collision.
- The pre-tensioner seat belt assembly mechanisms become hot during activation. Do not touch the pre-tensioner seat belt assemblies for several minutes after they have been activated.
- Do not attempt to inspect or replace the pre-tensioner seat belts yourself. This must be done by an authorized HYUNDAI dealer.
- Do not strike the pre-tensioner seat belt assemblies.
- Do not attempt to service or repair the pre-tensioner seat belt system in any manner.

(Continued)

#### (Continued)

- Improper handling of the pre-tensioner seat belt assemblies, and failure to heed the warnings not to strike, modify, inspect, replace, service or repair the pre-tensioner seat belt assemblies may lead to improper operation or inadvertent activation and serious injury.
- Always wear the seat belts when driving or riding in a motor vehicle.
- If the vehicle or pre-tensioner seat belt must be discarded, contact an authorized HYUNDAI dealer.

C020300AUN

## Seat belt precautions



#### **WARNING**

All occupants of the vehicle must wear their seat belts at all times. Seat belts and child restraints reduce the risk of serious or fatal injuries for all occupants in the event of a collision or sudden stop. Without a seat belt, occupants could be shifted too close to a deploying air bag, strike the interior structure or be thrown from the vehicle. Properly worn seat belts greatly reduce these hazards.

Always follow the precautions about seat belts, air bags and occupant seating contained in this manual. LarmaSOS com C020306AUN

Infant or small child

You should be aware of the specific requirements in your country. Child and/or infant seats must be properly placed and installed in the rear seat. For more information about the use of these restraints, refer to "Child restraint system" in this section.



#### **WARNING**

**Every person in your vehicle needs** to be properly restrained at all times, including infants and children. Never hold a child in your arms or lap when riding in a vehicle. The violent forces created during a crash will tear the child from your arms and throw the child against the interior. Always use a child restraint appropriate for your child's height and weight.

## \* NOTICE

Small children are best protected from injury in an accident when properly restrained in the rear seat by a child restraint system that meets the requirements of the Safety Standards of your country. Before buying any child restraint system, make sure that it has a label certifying that it meets Safety Standards of your country. The restraint must be appropriate for your child's height and weight. Check the label on the child restraint for this information. Refer to "Child restraint system" in this section.

#### C020301AUN

#### Larger children

Children who are too large for child restraint systems should always occupy the rear seat and use the available lap/shoulder belts. The lap portion should be fastened snug on the hips and as low as possible. Check belt fit periodically. A child's squirming could put the belt out of position. Children are afforded the most safety in the event of an accident when they are restrained by a proper restraint system in the rear seat. If a larger child (over age 12) must be seated in the front seat, the child should be securely restrained by the available lap/shoulder belt and the seat should be placed in the rearmost position. Children age 12 and under should be restrained securely in the rear seat. NEVER place a child age 12 and under in the front seat, NEVER place a rear facing child seat in the front seat of a vehicle.

If the shoulder belt portion slightly touches the child's neck or face, try placing the child closer to the center of the vehicle. If the shoulder belt still touches their face or neck they need to be returned to a child restraint system.

# WARNING - Shoulder belts on small children

- Never allow a shoulder belt to be in contact with a child's neck or face while the vehicle is in motion.
- If seat belts are not properly worn and adjusted on children, there is a risk of death or serious injury.

#### C020302AKM

### Restraint of pregnant women

Pregnant women should wear lap/shoulder belt assemblies whenever possible according to specific recommendations by their doctors. The lap portion of the belt should be worn AS SNUGLY AND LOW AS POSSIBLE on the hips, not a cross the abdomen.

# WARNING - Pregnant women

Pregnant women must never place the lap portion of the safety belt over the area of the abdomen where the fetus is located or above the abdomen where the belt could crush the fetus during an impact.

#### C020303AUN

#### Injured person

A seat belt should be used when an injured person is being transported. When this is necessary, you should consult a physician for recommendations.

#### C020304AUN

## One person per belt

Two people (including children) should never attempt to use a single seat belt. This could increase the severity of injuries in case of an accident.

#### C020305ABH

# Do not lie down

To reduce the chance of injuries in the event of an accident and to achieve maximum effectiveness of the restraint system, all passengers should be sitting up and the front and rear seats should be in an upright position when the car is moving. A seat belt cannot provide proper protection if the person is lying down in the rear seat or if the front and rear seats are in a reclined position.

# **WARNING**

Riding with a reclined seatback increases your chance of serious or fatal injuries in the event of a collision or sudden stop. The protection of your restraint system (seat belts and air bags) is greatly reduced by reclining your seat. Seat belts must be snug against your hips and chest to work properly. The more the seatback is reclined, the greater the chance that an occupant's hips will slide under the lap belt causing serious internal injuries or the occupant's neck could strike the shoulder belt. Drivers and passengers should always sit well back in their seats. properly belted, and with the seatbacks upright.

#### C020400ABH

#### Care of seat belts

Seat belt systems should never be disassembled or modified. In addition, care should be taken to assure that seat belts and belt hardware are not damaged by seat hinges, doors or other abuse.

#### C020401AFN

## Periodic inspection

All seat belts should be inspected periodically for wear or damage of any kind. Any damaged parts should be replaced as soon as possible.

#### C020402AUN

## Keep belts clean and dry

Seat belts should be kept clean and dry. If belts become dirty, they can be cleaned by using a mild soap solution and warm water. Bleach, dye, strong detergents or abrasives should not be used because they may damage and weaken the fabric.

#### C020403AEN

#### When to replace seat belts

Entire in-use seat belt assembly or assemblies should be replaced if the vehicle has been involved in an accident. This should be done even if no damage is visible. Additional questions concerning seat belt operation should be directed to an authorized HYUNDAI dealer.



تلفن شبانه روزی: ۱-۸۸۸۶۲۰۸۵ تلفن شبانه روزی:

FarmaSOS.com

#### **CHILD RESTRAINT SYSTEM**

C030000AFN

Children riding in the car should sit in the rear seat and must always be properly restrained to minimize the risk of injury in an accident, sudden stop or sudden maneuver. According to accident statistics, children are safer when properly restrained in the rear seats than in the front seat. Larger children not in a child restraint should use one of the seat belts provided. You should be aware of the specific requirements in your country. Child and/or infant safety seats must be properly placed and installed in the rear seat. You must use a commercially available child restraint system that meets the requirements of the Safety Standards of your country.

Child restraint systems are designed to be secured in vehicle seats by lap belts or the lap belt portion of a lap/shoulder belt, or by a tether anchor and/or ISOFIX anchors (if equipped).

Children could be injured or killed in a crash if their restraints are not properly secured. For small children and babies, a child seat or infant seat must be used. Before buying a particular child restraint system, make sure it fits your car seat and seat belts, and fits your child. Follow all the instructions provided by the manufacturer when installing the child restraint system.

# **WARNING**

- A child restraint system must be placed in the rear seat. Never install a child or infant seat on the front passenger's seat. Should an accident occur and cause the passenger-side air bag to deploy, it could severely injure or kill an infant or child seated in an infant or child seat. Thus only use a child restraint in the rear seat of your vehicle.
- A seat belt or child restraint system can become very hot if it is left in a closed vehicle on a sunny day, even if the outside temperature does not feel hot. Be sure to check the seat cover and buckles before placing a child there.
- When the child restraint system is not in use, store it in the luggage area or fasten it with a seat belt so that it will not be thrown forward in the case of a sudden stop or an accident.
- Children may be seriously injured or killed by an inflating air bag.
   All children, even those too large for child restraints, must ride in the rear seat.

# **WARNING**

To reduce the chance of serious or fatal injuries:

- Children of all ages are safer when restrained in the rear seat.
   A child riding in the front passenger seat can be forcefully struck by an inflating air bag resulting in serious or fatal injuries.
- Always follow the child restraint system manufacturer's instructions for installation and use of the child restraint.
- Always make sure the child seat is secured properly in the car and your child is securely restrained in the child seat.
- Never hold a child in your arms or lap when riding in a vehicle. The violent forces created during a crash will tear the child from your arms and throw the child against the car's interior.
- Never put a seat belt over yourself and a child. During a crash, the belt could press deep into the child causing serious internal injuries.

(Continued)

#### (Continued)

- Never leave children unattended in a vehicle – not even for a short time. The car can heat up very quickly, resulting in serious injuries to children inside. Even very young children may inadvertently cause the vehicle to move, entangle themselves in the windows, or lock themselves or others inside the vehicle.
- Never allow two children, or any two persons, to use the same seat belt.
- Children often squirm and reposition themselves improperly.
   Never let a child ride with the shoulder belt under their arm or behind their back. Always properly position and secure children in the rear seat.
- Never allow a child to stand-up or kneel on the seat or floor of a moving vehicle. During a collision or sudden stop, the child can be violently thrown against the vehicle's interior, resulting in serious injury.


(Continued)

### (Continued)

- Never use an infant carrier or a child safety seat that "hooks" over a seatback, it may not provide adequate security in an accident.
- Seat belts can become very hot, especially when the car is parked in direct sunlight. Always check seat belt buckles before fastening them over a child.
- After an accident, have an authorized HYUNDAI dealer check the child restraint system, seat belt, tether anchor and lower anchor.
- If there is not enough space to place the child restraint system because of the driver's seat, install the child restraint system in the rear right seat.

# **MARNING**

Do not operate the rear power seat (if equipped) while the child seat is installed.

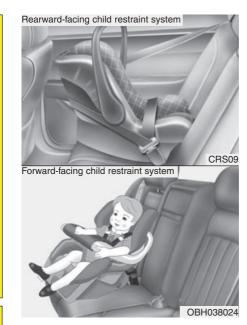

C030100AEN

## Using a child restraint system

For small children and babies, the use of a child seat or infant seat is required. This child seat or infant seat should be of appropriate size for the child and should be installed in accordance with the manufacturer's instructions.

For safety reasons, we recommend that the child restraint system be used in the rear seats.



#### **WARNING**

Never place a rear-facing child restraint in the front passenger seat, because of the danger that an inflating passenger-side air bag could impact the rear-facing child restraint and kill the child.

# A WARNING - Child seat installation

- A child can be seriously injured or killed in a collision if the child restraint is not properly anchored to the car and the child is not properly restrained in the child restraint. Before installing the child restraint system, read the instructions supplied by the child restraint system manufacturer.
- If the seat belt does not operate as described in this section, have the system checked immediately by your authorized HYUNDAI dealer.
- Failure to observe this manual's instructions regarding child restraint systems and the instructions provided with the child restraint system could increase the chance and/or severity of injury in an accident.




C030101AUN

Installing a child restraint system by lap belt (on the center rear seat) (if equipped)

To install a child restraint system on the center rear seats, do the following:


- 1. Place the child restraint system on the center rear seat.
- 2. Extend the latch plate tongue of the lap belt.
- 3. Route the lap belt through the restraint according to the seat manufacturer's instructions.
- 4. Buckle the seat belt and adjust the lap belt for a snug hold on the child restraint by pulling on the loose end of the belt. After installation of the child restraint system, try to move it in all directions to be sure the child restraint system is securely installed.

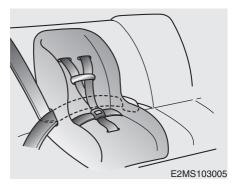

C030102AUN Installing a child restraint system by lap/shoulder belt

To install a child restraint system on the outboard or center rear seats, do the following:

1. Place the child restraint system in the seat and route the lap/shoulder belt around or through the restraint, following the restraint manufacturer's instructions. Be sure the seat belt webbing is not twisted.

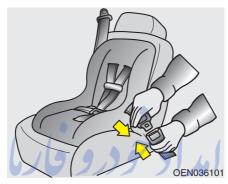

2. Fasten the lap/shoulder belt latch into the buckle. Listen for the distinct "click" sound.

Position the release button so that it is easy to access in case of an emergency.

FarmaSOS.com



3. Buckle the seat belt and allow the seat belt to take up any slack. After installation of the child restraint system, try to move it in all directions to be sure the child restraint system is securely installed.

If you need to tighten the belt, pull more webbing toward the retractor. When you unbuckle the seat belt and allow it to retract, the retractor will automatically revert back to its normal seated passenger emergency locking usage condition.

# Child seat restraint suitability for seat position using the seat belt - For Europe

Use child safety seats that have been officially approved and are appropriate for your children. When using the child safety seats, refer to the following table.

	Seating position				
Age group	Front passenger	Rear outboard	Rear center		
0 : Up to 10 kg (0 - 9 months)	х	U	V /		
0+ : Up to 13 kg (0 - 2 years)	x	9 2017	العلى ال		
I : 9 kg to 18 kg (9 months - 4 years)	Х	U	U		
II & III : 15 kg to 36 kg (4 - 12 years)	x + 7 ) -	-	تلفن شبا⊌ روزی: ﴿		

U : Suitable for "universal" category restraints approved for use in this mass group

X : Seat position not suitable for children in this mass group



C030103ABH

Securing a child restraint seat with "Tether Anchor" system (if equipped)

Child restraint hook holders are located on the package tray.



1. Route the child restraint seat strap over the seatback.

For vehicles with adjustable headrest, route the tether strap under the headrest and between the headrest posts, otherwise route the tether strap over the top of the seatback.

2. Connect the tether strap hook to the appropriate child restraint hook holder and tighten to secure the seat.

# **WARNING**

A child can be seriously injured or killed in a collision if the child restraint is not properly anchored to the car and the child is not properly restrained in the child restraint. Always follow the child seat manufacturer's instructions for installation and use.

# A WARNING - Tether strap


Never mount more than one child restraint to a single tether or to a single lower anchorage point. The increased load caused by multiple seats may cause the tethers or anchorage points to break, causing serious injury or death.

# A WARNING - Child restraint check

Check that the child restraint system is secure by pushing and pulling it in different directions. Incorrectly fitted child restraints may swing, twist, tip or separate causing death or serious injury.

# **WARNING**


- Child restraint anchorage
- Child restraint anchorages are designed to withstand only those loads imposed by correctly fitted child restraints. Under no circumstances are they to be used for adult seat belts or harnesses or for attaching other items or equipment to the vehicle.
- The tether strap may not work properly if attached somewhere other than the correct tether anchor.

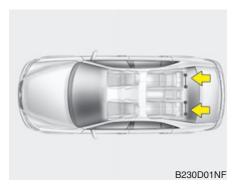

Securing a child restraint system with "ISOFIX" system and "Tether Anchorage" system (if equipped)

ISOFIX is a standardised method of fitting child seats that eliminates the need to use the standard adult seat belt to secure the seat in the vehicle. This enables a much more secure and positive location with the added benefit of easier and guicker installation.

An ISOFIX-seat can only be installed if it has vehicle-specific approval in accordance with the requirements of ECE-R44.

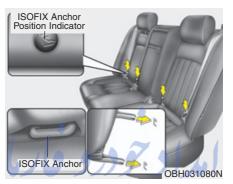

There is a child restraint symbol located on the lower portion of each side of the rear seatbacks. These symbols indicate the position of the lower anchors for child restraints so equipped.

On each side of the rear seat, between the cushion and backrest, are located a pair of ISOFIX anchorage points together with a top tether mounting on the shelf behind the rear seats. During the installation, the seat has to be engaged at the anchorage-points in a way you can hear it clicking (check by pulling!) and has to be fixed with the Top Tether-belt on the belonging point on the shelf behind rear seats.

The installing and the use of a child-seat has to be done according to the installing-manual, which is added to the ISOFIX-seat.

# **WARNING**

Install the child restraint seat fully rearward against the seatback with the seatback in a vertical position, not reclined.

# **WARNING**

- When using the vehicle's "ISOFIX" system to install a child restraint system in the rear seat. all unused vehicle rear seat helt metal latch plates or tabs must be latched securely in their seat belt buckles and the seat belt webbing must be retracted behind the child restraint to prevent the child from reaching and taking hold of unretracted seat belts. Unlatched metal latch plates or tabs may allow the child to reach the unretracted seat belts which may result in strangulation and a serious injury or death to the child in the child restraint.
- Do not place anything around the ISOFIX anchors. Also make sure that the seat belt is not caught in the ISOFIX anchors.

#### To secure the child restraint seat

 To engage the child restraint seat to the ISOFIX anchor, insert the child restraint seat latch into the ISOFIX anchor. Listen for the audible "click" sound.

# **A** CAUTION

Do not allow the rear seat belt webbing to get scratched or pinched by the ISOFIX-seat latch and ISOFIX anchor during the installation.

 Connect the tether strap hook to the child restraint hook holder and tighten to secure the seat. (Refer to the previous page.)

FarmaSOS.com

# **WARNING**

 Do not install a child restraint seat at the center of the rear seat using the vehicle's ISOFIX anchors. The ISOFIX anchors are only provided for the left and right outboard rear seating positions. Do not misuse the ISOFIX anchors by attempting to attach a child restraint seat in the middle of the rear seat to the ISOFIX anchors.

In a crash, the child restraint seat ISOFIX attachments may not be strong enough to secure the child restraint seat properly in the center of the rear seat and may break, causing serious injury or death.

(Continued)

#### (Continued)

- Do not mount more than one child restraint to a child restraint lower anchorage point. The improper increased load may cause the anchorage points or tether anchor to break, causing serious injury or death.
- Attach the ISOFIX or ISOFIX-compatible child restraint seat only to the appropriate locations shown in the illustration.
- Always follow the installation and use instructions provided by the manufacturer of the child restraint.




FarmaSOS.com

## Child seat restraint suitability for vehicle ISOFIX positions- For Europe

Mass Group	Size Class	Fixture	Vehicle ISOFIX positions			
			Front Passenger	Rear Outboard (Driver side)	Rear Outboard (Passenger side)	Rear Center
Carrycot -	F	ISO/L1	-	Х	X	-
	G	ISO/L2	-	X	X	-
0 : UP to 10kg	E	ISO/R1	-	IUF	IUF	-
0+ : UP to 13kg	E	ISO/R1	4 4 27	IUF	IUF	-
	D	ISO/R2	フルフ	IUF	IUF	-
	С	ISO/R3	-	IUF	IUF	-
I : 9 to 18kg	D	ISO/R2	-	IUF	IUF	-
	С	ISO/R3	1184.74	IUF	IUF	-
	В	ISO/F2	-	iUF	IUF	-
	B1	ISO/F2X	-	IUF	IUF	-
	Α	ISO/F3	naSOS.	Conluf	IUF	-

IUF = Suitable for ISOFIX forward child restraints systems of universal category approved for use in the mass group. X = ISOFIX position not suitable for ISOFIX child restraint system in this mass group and/or this size class.

## **AIR BAG - SUPPLEMENTAL RESTRAINT SYSTEM**

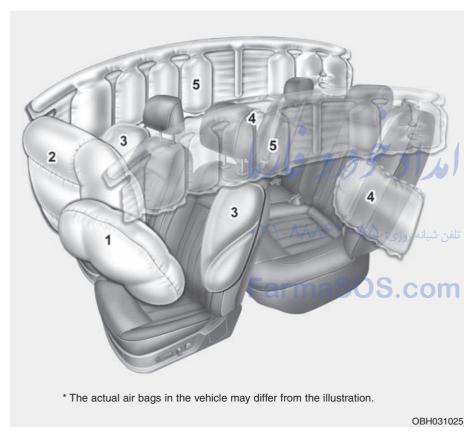

#### C040000ABH

- (1) Driver's front air bag
- (2) Passenger's front air bag
- (3) Side impact air bag (front)
- (4) Side impact air bag (rear)\*
- (5) Curtain air bag\*
- \*: if equipped

# **A** WARNING

Even in vehicles with air bags, you and your passengers must always wear the safety belts provided in order to minimize the risk and severity of injury in the event of a collision or rolloyer.

#### C040900AEN

# How does the air bag system operate

- Air bags are activated (able to inflate if necessary) only when the ignition switch is turned to the ON or START position.
- Air bags inflate instantly in the event of a serious frontal or side collision (if equipped with side air bag or curtain air bag) in order to help protect the occupants from serious physical injury.
- There is no single speed at which the air bags will inflate.
  - Generally, air bags are designed to inflate based upon the severity of a collision and its direction. These two factors determine whether the sensors produce an electronic deployment/inflation signal.
- Air bag deployment depends on a number of factors including vehicle speed, angles of impact and the density and stiffness of the vehicles or objects which your vehicle hits in the collision. The determining factors are not limited to those mentioned above.
- The front air bags will completely inflate and deflate in an instant.
  - It is virtually impossible for you to see the air bags inflate during an accident.

- It is much more likely that you will simply see the deflated air bags hanging out of their storage compartments after the collision.
- In order to help provide protection in a severe collision, the air bags must inflate rapidly. The speed of air bag inflation is a consequence of the extremely short time in which a collision occurs and the need to inflate the air bag between the occupant and the vehicle structures before the occupant impacts those structures. This speed of inflation reduces the risk of serious or life-threatening injuries in a severe collision and is thus a necessary part of air bag design.
- However, air bag inflation can also cause injuries which can include facial abrasions, bruises and broken bones because the inflation speed also causes the air bags to expand with a great deal of force.
- There are even circumstances under which contact with the steering wheel air bag can cause fatal injuries, especially if the occupant is positioned excessively close to the steering wheel.

# **WARNING**

- To avoid severe personal injury or death caused by deploying air bags in a collision, the driver should sit as far back from the steering wheel air bag as possible (at least 250 mm (10 inches) away). The front passengers should always move their seats as far back as possible and sit back in their seat.
- Air bags inflate instantly in the event of collision, and passengers may be injured by the air bag expansion force if they are not in proper position.
- Air bag inflation may cause injuries including facial or bodily abrasions, injuries from broken glasses or burns.

#### C040902AEN

#### Noise and smoke

When the air bags inflate, they make a loud noise and they leave smoke and powder in the air inside of the vehicle. This is normal and is a result of the ignition of the air bag inflator. After the air bag inflates, you may feel substantial discomfort in breathing due to the contact of your chest with both the seat belt and the air bag, as well as from breathing the smoke and powder. Open your doors and/or windows as soon as possible after impact in order to reduce discomfort and prevent prolonged exposure to the smoke and powder.

Though the smoke and powder are nontoxic, they may cause irritation to the skin (eyes, nose and throat, etc). If this is the case, wash and rinse with cold water immediately and consult a doctor if the symptom persists.

# **WARNING**

When the air bags deploy, the air bag related parts in the steering wheel and/or instrument panel and/or in both sides of the roof rails above the front and rear doors are very hot. To prevent injury, do not touch the air bag storage area's internal components immediately after an air bag has inflated.



C040903AEN

Do not install a child restraint on the front passenger's seat.

Never place a rear-facing child restraint in the front passenger's seat. If the air bag deploys, it would impact the rear-facing child restraint, causing serious or fatal injury.

In addition, do not place front-facing child restraints in the front passenger's seat either. If the front passenger air bag inflates, it could cause serious or fatal injuries to the child.

## **WARNING**

- Extreme Hazard! Do not use a rearward facing child restraint on a seat protected by an air bag in front of it!
- Never put a child restraint in the front passenger's seat. If the front passenger air bag inflates, it can cause serious or fatal injuries.
- When children are seated in the rear outboard seats of a vehicle equipped with side and/or curtain air bags, be sure to install the child restraint system as far away from the door side as possible, and securely lock the child restraint system in position.

Inflation of side and/or curtain air bags could cause serious injury or death to an infant or child.




C041000AEN

#### Air bag warning light

The purpose of the air bag warning light in your instrument panel is to alert you of a potential problem with your air bag - Supplemental Restraint System (SRS). When the ignition switch is turned ON, the warning light should illuminate for approximately 6 seconds, then go off. Have the system checked if:

- The light does not turn on briefly when you turn the ignition ON.
- The light stays on after illuminating for approximately 6 seconds.
- The light comes on while the vehicle is in motion.

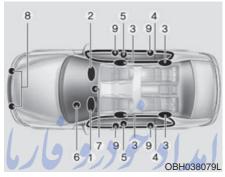

C040100AEN

## SRS components and functions

The SRS consists of the following components:

- 1. Driver's front air bag module
- 2. Passenger's front air bag module\*
- 3. Side impact air bag modules\*
- 4. Curtain air bag modules\*
- 5. Retractor pre-tensioner assemblies\*
- 6. Air bag warning light
- 7. SRS control module (SRSCM)
- 8. Front impact sensors
- Side impact sensors\*
- \*: if equipped

The SRSCM continually monitors all SRS components while the ignition switch is ON to determine if a crash impact is severe enough to require air bag deployment or pre-tensioner seat belt deployment.

The SRS air bag warning light "\*" on the instrument panel will illuminate for about 6 seconds after the ignition switch is turned to the ON position, after which the SRS air bag warning light "\*" should go out.

# **WARNING**

If any of the following conditions occurs, this indicates a malfunction of the SRS. Have an authorized HYUNDAI dealer inspect the air bag system as soon as possible.

- The light does not turn on briefly when you turn the ignition ON.
- The light stays on after illuminating for approximately 6 seconds.
- The light comes on while the vehicle is in motion.




The front air bag modules are located both in the center of the steering wheel and in the front passenger's panel above the glove box. When the SRSCM detects a sufficiently severe impact to the front of the vehicle, it will automatically deploy the front air bags.



Upon deployment, tear seams molded directly into the pad covers will separate under pressure from the expansion of the air bags. Further opening of the covers then allows full inflation of the air bags.

FarmaSOS.com

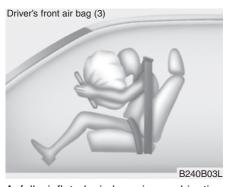

A fully inflated air bag, in combination with a properly worn seat belt, slows the driver's or the passenger's forward motion, reducing the risk of head and chest injury.

After complete inflation, the air bag immediately starts deflating, enabling the driver to maintain forward visibility and the ability to steer or operate other controls.



# **WARNING**

- Do not install or place any accessories (drink holder, cassette holder, sticker, etc.) on the front passenger's panel above the glove box in a vehicle with a passenger's air bag. Such objects may become dangerous projectiles and cause injury if the passenger's air bag inflates.
- When installing a container of liquid air freshener inside the vehicle, do not place it near the instrument cluster nor on the instrument panel surface.

It may become a dangerous projectile and cause injury if the passenger's air bag inflates.

# **WARNING**

- If an air bag deploys, there may be a loud noise followed by a fine dust released in the vehicle. These conditions are normal and are not hazardous - the air bags are packed in this fine powder. The dust generated during air bag deployment may cause skin or eye irritation as well as aggravate asthma for some persons. Always wash all exposed skin areas thoroughly with lukewarm water and a mild soap after an accident in which the air bags were deployed.
- The SRS can function only when the ignition switch is in the ON position. If the SRS " " warning light does not illuminate, or continuously remains on after illuminating for about 6 seconds when the ignition switch is turned to the ON position, or after the engine is started, comes on while driving, the SRS is not working properly. If this occurs, have your vehicle immediately inspected by an authorized HYUNDAI dealer.

(Continued)

## (Continued)

• Before you replace a fuse or disconnect a battery terminal, turn the ignition switch to the LOCK position and remove the ignition key. Never remove or replace the air bag related fuse(s) when the ignition switch is in the ON position. Failure to heed this warning will cause the SRS " warning light to illuminate.




C040400ABH-EE

# Driver's and passenger's front air bag

Your vehicle is equipped with a Supplemental Restraint (Air Bag) System and the lap/shoulder belts at both the driver and passenger seating positions. The indications of the system's presence are the letters "SRS AIR BAG" embossed on the air bag pad cover in the steering wheel and the passenger's side front panel pad above the glove box.

The SRS consists of air bags installed under the pad covers in the center of the steering wheel and the passenger's side front panel above the glove box.

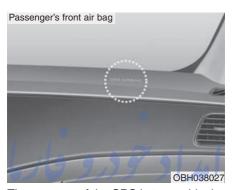

The purpose of the SRS is to provide the vehicle's driver and/or the front passenger with additional protection than that offered by the seat belt system alone in case of a frontal impact of sufficient severity.

# FarmaSOS.com

# **WARNING**

Always use seat belts and child restraints – every trip, every time, everyone! Air bags inflate with considerable force and in the blink of an eye. Seat belts help keep occupants in proper position to obtain maximum benefit from the air bag. Even with air bags, improperly belted and unbelted occupants can be severely injured when the air bag inflates. Always follow the precautions about seat belts, air bags and occupant safety contained in this manual.

To reduce the chance of serious or fatal injuries and receive the maximum safety benefit from your restraint system:

- Never place a child in any child or booster seat in the front seat.
- ABC Always Buckle Children in the back seat. It is the safest place for children of any age to ride.
- Front and side air bags can injure occupants improperly positioned in the front seats.

(Continued)

#### (Continued)


- Move your seat as far back as practical from the front air bags, while still maintaining control of the vehicle.
- You and your passengers should never sit or lean unnecessarily close to the air bags. Improperly positioned drivers and passengers can be severely injured by inflating air bags.
- Never lean against the door or center console - always sit in an upright position.
- No objects should be placed over or near the air bag modules on the steering wheel, instrument panel, and the front passenger's panel above the glove box, because any such object could cause harm if the vehicle is in a crash severe enough to cause the air bags to deploy.
- Do not tamper with or disconnect SRS wiring or other components of the SRS system. Doing so could result in injury, due to accidental deployment of the air bags or by rendering the SRS inoperative.

(Continued)

### (Continued)

- If the SRS air bag warning light " "remains illuminated while the vehicle is being driven, have an authorized HYUNDAI dealer inspect the air bag system as soon as possible.
- Air bags can only be used once have an authorized HYUNDAL dealer replace the air bag immediately after deployment.
- The SRS is designed to deploy the front air bags only when an impact is sufficiently severe and when the impact angle is less than 30° from the forward longitudinal axis of the vehicle. Additionally, the air bags will only deploy once. Seat belts must be worn at all times.
- Front air bags are not intended to deploy in side-impact, rearimpact or rollover crashes. In addition, front air bags will not deploy in frontal crashes below the deployment threshold.

(Continued)

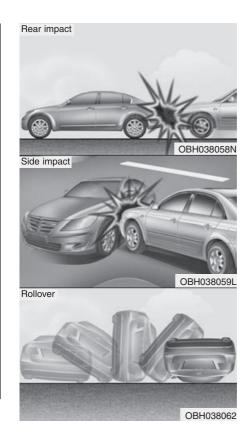


### (Continued)

- A child restraint system must never be placed in the front seat.
   The infant or child could be severely injured or killed by an air bag deployment in case of an accident.
- Children age 12 and under must always be properly restrained in the rear seat. Never allow children to ride in the front passenger seat. If a child over 12 must be seated in the front seat, he or she must be properly belted and the seat should be moved as far back as possible.
- For maximum safety protection in all types of crashes, all occupants including the driver should always wear their seat belts whether or not an air bag is also provided at their seating position to minimize the risk of severe injury or death in the event of a crash. Do not sit or lean unnecessarily close to the air bag while the vehicle is in motion.

(Continued)

### (Continued)

- Sitting improperly or out of position can result in serious or fatal injury in a crash. All occupants should sit upright with the seat back in an upright position, centered on the seat cushion with their seat belt on, legs comfortably extended and their feet on the floor until the vehicle is parked and the ignition key is removed.
- The SRS air bag system must deploy very rapidly to provide protection in a crash. If an occupant is out of position because of not wearing a seat belt, the air bag may forcefully contact the occupant causing serious or fatal injuries.

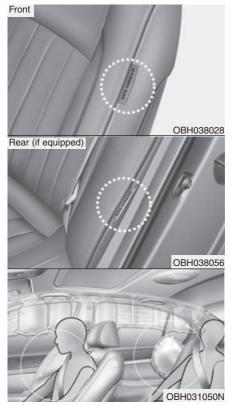

C040600ABH

Side impact air bag (if equipped)

Your vehicle is equipped with a side impact air bag in each front and outboard rear seat. The purpose of the air bag is to provide the vehicle's driver and/or the front and outboard rear passenger with additional protection than that offered by the seat belt alone.

The side impact air bags are designed to deploy only during certain side-impact collisions, depending on the crash severity, angle, speed and point of impact. The side impact air bags are not designed to deploy in all side impact situations.

# **A WARNING**

Do not allow the passengers to lean their heads or bodies onto doors, put their arms on the doors, stretch their arms out of the window, or place objects between the doors and passengers when they are seated on seats equipped with side and/or curtain air bags.


# **WARNING**

- The side impact air bag is supplemental to the seat belt systems and is not a substitute for them. Therefore your seat belts must be worn at all times while the vehicle is in motion. The air bags deploy only in certain side impact conditions severe enough to cause significant injury to the vehicle occupants.
- For best protection from the side impact air bag system and to avoid being injured by the deploying side impact air bag, both front and all rear (if equipped) seat occupants should sit in an upright position with the seat belt properly fastened. The driver's hands should be placed on the steering wheel at the 9:00 and 3:00 positions. The passengers' arms and hands should be placed on their laps.
- Do not use any accessory seat covers.

(Continued)

## (Continued)

- Use of seat covers could reduce or prevent the effectiveness of the system.
- Do not install any accessories on the side or near the side impact air bag.
- Do not place any objects over the air bag or between the air bag and yourself.
- Do not place any objects (an umbrella, bag, etc.) between the door and the seat. Such objects may become dangerous projectiles and cause injury if the supplemental side impact air bag inflates.
- To prevent unexpected deployment of the side impact air bag that may result in personal injury, avoid impact to the side impact sensor when the ignition switch is on.
- If the seat or seat cover is damaged, have the vehicle checked and repaired by an authorized HYUNDAI dealer because your vehicle is equipped with side impact air bags.

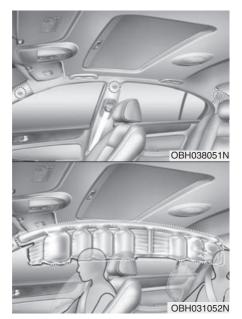

C040700AEN

## Curtain air bag (if equipped)

Curtain air bags are located along both sides of the roof rails above the front and rear doors.

They are designed to help protect the heads of the front seat occupants and the rear outboard seat occupants in certain side impact collisions.

The curtain air bags are designed to deploy only during certain side impact collisions, depending on the crash severity, angle, speed and impact. The curtain air bags are not designed to deploy in all side impact situations, collisions from the front or rear of the vehicle or in most rollover situations.

# A WARNING

• In order for side and curtain air bags to provide the best protection, both front seat occupants and both outboard rear occupants should sit in an upright position with the seat belts properly fastened. Importantly, children should sit in a proper child restraint system in the rear seat. (Continued)

## (Continued)

- When children are seated in the rear outboard seats, they must be seated in the proper child restraint system. Make sure to position the child restraint system as far away from the door side as possible, and secure the child restraint system in a locked position.
- Do not allow the passengers to lean their heads or bodies onto doors, put their arms on the doors, stretch their arms out of the window, or place objects between the doors and passengers when they are seated on seats equipped with side and/or curtain air bags.
- Never try to open or repair any components of the side curtain air bag system. This should only be done by an authorized HYLINDAL dealer


Failure to follow the above instructions can result in injury or death to the vehicle occupants in an accident.

#### C040800ABH

Why didn't my air bag go off in a collision? (Inflation and non-inflation conditions of the air bag)

There are many types of accidents in which the air bag would not be expected to provide additional protection.

These include rear impacts, second or third collisions in multiple impact accidents, as well as low speed impacts.

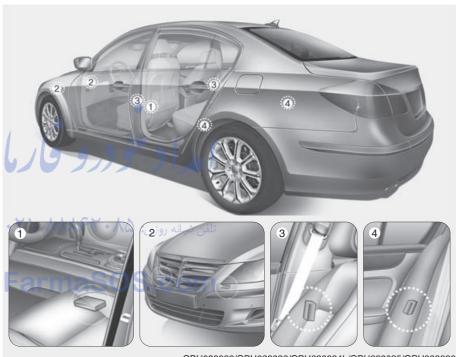

OBH038032/OBH038033/OBH038034L/OBH038035/OBH038036

# Air bag collision sensors

- (1) SRS control module
- (2) Front impact sensor

- (3) Side impact sensor (front)
- (4) Side impact sensor (rear) (if equipped)

## **A WARNING**

- Do not hit or allow any objects to impact the locations where air bags or sensors are installed.
   This may cause unexpected air bag deployment, which could result in serious personal injury or death.
- If the installation location or angle of the sensors is altered in any way, the air bags may deploy when they should not or they may not deploy when they should, causing severe injury or death.
   Therefore, do not try to perform maintenance on or around the air bag sensors. Have the vehicle checked and repaired by an authorized HYLINDAL dealer.

(Continued)

## (Continued)

- Problems may arise if the sensor installation angles are changed due to the deformation of the front bumper, body or B and C pillars where side collision sensors are installed. Have the vehicle checked and repaired by an authorized HYUNDAI dealer.
- Your vehicle has been designed to absorb impact and deploy the air bag(s) in certain collisions. Installing bumper guards or replacing a bumper with non-genuine parts may adversely affect your vehicle's collision and air bag deployment performance.

FarmaSOS.com




C040801AEN

Air bag inflation conditions

### Front air bags

Front air bags are designed to inflate in a frontal collision depending on the intensity, speed or angles of impact of the front collision.

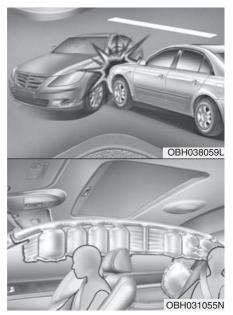

Side impact and curtain air bags (if equipped)

Side impact and curtain air bags are designed to inflate when an impact is detected by side collision sensors depending on the strength, speed or angles of impact resulting from a side impact collision.

Although the front air bags (driver's and front passenger's air bags) are designed to inflate only in frontal collisions, they also may inflate in other types of collisions if the front impact sensors detect a sufficient impact. Side impact and curtain air bags are designed to inflate only in side impact collisions, but they may inflate in other collisions if the side impact sensors detect a sufficient impact.

If the vehicle chassis is impacted by bumps or objects on unimproved roads, the air bags may deploy. Drive carefully on unimproved roads or on surfaces not designed for vehicle traffic to prevent unintended air bag deployment.

FarmaSOS.com



C040802AEN

#### Air bag non-inflation conditions

 In certain low-speed collisions the air bags may not deploy. The air bags are designed not to deploy in such cases because they may not provide benefits beyond the protection of the seat belts in such collisions.




 Frontal air bags are not designed to inflate in rear collisions, because occupants are moved backward by the force of the impact. In this case, inflated air bags would not be able to provide any additional benefit.




 Front air bags may not inflate in side impact collisions, because occupants move to the direction of the collision, and thus in side impacts, frontal air bag deployment would not provide additional occupant protection.

However, side impact and curtain air bags may inflate depending on the intensity, vehicle speed and angles of impact.

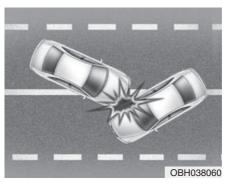

 In an angled collision, the force of impact may direct the occupants in a direction where the air bags would not be able to provide any additional benefit, and thus the sensors may not deploy any air bags.

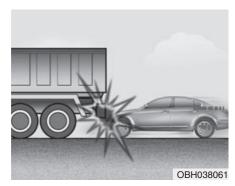


 Just before impact, drivers often brake heavily. Such heavy braking lowers the front portion of the vehicle causing it to "ride" under a vehicle with a higher ground clearance. Air bags may not inflate in this "under-ride" situation because deceleration forces that are detected by sensors may be significantly reduced by such "under-ride" collisions.



dents because air bag deployment would not provide protection to the occupants.

However, side impact and curtain air bags may inflate when the vehicle is rolled over by a side impact collision, if the vehicle is equipped with side impact air bags and curtain air bags.

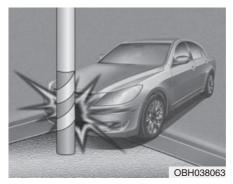

 Air bags may not inflate if the vehicle collides with objects such as utility poles or trees, where the point of impact is concentrated to one area and the full force of the impact is not delivered to the sensors. C041100BBH

#### **SRS Care**

The SRS is virtually maintenance-free and so there are no parts you can safely service by yourself. If the SRS air bag warning light odes not illuminate when you turn the ignition ON, or if it continuously remains on, have your vehicle immediately inspected by an authorized HYUNDAI dealer.

Any work on the SRS system, such as removing, installing, repairing, or any work on the steering wheel, the front passenger's panel, front seats and roof rails must be performed by an authorized HYUNDAI dealer. Improper handling of the SRS system may result in serious personal injury.

# **WARNING**

- Modification to SRS components or wiring, including the addition of any kind of badges to the pad covers or modifications to the body structure, can adversely affect SRS performance and lead to possible injury.
- For cleaning the air bag pad covers, use only a soft, dry cloth or one which has been moistened with plain water. Solvents or cleaners could adversely affect the air bag covers and proper deployment of the system.
- No objects should be placed over or near the air bag modules on the steering wheel, instrument panel, and the front passenger's panel above the glove box, because any such object could cause harm if the vehicle is in a crash severe enough to cause the air bags to inflate.

(Continued)

## (Continued)

- If the air bags inflate, they must be replaced by an authorized HYUNDAI dealer.
- Do not tamper with or disconnect SRS wiring, or other components of the SRS system. Doing so could result in injury, due to accidental inflation of the air bags or by rendering the SRS inoperative.
- If components of the air bag system must be discarded, or if the vehicle must be scrapped, certain safety precautions must be observed. An authorized HYUNDAI dealer knows these precautions and can give you the necessary information. Failure to follow these precautions and procedures could increase the risk of personal injury.
- If your car was flooded and has soaked carpeting or water on the flooring, you shouldn't try to start the engine; have the car towed to an authorized HYUNDAI dealer.

#### C041300ABH

## Additional safety precautions

- · All occupants should sit upright, fully back in their seats with their seat belts. on and their feet on the floor
- · Passengers should not move out of or change seats while the vehicle is moving. A passenger who is not wearing a seat belt during a crash or emergency stop can be thrown against the inside of the vehicle, against other occupants, or out of the vehicle.
- · Each seat belt is designed to restrain one occupant. If more than one person uses the same seat belt. they could be seriously injured or killed in a collision.
- · Do not use any accessories on seat belts. Devices claiming to improve occupant comfort or reposition the seat belt can reduce the protection provided by the seat belt and increase the chance of serious injury in a crash.
- Passengers should not place hard or sharp objects between themselves and the air bags. Carrying hard or sharp objects on your lap or in your mouth can result in injuries if an air bag inflates.

- · Keep occupants away from the air bag covers. All occupants should sit upright, fully back in their seats with their seat belts on and their feet on the floor. If occupants are too close to the air bag covers, they could be injured if the air bags inflate.
- Do not attach or place objects on or near the air bag covers. Any object attached to or placed on the front or side air bag covers could interfere with the proper operation of the air bags.
- Do not modify the front seats. Modification of the front seats could interfere with the operation of the supplemental restraint system sensing components or side air bags.
- Do not place items under the front seats. Placing items under the front seats could interfere with the operation of the supplemental restraint system sensing components and wiring harnesses.
- Never hold an infant or child on your lap. The infant or child could be seriously injured or killed in the event of a crash. All infants and children should be properly restrained in appropriate child safety seats or seat belts in the rear seat.

# **WARNING**

- Sitting improperly or out of position can cause occupants to be shifted too close to a deploying air bag, strike the interior structure or be thrown from the vehicle resulting in serious injury or death.
- Always sit upright with the seatback in an upright position, centered on the seat cushion with your seat belt on, legs comfortably extended and your feet on the floor.

#### C041400AUN

### Adding equipment to or modifying your air bag-equipped vehicle

If you modify your vehicle by changing your vehicle's frame, bumper system. front end or side sheet metal or ride height, this may affect the operation of your vehicle's air bag system.



C041200AUN

## Air bag warning label

Air bag warning labels are attached to alert the driver and passengers of potential risk of air bag system.

Note that these government warnings focus on the risk to children, we also want you to be aware of the risks which adults are exposed to. Those have been described in previous pages.

Smart key / 4-6
Remote keyless entry / 4-10
Theft-alarm system / 4-13
Door locks / 4-15
Trunk / 4-19
Windows / 4-27
Hood / 4-30

Features of your vehicle

Fuel filler lid / 4-32


Keys / 4-3

**Sunroof / 4-35** 

FarmaSOS.co

نبانه روزي: ۱۹۰۵ ۱۹۸۸ - ۲۱ م

Driver position memory system / 4-39
Steering wheel / 4-42
Mirrors / 4-45
Instrument cluster / 4-48
Parking assist system / 4-73
Front blind spot monitoring system / 4-76
Rearview camera / 4-77
Hazard warning flasher / 4-77
Lighting / 4-78
Wipers and washers / 4-85
Interior light / 4-89
Defroster / 4-92
Automatic climate control system / 4-93

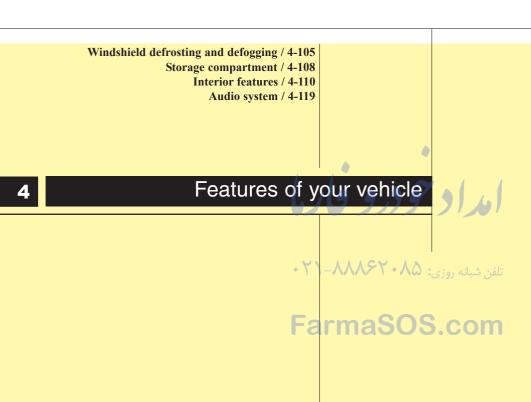

#### **KEYS**

D010100AEN

### Record your key number



The key code number is stamped on the bar code tag attached to the key set. Should you lose your keys, this

number will enable an authorized HYUNDAI dealer to duplicate the keys easily. Remove the bar code tag and store it in a safe place. Also, record the code number and keep it in a safe place (not in the vehicle).



D010200ABH

## **Key operations**

Used to start the engine, lock and unlock the doors.

① Master key

Used to start the engine, lock and unlock the doors, lock and unlock the glove box, and open the trunk.

## ② Sub key

Used only to start the engine and lock and unlock the door.

#### Type B

To remove the mechanical key, press and hold the release button and remove the mechanical key.


To reinstall the mechanical key, put the key into the hole and push it until a click sound is heard.

## **▲** WARNING - Ignition key

Leaving children unattended in a vehicle with the ignition key is dangerous even if the key is not in the ignition switch. Children copy adults and they could place the key in the ignition switch. The ignition key would enable children to operate power windows or other controls, or even make the vehicle move, which could result in serious bodily injury or even death. Never leave the keys in your vehicle with unsupervised children.

## **WARNING**

Use only HYUNDAI original parts for the ignition key in your vehicle. If an aftermarket key is used, the ignition switch may not return to ON after START. If this happens, the starter will continue to operate causing damage to the starter motor and possible fire due to excessive current in the wiring.

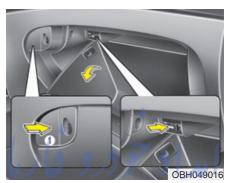

D010400ABH

## Trunk lock system

The trunk lid control button located in the vehicle glove box is used to prevent unauthorized access to the trunk.

#### **Trunk locking**

To activate the trunk lock system so that the trunk can only be opened with the master key, perform the following:

- 1. Open the glove box by pushing the button (1).
- 2. Set the trunk lid control button to OFF position (not depressed).
- 3. Close the glove box and lock the glove box with the master key.

When leaving the key with a parking lot attendant or valet, perform steps 1 to 3 above and leave the sub key with the attendent. The sub key can start the engine and operate door locks only.

#### Lock release

To release the trunk lock feature, open the glove box with the master key and set the trunk lid control button to ON position (depressed). In this position the trunk will open with the trunk lid release lever or transmitter. The trunk can never be opened with the sub key.

D010300CFN

#### Immobilizer system

Your vehicle may be equipped with an electronic engine immobilizer system to reduce the risk of unauthorized vehicle use.

Your immobilizer system is comprised of a small transponder in the ignition key and electronic devices inside the vehicle With the immobilizer system, whenever you insert your ignition key into the ignition switch and turn it to ON, it checks and determines and verifies if the ignition key is valid or not.

If the key is determined to be valid, the engine will start.

If the key is determined to be invalid, the engine will not start.

To deactivate the immobilizer system:

Insert the ignition key into the key cylinder and turn it to the ON position.

To activate the immobilizer system: Turn the ignition key to the OFF position. The immobilizer system activates automatically. Without a valid ignition key for vour vehicle, the engine will not start.

## **WARNING**

In order to prevent theft of your vehicle, do not leave spare keys anywhere in your vehicle. Your Immobilizer password is a customer unique password and should be kept confidential. Do not leave this number anywhere in your vehicle.

## \* NOTICE

When starting the engine, do not use the key with other immobilizer keys around. Otherwise the engine may not start or may stop soon after it starts. Keep each key separate in order to avoid a starting malfunction.

## ACAUTION OS. COM

Do not put metal accessories near the ignition switch.

The engine may not start because the metal accessories may interrupt the transponder signal from transmitting normally.

#### \* NOTICE

If you need additional keys or lose your keys, consult an authorized HYUNDAI dealer.

## **A** CAUTION

The transponder in your ignition key is an important part of the immobilizer system. It is designed to give years of trouble-free service, however you should avoid exposure to moisture, static electricity and rough handling. Immobilizer system malfunction could occur.

## **⚠** CAUTION

Do not change, alter or adjust the immobilizer system because it could cause the immobilizer system to malfunction and should only be serviced by an authorized HYUNDAI dealer.

Malfunctions caused by improper alterations, adjustments or modifications to the immobilizer system are not covered by your vehicle manufacturer warrantv.

## **SMART KEY (IF EQUIPPED)**



D040000ABH

With a smart key, you can lock or unlock a door (and trunk) and even start the engine without inserting the key.

The functions of buttons on a smart key are similar to the remote keyless entry. (Refer to the "Remote keyless entry" in this section.)

#### D040100ABH

## **Smart key functions**

With the smart key, you can lock and unlock the vehicle doors (and trunk), and the smart key enables starting of the engine as well. Detailed information follows:



D040101ABH Locking

Pressing the button in the front outside door handles with all doors (and trunk) closed and any door unlocked, locks all the doors (and trunk). The hazard warning lights blink once to indicate that all doors (and trunk) are locked. The button will only operate when the smart key is within 0.7~1 m (28~40 in.) from the outside door handle. If you want to make sure that a door has locked or not, you should check the door lock button inside the vehicle or pull the outside door handle.

Even though you press the outside door handle buttons, the doors will not lock and the chime will sound for 3 seconds if any of following occur:

- The smart key is in the vehicle.
- The ignition switch is in ACC or ON position.
- Any door except the trunk is open.

### D040102ABH

## Unlocking

Press the button in the front outside door handles with all doors (and trunk) closed and locked, unlocks all the doors (and trunk). The hazard warning lights blink twice to indicate that all doors (and trunk) are unlocked. The button will only operate when the smart key is within 0.7~1 m (28~40 in.) from the outside door handle. When the smart key is recognized in the area of 0.7~1 m (28~40 in.) from the front outside door handle, other people can also open the door without possession of the smart key.

#### D040103ABH

### Trunk unlocking (if equipped)

When all doors are locked, if you are within 0.7~1 m (28~40 in.) from the outside trunk handle with your smart key in your possession, the trunk will unlock and open when you press the trunk handle switch.

The hazard warning lights will blink twice to indicate that the trunk is unlocked.

Also, once the trunk is opened and then closed, the trunk will be locked automatically.

#### D040104ABH

#### Start-up

You can start the engine without inserting the key. For detailed information refer to "Engine start/stop button" in section 5.

#### D040300AFN

## **Smart key precautions**

## \* NOTICE

- If, for some reason, you happen to lose your smart key, you will not be able to start the engine. Tow the vehicle, if necessary, and contact an authorized HYUNDAI dealer.
- A maximum of 2 smart keys can be registered to a single vehicle. If you lose a smart key, you should immediately take the vehicle and key to your authorized HYUNDAI dealer to protect it from potential theft.
- The smart key will not work if any of following occur:
- The smart key is close to a radio transmitter such as a radio station or an airport which can interfere with normal operation of the smart key.
- You keep the smart key near a mobile two-way radio system or a cellular phone.
- Another vehicle's smart key is being operated close to your vehicle.

When the smart key does not work correctly, open and close the door with the mechanical key. If you have a problem with the smart key, contact an authorized HYUNDAI dealer.

(Continued)

#### (Continued)

• If the smart key is in close proximity to your cell phone or smart phone, the signal from the smart key could be blocked by normal operation of your cell phone or smart phone. This is especially important when the phone is active such as making call, receiving calls, text messaging, and/or sending/receiving emails. Avoid placing the smart key and your cell phone or smart phone in the same pants or jacket pocket and maintain adequate distance between the two devices.

## **A** CAUTION

Keep the smart key away from water or any liquid. If the keyless entry system is inoperative due to exposure to water or liquids, it will not be covered by your manufacturer's vehicle warranty.



D040600ABH

## Trunk lock system

The trunk lid control button located in the vehicle glove box is used to prevent unauthorized access to the trunk.



#### Trunk locking

To activate the trunk lock system so that the trunk can only be opened with the mechanical key, perform the following:

- Depress and hold the release button

   (1) and remove the mechanical key (2).
   (To reinstall the mechanical key, put the key into the hole and push it until a click sound is heard.)
- 2. Open the glove box.
- 3. Set the trunk lid control button to OFF position (not depressed).
- 4. Close and lock the glove box using the mechanical key.

When leaving your keys with a parking lot attendant or valet, perform steps 1 to 4 above, remove the mechanical key from the smart key and leave the smart key with the attendant. In this manner the smart key can only be used to start the engine and operate door locks.

#### Lock release

To release the trunk lock feature, open the glove box with the mechanical key and set the trunk lid control button to ON position (depressed). In this position the trunk will open with the trunk lid release lever or smart key.



D040500BBH

## **Battery replacement**

A smart key battery should last for several years, but if the smart key is not working properly, try replacing the battery with a new one. If you are unsure how to use your smart key or replace the battery, contact an authorized HYUNDAI dealer.

#### \* NOTICE

The circuit inside the smart key can have a problem if exposed to moisture or static electricity. If you are unsure how to use your smart key or replace the battery, contact an authorized HYUNDAI dealer.

- 1. Pry open the rear cover of the smart key.
- 2. Replace the battery with a new battery (CR2032). When replacing the battery, make sure the battery position.
- 3. Install the battery in the reverse order of removal.

#### \* NOTICE

- Using the wrong battery can cause the smart key to malfunction. Be sure to use the correct battery.
- Circuits inside the smart key may develop problems when dropped, exposed to moisture or static electricity.
- If you suspect that your smart key might have sustained some damage, or you feel your smart key is not working correctly, contact an authorized HYUNDAI dealer.


## **A** CAUTION

An inappropriately disposed battery can be harmful to the environment and human health.

Dispose the battery according to your local law(s) or regulation.

## REMOTE KEYLESS ENTRY (IF EQUIPPED)



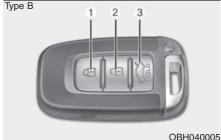

# Remote keyless entry system operations

D020101ABH-EE

Lock (1)

All doors (and trunk) are locked if the lock button is pressed while all doors are closed.

The hazard warning lights blink once to indicate that all doors (and trunk) are locked.

However, if any door (or trunk) remains open, the hazard warning lights will not operate. If all doors (and trunk) are closed after the lock button is pressed, the hazard warning lights blink.

If you press the lock button one more time within 4 seconds after all doors are locked by pressing the lock button, the outside rearview mirror will be folded. (if equipped)

D020102ABH-EE *Unlock (2)* 

All doors (and trunk) are unlocked if the unlock button is pressed.

The hazard warning lights will blink twice to indicate that all doors (and trunk) are unlocked.

After depressing this button, the doors (and trunk) will be locked automatically unless you open any door within 30 seconds.

If you press the unlock button one more time within 4 seconds after all doors are unlocked by pressing the unlock button, the outside rearview mirror will be unfolded. (if equipped) D020104ABH-EE

Trunk unlock (3)

#### Without power trunk

The trunk is unlocked if the button is pressed for more than 1 second when all doors are locked.

The hazard warning lights will blink twice to indicate that the trunk is unlocked.

Once the trunk is opened and then closed with all doors locked, the trunk will be locked automatically.

#### With power trunk

The trunk is opened automatically if the button is pressed for more than 1 second.

The hazard warning lights will blink twice to indicate that the trunk will swing upward.

## **A** CAUTION

The power trunk can be operated when the engine is not running. However, the power trunk consumes large amounts of vehicle electric power. To prevent the battery from being discharged, do not operate them consecutively (more than approximately 10 times).

D020200AFN

## **Transmitter precautions**

#### \* NOTICE

- The transmitter will not work if any of following occur:
  - The ignition key is in ignition switch.
  - You exceed the operating distance limit (about 30 m [90 feet]).
  - The battery in the transmitter is weak.
  - Other vehicles or objects may be blocking the signal.
  - The weather is extremely cold.
- The transmitter is close to a radio transmitter such as a radio station or an airport which can interfere with normal operation of the transmitter.

When the transmitter does not work correctly, open and close the door with the ignition key. If you have a problem with the transmitter, contact an authorized HYUNDAI dealer.

(Continued)

(Continued)

• If the transmitter is in close proximity to your cell phone or smart phone, the signal from the transmitter could be blocked by normal operation of your cell phone or smart phone. This is especially important when the phone is active such as making call, receiving calls, text messaging, and/or sending/receiving emails. Avoid placing the transmitter and your cell phone or smart phone in the same pants or jacket pocket and maintain adequate distance between the two devices.

## **A** CAUTION

Keep the transmitter away from water or any liquid. If the keyless entry system is inoperative due to exposure to water or liquids, it will not be covered by your manufacturer vehicle warranty.

## **A** CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. If the keyless entry system is inoperative due to changes or modifications not expressly approved by the party responsible for compliance, it will not be covered by your manufacturer's vehicle warranty.



D020300BBH

### **Battery replacement**

The transmitter uses a 3 volt lithium battery which will normally last for several years. When replacement is necessary, use the following procedure.

- Insert a slim tool into the slot and gently pry open the transmitter center cover.
- Replace the battery with a new battery (CR2032). When replacing the battery, make sure the battery position.
- Install the battery in the reverse order of removal.

For replacement transmitters, see an authorized HYUNDAI dealer for transmitter reprogramming.

## **A** CAUTION


- The keyless entry system transmitter is designed to give you years of trouble-free use, however it can malfunction if exposed to moisture or static electricity. If you are unsure how to use your transmitter or replace the battery, contact an authorized HYUNDAI dealer.
- Using the wrong battery can cause the transmitter to malfunction. Be sure to use the correct battery.
- To avoid damaging the transmitter, don't drop it, get it wet, or expose it to heat or sunlight.

## **A** CAUTION

An inappropriately disposed battery can be harmful to the environment and human health.

Dispose the battery according to your local law(s) or regulation.

## THEFT-ALARM SYSTEM (IF EQUIPPED)

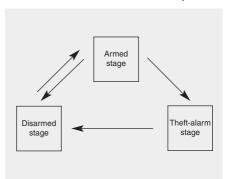

#### D030000AEN

This system is designed to provide protection from unauthorized entry into the car. This system is operated in three stages: the first is the "Armed" stage, the second is the "Theft-alarm" stage, and the third is the "Disarmed" stage. If triggered, the system provides an audible alarm with blinking of the hazard warning lights.

D030100BBH

#### Armed stage

Park the car and stop the engine. Arm the system as described below.

- 1. Remove the ignition key from the ignition switch or turn off the engine.
- Make sure that all doors, the engine hood and trunk lid are closed and latched.
- Lock the doors by depressing the door lock button on the transmitter (or smart key).
  - After completion of the steps above, the hazard warning lights will blink once to indicate that the system is armed.
- If any door, trunk lid or engine hood remains open, the hazard warning lights won't operate and theft-alarm will not arm. After this, if all doors, trunk lid and engine hood are closed, the hazard warning lights blink once.
- Lock the doors by pressing the button in the front outside door handles with the smart key in your possession.
   After completion of the steps above, the hazard warning lights will blink once to indicate that the system is armed.

If any door, trunk lid or engine hood remains open, the hazard warning lights won't operate and theft-alarm will not arm. To arm the system, close all the doors, trunk lid and engine hood, and try again to lock the doors.

#### \* NOTICE

If you set the vehicle to "Key Activates Alarm" in the INFO menu of DIS (Driver Information System, if equipped), the system can also be armed by locking the doors with the key from the front doors: however, the hazard warning lights will not blink using this method.

Detailed information is described in the DIS manual (if equipped) supplied saperately.

Do not arm the system until all passengers have left the vehicle. If the system is armed while a passenger(s) remains in the vehicle, the alarm may be activated when the remaining passenger(s) leave the vehicle. If any door, trunk lid or engine hood is opened within 30 seconds after entering the armed stage, the system is disarmed to prevent unnecessary alarm.

#### D030200ABH-EE

### Theft-alarm stage

The alarm will be activated if any of the following occurs while the system is armed.

- A door is opened without using the transmitter (or smart key).
- The trunk is opened without using the transmitter (or smart key).
- The engine hood is opened.

The horn will sound and the hazard warning lights will blink continuously for approximately 30 seconds. To turn off the system, unlock the doors with the transmitter.

#### D030400BBH-FF

## Disarmed stage

The system will be disarmed when the doors (and trunk) are unlocked with the transmitter (or smart key).

After depressing the unlock button, the hazard warning lights will blink to indicate that the system is disarmed.

After depressing the unlock button, if any door (or trunk) is not opened within 30 seconds, the system will be rearmed.

#### \* NOTICE

• Avoid trying to start the engine while the alarm is activated. The vehicle starter motor is disabled during the theft-alarm stage.

If the system is not disarmed with the transmitter, insert the key into the ignition switch, turn the ignition switch to the ON position and wait for 30 seconds. Then the system will be disarmed. (except China)


 If you lose your keys, consult your authorized HYUNDAI dealer.

## **A** CAUTION

Do not change, alter or adjust the theft-alarm system because it could cause the theft-alarm system to malfunction and should only be serviced by an authorized HYUNDAI dealer.

Malfunctions caused by improper alterations, adjustments or modifications to the theft-alarm system are not covered by your vehicle manufacturer warranty.

#### **DOOR LOCKS**

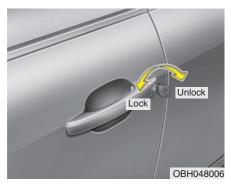

D050100ABH-EE

# Operating door locks from outside the vehicle


- Turn the key toward the rear of the vehicle to unlock and toward the front of the vehicle to lock.
- If you lock/unlock the driver's door with a key, all vehicle doors will lock/unlock automatically.
- Doors can also be locked and unlocked with the transmitter (or smart key). (if equipped)
- Once the doors are unlocked, they may be opened by pulling the door handle.
- When closing the door, push the door by hand. Make sure that doors are closed securely.

#### \* NOTICE

- In cold and wet climates, door locks and door mechanisms may not work properly due to freezing conditions.
- If the door is locked/unlocked multiple times in rapid succession with either the vehicle key or door lock switch, the system may stop operating temporarily in order to protect the circuit and prevent damage to system components.

## **WARNING**


- If you don't close the door securely, the door may open again.
- Be careful that someone's body and hands are not trapped when closing the door.

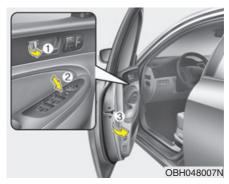

- To lock a door without the key, push the inside door lock button (1) or central door lock switch (2) to the "Lock" position and close the door (3).
- If you lock the door with the central door lock switch (2), all vehicle doors will lock automatically.

#### \* NOTICE

Always remove the ignition key, engage the parking brake, close all windows and lock all doors when leaving your vehicle unattended.

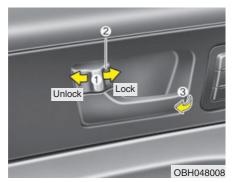

# Operating door locks from inside the vehicle

D050201BBH-EE

With the door lock button


- To unlock a door, push the door lock button (1) to the "Unlock" position. The red mark (2) on the door lock button will be visible.
- To lock a door, push the door lock button (1) to the "Lock" position. If the door is locked properly, the red mark (2) on the door lock button will not be visible.
- To open a door, pull the door handle (3) outward.

- If the inner door handle of the driver's (or front passenger's) door is pulled when the door lock button is in lock position, the button is unlocked and door opens. (if equipped)
- Front doors cannot be locked if the ignition key is in the ignition switch (or if the smart key is in the vehicle) and any door is open.

WARNING - Door lock malfunction

If a power door lock ever fails to function while you are in the vehicle, try one or more of the following techniques to exit:

- Operate the door unlock feature repeatedly (both electronic and manual) while simultaneously pulling on the door handle.
- Operate the other door locks and handles, front and rear.
- Lower a front window and use the key to unlock the door from outside.

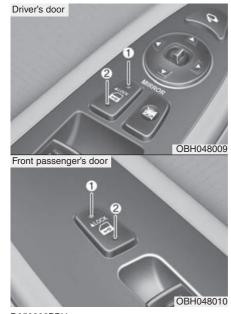

D050202BBH

With central door lock switch

Operate by depressing the central door lock switch.

- · When pushing down on the front portion (1) of the switch, all vehicle doors will lock.
- When pushing down on the rear portion (2) of the switch, all vehicle doors will unlock
- If the key is in the ignition switch or the smart key is in the vehicle, and any door is open, the doors will not lock even though the front portion (1) of central door lock switch is pressed.

## WARNING - Doors

- The doors should always be fully closed and locked while the vehicle is in motion to prevent accidental opening of the door. Locked doors will also discourage potential intruders when the vehicle stops or slows.
- Be careful when opening doors and watch for vehicles, motorcycles, bicycles or pedestrians approaching the vehicle in the path of the door. Opening a door when something is approaching can cause damage or injury.

## A WARNING - Unlocked vehicles

Leaving your vehicle unlocked can invite theft or possible harm to you or others from someone hiding in your vehicle while you are gone. Always remove the ignition key. engage the parking brake, close all windows and lock all doors when leaving your vehicle unattended.



## A WARNING - Unattended children

An enclosed vehicle can become extremely hot, causing death or severe injury to unattended children or animals who cannot escape the vehicle. Furthermore, children might operate features of the vehicle that could injure them, or they could encounter other harm, possibly from someone gaining entry to the vehicle. Never leave children or animals unattended in your vehicle.

D050300ABH

#### Impact sensing door unlock system

All doors will be automatically unlocked after an impact causes the air bags to deploy.

## Speed sensing door lock system (if equipped)

All doors will be automatically locked after the vehicle speed exceeds 15 km/h (9 mph). And all doors will be automatically unlocked when you turn the engine off or when you remove the ignition key. (if equipped)

D050400ABH

#### \* NOTICE

You can select some auto door lock/unlock features in the INFO menu of DIS (Driver Information System, if equipped) as follows;

- Speed sensing auto door lock
- Auto door unlock by unlocking the driver's door lock button
- Auto door unlock when the ignition key is removed from the ignition switch or the smart key is removed from the smart key holder.
- Auto door lock/unlock by shifting the shift lever out of P (Park) or into P (Park)

If you want this feature, refer to the DIS manual (if equipped) supplied separately (if equipped).



D050500ABH

## Child-protector rear door lock

The child safety lock is provided to help prevent children from accidentally opening the rear doors from inside the vehicle. The rear door safety locks should be used whenever children are in the vehicle.

- 1. Open the rear door.
- Push the child safety lock (1) located on the rear edge of the door to the lock ( ) position. When the child safety lock is in the lock position, the rear door will not open even though the inner door handle is pulled.


3. Close the rear door.

To open the rear door, pull the outside door handle.

# WARNING - Rear door locks

If children accidentally open the rear doors while the vehicle is in motion, they could fall out and be severely injured or killed. To prevent children from opening the rear doors from the inside, the rear door safety locks should be used whenever children are in the vehicle.

#### **TRUNK**

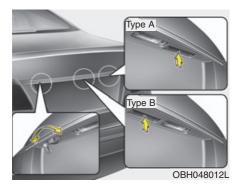

D070100ABH-EE

## Without the power trunk

## Opening the trunk

 The trunk is locked or unlocked when all doors are locked or unlocked with the key, transmitter (or smart key) or central door lock switch.  To open the trunk only while all doors are locked, press the trunk unlock button for more than 1 second on the transmitter (or smart key), press the button on the trunk handle with the smart key in your possession, or insert the master key (or mechanical key of the smart key) into the lock and turn it clockwise.

Once the trunk is opened and then closed, the trunk is locked automatically.

 If the trunk is unlocked, it can be opened by pulling the handle up.



FarmaSOS.com



• To open the trunk from inside the vehicle pull the trunk lid release lever.

## \* NOTICE

In cold and wet climates, trunk lock and trunk mechanisms may not work properly due to freezing conditions.

## **WARNING**

The trunk swings upward. Make sure no objects or people are near the rear of the vehicle when opening the trunk.

## **A** CAUTION

Make certain that you close the trunk before driving your vehicle. Possible damage may occur to the trunk lift cylinders and attached hardware if the trunk is not closed prior to driving.

D070200ABH

#### Closing the trunk

To close, lower the trunk lid, then press down on it until it locks. To be sure the trunk lid is securely fastened, always check by trying to pull it up again.

## **WARNING**

The trunk lid should be always kept completely closed while the vehicle is in motion. If it is left open or ajar, poisonous exhaust gases may enter the car and serious illness or death may result.



FarmaSOS.com



D070300ABH

## **Emergency trunk safety release**

Your vehicle is equipped with an emergency trunk release cable located inside the trunk. If someone is inadvertently locked in the trunk, moving the handle in the direction of the arrow will release the trunk latch mechanism and open the trunk.

## **WARNING**

- For emergencies, be fully aware of the location of the emergency trunk safety release lever in this vehicle and how to open the trunk if you are accidentally locked in the trunk.
- No one should be allowed to occupy the trunk at any time. The trunk is a very dangerous location in the event of a crash.
- Use the release lever for emergencies only. Use extreme caution, especially while the vehicle is in motion.

D070400ABH

## Power trunk (if equipped)

The power trunk can be opened or closed automatically with the transmitter (or smart key), the power trunk main control switch on the driver's door, the open button, or the close button on the trunk.

If you depress or pull the power trunk main control switch, open button, or close button while operating the power trunk, you could stop operating the power trunk.

If that happens, to operate the power trunk again, push or pull any switch or buttons.

## تلفن شیانه روزی: ۵۸ • CAUTION

For your safety, do not leave the power trunk open for a long time, it could also to prevent unnecessary charging system drain.



#### **WARNING**

Never leave children or animals unattended in your vehicle. Children or animals might operate the power trunk that could result in injury to themselves or others, or damage to the vehicle.

#### \* NOTICE

In cold and wet climates, the power trunk may not work properly due to freezing conditions.



#### **WARNING**

Make sure there are no people or objects around the trunk before operating the power trunk. Wait until the trunk is open fully and stopped before loading or unloading cargo or passengers from the vehicle.



## **WARNING**

Make sure the trunk is closed firmly before driving. If the trunk is open, you will draw dangerous exhaust fumes into your vehicle which can cause serious injury or death to vehicle occupants.

## **A** CAUTION

Do not close or open the power trunk manually. This may cause damage to the power trunk. If it is necessary that close or open the power trunk manually when the battery is discharged or disconnected, do not apply excessive force.




D070405ABH

#### Power trunk main control switch

To open the power trunk, pull the power trunk main control switch on the driver's door. To close the power trunk, push the power trunk main control switch until the power trunk is closed securely.

FarmaSOS.com

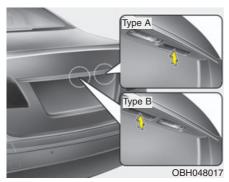

D070406ABH

#### Power trunk open button

To open the power trunk, push the power trunk open button. To open the power trunk while all doors are locked, you should hold the smart key and push the power trunk open button.



D070407ABH

#### Power trunk close button

If you push the power trunk close button while the power trunk is open, it will close automatically.

#### Power trunk non-opening conditions

The power trunk will not open or close automatically, when the vehicle is moving more than 5km/h(3mph).

## **WARNING**

Never leave children or animals unattended in your vehicle. Children or animals might operate the power trunk that could result in injury to themselves or others, or damage to the vehicle.

## \* NOTICE

If there are obstacles such as snow on the power trunk, it may not open automatically. After remove the obstacle, try to open it again.

to open it again. FarmaSOS.com

## \* NOTICE

- The power trunk can be operated when the engine is not running. However the power trunk operation consumes large amounts of vehicle electric power. To prevent the battery from being discharged, do not operate it excessively e.g.: more than approximately 10 times repeatedly.
- To prevent the battery from being discharged, do not leave the power trunk in the open position for a long lime.
- Do not apply excessive force while operating the power trunk. This could cause damage to the power trunk.
- Do not modify or repair any part of the power trunk by yourself. This must be done by an authorized HYUNDAI dealer.
- When jacking up the vehicle to change a tire or repair the vehicle, do not operate the power trunk. This could cause the power trunk to operate improperly.



D070401ABH

#### Automatic stop and reversal

If, during power opening or closing, the trunk is blocked by an object or part of the body, the power trunk will detect the resistance, then the chime will sound 3 times, and it will stop movement or move to the full open position to allow the object to be cleared.

However, if the resistance is weak such as from an object that is thin or soft, or the trunk is near the latched position, the automatic stop and reversal may not detect the resistance and the closing operation will continue. Also, if the power trunk is forced by a strong impact, the automatic stop and reversal may operate.

If the automatic stop and reversal feature operates continuously more than twice during one opening or closing operation, the power trunk may stop at that position. At this time, close the trunk manually and operate the trunk automatically again.

### **WARNING**

- Never intentionally place any object or part of your body in the path of the power trunk to make sure the automatic stop operates.
- Make sure all faces, arms, hands, body parts and any other obstructions are safely out of the way before operating the power trunk.
- Never place any object or part of your body in the path of the power trunk. This could result in serious injury or cause damage to the vehicle.
- Make sure there are no people or objects around the trunk before operating the power trunk.


#### D070402ABH-EE

How to reset the power trunk

If the battery has been discharged or disconnected, or if the related fuse has been replaced or disconnected, for the power trunk to operate normally, reset the power trunk as follow:

- 1. Put the shift lever in P (Park).
- 2. Close the trunk manually.

If the power trunk doesn't work properly after above procedure, have the system checked by an authorized HYUNDAI dealer.

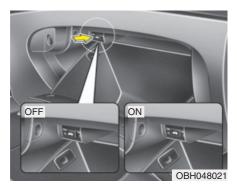

#### D070403ABH-EE

#### Trunk lid control button

- When the trunk lid control button is ON(depressed), the power trunk can be controlled with the power trunk main control switch, power trunk open, close button, and the transmitter (or smart key).
- When the trunk lid control button is OFF (not depressed), the power trunk can controlled with master key (or mechanical key of the smart key) only.

## **WARNING**

Do not allow children to play with the power trunk. Keep the trunk lid control button in the OFF (not depressed) position when not in use. Serious injury or death can result from unintentional power operation by a child.

## \* NOTICE

Close the trunk, and keep the trunk lid control button in the OFF (not depressed) position before washing the vehicle in an automatic car wash.

تلفن شبانه روزی: ۱۹۸۸×۲۰۸۸ – ۲۱

## FarmaSOS.com

## **WARNING**

Even though the trunk lid control button is in the OFF (not depressed) position, the trunk will still be propelled upward by mechanical force if the trunk is manually opened more than 10 degrees beyond the fully closed position. In addition, if the trunk is manually closed to the secondary latch position, the trunk will be electrically moved to the fully latched position. Make sure that face, arms, hands, and other obstructions are safely out of the way before operating the trunk.

#### D070500ABH

Close the power trunk when the battery negative cable is disconnected or the battery is separated.

The power trunk is not closed completely when the battery negative cable is disconnected or the battery is separated.

When you disconnect the battery negative cable or separate the battery, do as follow.



- 1. Open the power trunk lid.
- 2. Lock the trunk lid latch by pressing it with a pen or equivalent.
- 3. Disconnect the negative cable or separate the battery.

## FarmaSOS.com




- 4. Release the trunk lid latch by moving the emergency trunk release lever in the direction of the arrow.
- Close the trunk lid manually. Close it fully by gently pressing its upper center portion.

## **WARNING**

Separating the battery from the vehicle should be done in an authorized HYUNDAI dealer.

## **WINDOWS**

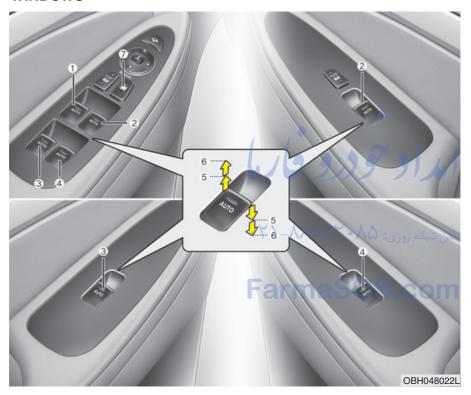

#### D080000AEN

- (1) Driver's door power window switch
- (2) Front passenger's door power window switch
- (3) Rear door (left) power window switch
- (4) Rear door (right) power window switch
- (5) Window opening and closing
- (6) Automatic power window up/down
- (7) Power window lock switch

#### \* NOTICE

In cold and wet climates, power windows may not work properly due to freezing conditions.

#### D080100BBH

#### **Power windows**

The ignition switch must be in the ON position for power windows to operate.

Each door has a power window switch that controls the door's window. The driver has a power window lock switch which can block the operation of passenger windows. The power windows can be operated for approximately 30 seconds after the ignition key is removed or turned to the ACC or LOCK position. However, if the front doors open, the power windows cannot be operated within the 30 second period after ignition key removal.

#### \* NOTICE

While driving with the rear windows down or with the sunroof (if equipped) in an open (or partially open position), your vehicle may demonstrate a wind buffeting or pulsation noise. This noise is a normal occurrence and can be reduced or eliminated by taking the following actions. If the noise occurs with one or both of the rear windows down, partially lower both front windows approximately one inch. If you experience the noise with the sunroof open, slightly reduce the size of the sunroof opening.



D080101AUN

## Window opening and closing

The driver's door has a master power window switch that controls all the windows in the vehicle.

To open or close a window, press down or pull up the front portion of the corresponding switch to the first detent position (5).

#### D080103ABH-EE

#### Auto up/down window

Depressing or pulling up the power window switch momentarily to the second detent position (6) completely lowers or lifts the window even when the switch is released. To stop the window at the desired position while the window is in operation, pull up or depress and release the switch to the opposite direction of the movement.

If the power window is not operated correctly, the automatic power window system must be reset as follows:

- Turn the ignition switch to the ON position.
- Close the window and continue pulling up on the driver's power window switch for at least 1 second after the window is completely closed.



#### Automatic reversal

If the upward movement of the window is blocked by an object or part of the body, the window will detect the resistance and will stop upward movement. The window will then lower approximately 30 cm (11.8 in.) to allow the object to be cleared.

If the window detects the resistance while the power window switch is pulled up continuously, the window will stop upward movement then lower approximately 2.5 cm (1 in.). And if the power window switch is pulled up continuously again within 5 seconds after the window is lowered by the automatic window reversal feature, the automatic window reversal will not operate.

#### \* NOTICE

The automatic reverse feature for all windows are only active when the "auto up" feature is used by fully pulling up the switch. The automatic reverse feature will not operate if the window is raised using the halfway position on the power window switch.

## **WARNING**

Always check for obstructions before raising any window to avoid injuries or vehicle damage. If an object less than 4 mm (0.16 in.) in diameter is caught between the window glass and the upper window channel, the automatic reverse window may not detect the resistance and will not stop and reverse direction.



D080104AUN

#### Power window lock button

- The driver can disable the power window switches on the passenger doors by depressing the power window lock switch located on the driver's door to LOCK (pressed).
- When the power window lock switch is ON, the driver's master control cannot operate the passenger door power windows.


## **A** CAUTION

- To prevent possible damage to the power window system, do not open or close two windows or more at the same time. This will also ensure the longevity of the fuse.
- Never try to operate the main switch on the driver's door and the individual door window switch in opposing directions at the same time. If this is done, the window will stop and cannot be opened or closed.

## **WARNING - Windows**

- NEVER leave the ignition key in the vehicle.
- NEVER leave any child unattended in the vehicle. Even very young children may inadvertently cause the vehicle to move, entangle themselves in the windows, or otherwise injure themselves or others.
- Always double check to make sure all arms, hands, head and other obstructions are safely out of the way before closing a window.
- Do not allow children to play with the power windows. Keep the driver's door power window lock switch in the LOCK position (depressed). Serious injury can result from unintentional window operation by the child.
- Do not extend a face or arms outside through the window opening while driving.

#### HOOD

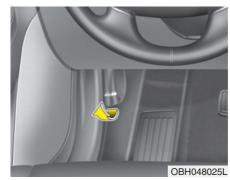

D090100AEN

### Opening the hood

 Pull the release lever to unlatch the hood. The hood should pop open slightly.



Open the hood after turning off the engine on a flat surface, shifting the shift lever to the P(Park) position, and setting the parking brake.



- Go to the front of the vehicle, raise the hood slightly, pull the secondary latch (1) inside of the hood center and lift the hood (2).
- Raise the hood. It will raise completely by itself after it has been raised about halfway.

#### D090200AEN

#### Closing the hood

- 1. Before closing the hood, check the following:
  - All filler caps in engine compartment must be correctly installed.
  - Gloves, rags or any other combustible material must be removed from the engine compartment.
- 2. Lower the hood halfway and push down to securely lock in place.

## **WARNING**

- Before closing the hood, ensure that all obstructions are removed from the hood opening. Closing the hood with an obstruction present in the hood opening may result in property damage or severe personal injury.
- Do not leave gloves, rags or any other combustible material in the engine compartment. Doing so may cause a heat-induced fire.

## **WARNING**

- Always double check to be sure that the hood is firmly latched before driving away. If it is not latched, the hood could open while the vehicle is being driven, causing a total loss of visibility, which might result in an accident.
- Do not move the vehicle with the hood in the raised position, as vision is obstructed and the hood could fall or be damaged.

#### **FUEL FILLER LID**




D100100AUN

## Opening the fuel filler lid

The fuel filler lid must be opened from inside the vehicle by pushing the fuel filler lid opener button located on the driver's door.

#### \* NOTICE

If the fuel filler lid will not open because ice has formed around it, tap lightly or push on the lid to break the ice and release the lid. Do not pry on the lid. If necessary, spray around the lid with an approved de-icer fluid (do not use radiator anti-freeze) or move the vehicle to a warm place and allow the ice to melt.

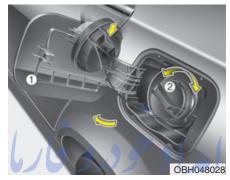

- 1. Stop the engine.
- 2. To open the fuel filler lid, push the fuel filler lid opener button.
- 3. Pull the fuel filler lid (1) out to fully open.
- 4. To remove the cap, turn the fuel tank cap (2) counterclockwise.
- 5. Refuel as needed.

#### D100200AUN

#### Closing the fuel filler lid

- 1. To install the cap, turn it clockwise until it "clicks". This indicates that the cap is securely tightened.
- 2. Close the fuel filler lid and push it lightly and make sure that it is securely closed.

#### D100300AEN

## **WARNING** - Refueling

- If pressurized fuel sprays out, it can cover your clothes or skin and thus subject you to the risk of fire and burns. Always remove the fuel cap carefully and slowly. If the cap is venting fuel or if you hear a hissing sound, wait until the condition stops before completely removing the cap.
- Do not "top off" after the nozzle automatically shuts off when refueling.
- Always check that the fuel cap is installed securely to prevent fuel spillage in the event of an accident.

# **WARNING** - Refueling dangers

Automotive fuels are flammable materials. When refueling, please note the following guidelines carefully. Failure to follow these guidelines may result in severe personal injury, severe burns or death by fire or explosion.

- Read and follow all warnings at the gas station facility.
- Before refueling note the location of the Emergency Gasoline Shut-Off, if available, at the gas station facility.
- Before touching the fuel nozzle, you should eliminate potentially dangerous static electricity discharge by touching another metal part of the vehicle, a safe distance away from the fuel filler neck, nozzle, or other gas source.
   (Continued)

## (Continued)

- Do not get back into a vehicle once you have begun refueling since you can generate static electricity by touching, rubbing or sliding against any item or fabric (polyester, satin, nylon, etc.) capable of producing static electricity. Static electricity discharge can ignite fuel vapors resulting in rapid burning. If you must reenter the vehicle, you should once again eliminate potentially dangerous static electricity discharge by touching a metal part of the vehicle, away from the fuel filler neck, nozzle or other gasoline source.
- When using an approved portable fuel container, be sure to place the container on the ground prior to refueling. Static electricity discharge from the container can ignite fuel vapors causing a fire. Once refueling has begun, contact with the vehicle should be maintained until the filling is complete.

(Continued)

#### (Continued)

Use only approved portable plastic fuel containers designed to carry and store gasoline.

- Do not use cellular phones while refueling. Electric current and/or electronic interference from cellular phones can potentially ignite fuel vapors causing a fire.
- When refueling, always shut the engine off. Sparks produced by electrical components related to the engine can ignite fuel vapors causing a fire. Once refueling is complete, check to make sure the filler cap and filler door are securely closed, before starting the engine.
- DO NOT use matches or a lighter and DO NOT SMOKE or leave a lit cigarette in your vehicle while at a gas station especially during refueling. Automotive fuel is highly flammable and can, when ignited, result in fire.

(Continued)

### (Continued)

 If a fire breaks out during refueling, leave the vicinity of the vehicle, and immediately contact the manager of the gas station and then contact the local fire department. Follow any safety instructions they provide.

## **A** CAUTION

- Make sure to refuel your vehicle according to the "Fuel requirements" suggested in section 1.
- If the fuel filler cap requires replacement, use only a genuine HYUNDAI cap or the equivalent specified for your vehicle. An incorrect fuel filler cap can result in a serious malfunction of the fuel system or emission control system.
- Do not spill fuel on the exterior surfaces of the vehicle. Any type of fuel spilled on painted surfaces may damage the paint.
- After refueling, make sure the fuel cap is installed securely to prevent fuel spillage in the event of an accident.



D100500ABH

### Emergency fuel filler lid release

If the fuel filler lid does not open using the remote fuel filler lid release, you can open it manually by pulling the handle outward slightly.



Do not pull the handle excessively, otherwise the luggage area trim or release handle may be damaged.

## **SUNROOF (IF EQUIPPED)**



D110000AEN

If your vehicle is equipped with a sunroof, you can slide or tilt your sunroof with the sunroof control lever located on the overhead console.

The sunroof can only be opened, closed, or tilted when the ignition switch is in the ON position.

#### \* NOTICE

- In cold and wet climates, the sunroof may not work properly due to freezing conditions.
- After washing the car or after there is rain, be sure to wipe off any water that is on the sunroof before operating it.

## **!** CAUTION

Do not continue to move the sunroof control lever after the sunroof is in the fully open, closed, or tilt position(s). Damage to the motor or system components could occur.

FarmaSOS.com

#### \* NOTICE

The sunroof cannot slide when it is in the tilt position nor can it be tilted while in an open or slide position.

## **A** WARNING

Never adjust the sunroof or sunshade while driving. This could result in loss of control and an accident that may cause death, serious injury, or property damage.




D110100AEN

# Sliding the sunroof

To open or close the sunroof (manual slide feature), pull or push the sunroof control lever backward or forward to the first detent position.

Pulling the control lever downward also closes the sunroof.

To open or close the sunroof completely even when the lever is released (auto slide feature), pull or push the sunroof control lever backward or forward to the second detent position. The sunroof will slide all the way open or closed. To stop the sunroof sliding at any point, pull or push the sunroof control lever momentarily in the opposite direction of sunroof movement

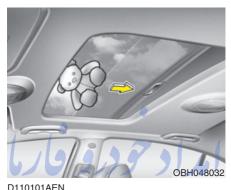

Automotic #

#### Automatic reversal

If an object or part of the body is detected while the sunroof is closing automatically, it will reverse direction, and then stop.

The auto reverse function does not work if a tiny obstacle is between the sliding glass and the sunroof sash. You should always check that all passengers and objects are away from the sunroof before closing it.



D110200ABH

### Tilting the sunroof

To open or close the sunroof, push or pull the sunroof control lever upward or downward until the sunroof moves to the desired position.

Pushing the control lever forward also closes the sunroof.

# **WARNING - Sunroof**

- Be careful that someone's head, hands and body are not trapped by a closing sunroof.
- Do not extend the face, neck, arms or body outside through the sunroof opening while driving.
- Make sure your hands and face are safely out of the way before closing a sunroof.

# **A** CAUTION

- Periodically remove any dirt that may accumulate on the guide rail.
- If you try to open the sunroof when the temperature is below freezing or when the sunroof is covered with snow or ice, the glass or the motor could be damaged.
- While using sunroof for a long time, a dust between sunroof and roof panel can make a noise.
   Open the sunroof and regularly remove the dust using clean cloth.



D110300ABH

#### Sunshade

The sunshade will automatically open with the glass panel when the glass panel moves. Close it manually if you want it closed.

FarmaSOS.com

# **A** CAUTION

The sunroof is made to slide together with the sunshade. Do not leave the sunshade closed while the sunroof is open.

D110500BBH

# Resetting the sunroof

Whenever the vehicle battery is disconnected or discharged, or related fuse is blown, you must reset your sunroof system as follows:

- Turn the ignition switch to the ON position and close the sunroof completely.
- 2. Type A: Release the control lever.
  - Type B: Press and hold the control lever upward until the sunroof tilts completely upward. Then, release the lever.
- Type A: Pull and hold the control lever downward until the sunroof tilts and slightly moves up and down. Then, release the lever.
  - Type B: Press and hold the control lever upward until the sunroof slightly moves up and down. Then, release the lever.

 Pull and hold the control lever downward (Type B: Press and hold the control lever upward) until the sunroof is operated as follows;

TILT DOWN  $\rightarrow$  SLIDE OPEN  $\rightarrow$  SLIDE CLOSE

Then, release the control lever.

When this is complete, the sunroof system is reset.

\* For more detailed information, contact an authorized HYUNDAI dealer.

# **A** CAUTION

If the sunroof is not reset when the vehicle battery is disconnected or discharged, or related fuse is blown, the sunroof may operate improperly.

# DRIVER POSITION MEMORY SYSTEM (IF EQUIPPED)



#### D120000AEN

A driver position memory system is provided to store and recall the driver seat, outside rearview mirror and steering wheel positions with a simple button operation. By saving the desired positions into the system memory, different drivers can reposition the driver seat, outside rearview mirror and steering wheel based upon their driving preference. If the battery is disconnected, the position memory will be lost and the driving positions should be restored in the system.

#### \* NOTICE

The buzzer sounds 10 times if there is a malfunction of the memory system. Have the driver position memory system checked by an authorized HYUNDAI dealer.

# **WARNING**

Never attempt to operate the driver position memory system while the vehicle is moving.

This could result in loss of control, and an accident causing death, serious injury, or property damage.

# Storing positions into memory using the buttons on the door

D120101ABH

Storing driver's seat positions

- 1. Shift the shift lever into P while the ignition switch is ON.
- Adjust the driver seat, outside rearview mirror and steering wheel to positions comfortable for the driver.
- Press SET button on the control panel. The system will beep once.
- Press one of the memory buttons (1 or 2) within 5 seconds after pressing the SET button. The system will beep twice when memory has been successfully stored.

#### D120102ABH

Recalling positions from memory

- 1. Shift the shift lever into P while the ignition switch is ON.
- To recall the position in memory, press the desired memory button (1 or 2).
   The system will beep once, then the driver seat, outside rearview mirror and steering wheel will automatically adjust to the stored positions.

Adjusting one of the control knobs for the driver seat, outside rearview mirror and steering wheel while the system is recalling the stored positions will cause the movement for that component to stop and move in the direction that the control knob is moved. Other components will continue to the recalled position.

# **WARNING**

Use caution when recalling adjustment memory while sitting in the vehicle. Push the seat position control knob to the desired position immediately if the seat moves too far in any direction. D120300ABH

# Easy access function (if equipped)

With the shift lever in the P position, the system will move the steering wheel forward and driver's seat rearward automatically so you can comfortably enter and exit the vehicle.

- · Without smart key system
  - It will move the steering wheel away from the driver and the driver's seat rearward when the ignition key is removed.
  - It will move the steering wheel toward the driver and the driver's seat forward when the ignition key is inserted.
- · With smart key system
  - It will move the steering wheel away from the driver and the driver's seat rearward when the ENGINE START/STOP button is turned to the OFF position.
  - It will move the steering wheel toward the driver and the driver's seat forward when the ENGINE START/STOP button is turned to the ACC position.

#### \* NOTICE

You can activate or deactivate the easy access function in the INFO menu of DIS (Driver Information System, if equipped) as follows (if equipped);

- Seat easy access
- Steering easy access

If you want detailed informations, refer to the DIS manual (if equipped) supplied separately.

امداد خودرو جارما

تلفن شبانه روزی: ۱۲۰۸۸۶۲۰۸۸ - ۲۰

FarmaSOS.com



D120400BBH

# Reverse parking aid function (if equipped)

When you shift the shift lever to the R (Reverse) position, the outside rearview mirror(s) will move downward to aid reverse parking. According to the position of the outside rearview mirror switch (1), the outside rearview mirror(s) will operate as follows:

Left/Right: When the remote control outside rearview mirror switch is in the left/right position, both outside rearview mirrors will move downward.

Neutral: When the remote control outside rearview mirror switch is in the middle position, the outside rearview mirrors will not operate.

#### \* NOTICE

The outside rearview mirrors will automatically revert to their original positions under the following conditions:

- 1. Ignition switch is turned to the LOCK or ACC position.
- 2. Shift lever is moved to any position except R.
- 3. Remote control outside rearview mirror switch is placed in the middle position.



FarmaSOS.com

#### STEERING WHEEL

D130100ABH

### Power steering

Power steering uses energy from the engine to assist you in steering the vehicle. If the engine is off or if the power steering system becomes inoperative, the vehicle may still be steered, but it will require increased steering effort.

Should you notice any change in the effort required to steer during normal vehicle operation, have the power steering checked by an authorized HYUNDAI dealer.

# Electronic Hydraulic Power Steering (EHPS) (if equipped)

EHPS uses an electromotor to assist you in steering the vehicle. It senses the vehicle speed and road condition.

If the engine is off or if the power steering system becomes inoperative, the vehicle may still be steered, but it will require increased steering effort.

Should you notice any change in the effort required to steer during normal vehicle operation, have the power steering checked by an authorized HYUNDAI dealer.

# **A** CAUTION

Never hold the steering wheel against a stop (extreme right or left turn) for more than 5 seconds with the engine running. Holding the steering wheel for more than 5 seconds in either position may cause damage to the power steering pump.

#### \* NOTICE

If the power steering drive belt breaks or if the power steering pump malfunctions, the steering effort will greatly increase.

#### \* NOTICE

If the vehicle is parked for extended periods outside in cold weather (below -10°C/14°F), the power steering may require increased effort when the engine is first started. This is caused by increased fluid viscosity due to the cold weather and does not indicate a malfunction.

When this happens, increase the engine RPM by depressing accelerator until the RPM reaches 1,500 rpm then release or let the engine idle for two or three minutes to warm up the fluid.

#### D130300AEN

#### Tilt steering

Tilt steering allows you to adjust the steering wheel before you drive. You can also raise it to give your legs more room when you exit and enter the vehicle.

The steering wheel should be positioned so that it is comfortable for you to drive, while permitting you to see the instrument panel warning lights and gauges.

### **WARNING**

- Never adjust the angle of the steering wheel while driving. You may lose steering control and cause severe personal injury, death or accidents.
- After adjusting, push the steering wheel both up and down to be certain it is locked in position.



D130301ABH

Manual type

To change the steering wheel angle, pull up the lock-release lever (1), adjust the steering wheel to the desired angle (2), then pull down the lock-release lever to lock the steering wheel in place. Be sure to adjust the steering wheel to the desired position before driving.



D130302ABH

Electric type

Adjust the steering wheel angle (2) and position (3) with the knob (1). Never adjust the position of the steering wheel while driving.



# Heated steering wheel (if equipped)

With the ignition switch in the ON position, pressing the heated steering wheel button warms the steering wheel. The indicator on the button is illuminated. To turn the heated steering wheel off, press the button once again. The indicator on the button is turned off.

Approximately 30 minutes after the heated steering wheel is turned on, it will be turned off automatically.

# **A** CAUTION

Do not install any grip for convenient to operate the steering wheel. This causes damage to the heated steering wheel system.



D130500AUN

#### Horn

To sound the horn, press the horn symbol on your steering wheel. Check the horn regularly to be sure it operates properly.

# \*NOTICE a SOS. com

To sound the horn, press the area indicated by the horn symbol on your steering wheel (see illustration). The horn will operate only when this area is pressed.

# **A** CAUTION

Do not strike the horn severely to operate it, or hit it with your fist. Do not press on the horn with a sharppointed object.

#### **MIRRORS**

D140100AUN

#### Inside rearview mirror

Adjust the rearview mirror to center on the view through the rear window. Make this adjustment before you start driving.

#### **WARNING** - Rear visibility

Do not place objects in the rear seat or cargo area which would interfere with your vision through the rear window.



#### **WARNING**

Do not modify the inside mirror and do not install a wide mirror. It could result in injury, during an accident or deployment of the air bag.

D140102AUN

#### Electric chromic mirror (ECM)


The electric chromic mirror automatically controls the glare from the headlights of the car behind you in nighttime or low light driving conditions. The sensor mounted in the mirror senses the light level around the vehicle, and automatically controls the headlight glare from vehicles behind you.

When the engine is running, the glare is automatically controlled by the sensor mounted in the rearview mirror.

Whenever the shift lever is shifted into R (Reverse), the mirror will automatically go to the brightest setting in order to improve the drivers view behind the vehicle.



When cleaning the mirror, use a paper towel or similar material dampened with glass cleaner. Do not spray glass cleaner directly on the mirror as that may cause the liquid cleaner to enter the mirror housing.

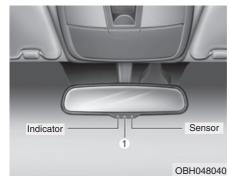

To operate the electric rearview mirror:

- Press the ON/OFF button (1) to turn the automatic dimming function on. The mirror indicator light will illuminate. Press the ON/OFF button to turn the automatic dimming function off. The mirror indicator light will turn off.
- The mirror defaults to the ON position whenever the ignition switch is turned on.

D140200AUN

#### **Outside rearview mirror**

Be sure to adjust mirror angles before driving.

Your vehicle is equipped with both lefthand and right-hand outside rearview mirrors. The mirrors can be adjusted remotely with the remote switch. The mirror heads can be folded back to prevent damage during an automatic car wash or when passing in a narrow street.

# WARNING - Rearview mirrors

- The right outside rearview mirror is convex. In some countries, the left outside rearview mirror is also convex. Objects seen in the mirror are closer than they appear.
- Use your interior rearview mirror or direct observation to determine the actual distance of following vehicles when changing lanes.

# **A** CAUTION

Do not scrape ice off the mirror face; this may damage the surface of the glass. If ice should restrict movement of the mirror, do not force the mirror for adjustment. To remove ice, use a deicer spray, or a sponge or soft cloth with very warm water.

# **A** CAUTION

If the mirror is jammed with ice, do not adjust the mirror by force. Use an approved spray de-icer (not radiator antifreeze) to release the frozen mechanism or move the vehicle to a warm place and allow the ice to melt.

# **WARNING**

Do not adjust or fold the outside rearview mirrors while the vehicle is moving. This could result in loss of control, and an accident which could cause death, serious injury or property damage.



D140201ABH

#### Remote control

The electric remote control mirror switch allows you to adjust the position of the left and right outside rearview mirrors. To adjust the position of either mirror, move the lever (1) to right or left to select the right side mirror or the left side mirror, then press a corresponding point ( $\triangle$ ) on the mirror adjustment control to position the selected mirror up, down, left or right. After adjustment, put the lever into neutral position to prevent the inadvertent adjustment.

# **A** CAUTION

- The mirrors stop moving when they reach the maximum adjusting angles, but the motor continues to operate while the switch is depressed. Do not depress the switch longer than necessary, the motor may be damaged.
- Do not attempt to adjust the outside rearview mirror by hand.
   Doing so may damage the parts.

# Electric chromic mirror (ECM) (if equipped)

The electric chromic mirror automatically controls the glare from the headlights of the car behind you in nighttime or low light driving conditions. The sensor mounted in the mirror senses the light level around the vehicle, and automatically controls the headlight glare from vehicles behind you.

When the engine is running, the glare is automatically controlled by the sensor mounted in the rearview mirror.

Whenever the shift lever is shifted into R (Reverse), the mirror will automatically go to the brightest setting in order to improve the drivers view behind the vehicle. If the ECM of inside rear view mirror operates, it will be working

# 1 CAUTION S.COM

When cleaning the mirror, use a paper towel or similar material dampened with glass cleaner. Do not spray glass cleaner directly on the mirror as that may cause the liquid cleaner to enter the mirror housing.



D140202ABH

# Folding the outside rearview mirror Electric Type

To fold the outside rearview mirror, depress the button.

To unfold it, depress the button again.

### **A** CAUTION

In case of the electric type of outside rearview mirror, don't fold it by hand. It could cause the failure of the motor.

The ignition switch must be in the ON position for the electric outside rearview mirrors to fold.

The electric folding outside rearview mirror can be operated for approximately 30 seconds after the ignition key is removed or turned to the LOCK position.

### **INSTRUMENT CLUSTER**

■ Type I



- 1. Tachometer
- 2. Turn signal indicators
- 3. Speedometer
- 4. Engine temperature gauge
- 5. Warning and indicator lights
- 6. Fuel gauge\*
- 7. LCD screen
- 8. Low washer fluid level warning light\*
  - SCC sensor malfunction indicator\*

    AUTO HOLD malfunction indicator\*
- 9. Shift pattern indicator
- 10. ₹! SCC malfunction indicator\*
  - Charging system warning light
- \*: if equipped
- \* The actual cluster in the vehicle may differ from the illustration.

For more details refer to the "Gauges" in the next pages.


OBH042045L





- 1. Tachometer
- 2. Turn signal indicators
- 3. Speedometer
- 4. Engine temperature gauge
- 5. Warning and indicator lights
- 6. Fuel gauge\*
- 7. LCD screen
- 8. LDWS malfunction indicator\*
  - ₹! SCC malfunction indicator\*
  - SCC sensor malfunction indicator\*
- 9. Charging system warning light
  - Low washer fluid level warning light\*
  - Trunk ajar warning light
- 10. AUTO HOLD indicator/ AUTO HOLD malfunction indicator\*
- 11. Shift pattern indicator
- \*: if equipped
- \* The actual cluster in the vehicle may differ from the illustration. For more details refer to the "Gauges" in the next pages.

OBH042300L

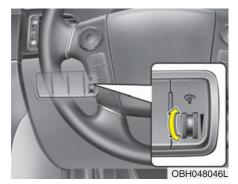

D150100AUN

# Instrument panel illumination

When the vehicle's parking lights or headlights are on, rotate the illumination control knob to adjust the instrument panel illumination intensity.



# Gauges

D150201AUN

#### Speedometer

The speedometer indicates the forward speed of the vehicle.

The speedometer is calibrated in miles per hour and/or kilometers per hour.



D150202AUN **Tachometer** 

The tachometer indicates the approximate number of engine revolutions per minute (rpm).

Use the tachometer to select the correct shift points and to prevent lugging and/or over-revving the engine. When the door is open, or if the engine is not started within 1 minute, the tachometer pointer may move slightly in ON position with the engine OFF. This movement is normal and will not affect the accuracy of the tachometer once the engine is running.

# ↑ CAUTION

Do not operate the engine within the tachometer's RED ZONE. This may cause severe engine damage.



D150203AUN

### Engine temperature gauge

This gauge shows the temperature of the engine coolant when the ignition switch is ÕN.

Do not continue driving with an overheated engine. If your vehicle overheats, refer to "If the engine overheats" in section 6.

### **A** CAUTION

If the gauge pointer moves beyond the normal range area toward the "H" position, it indicates overheating that may damage the engine.

# **WARNING**

Never remove the radiator cap when the engine is hot. The engine coolant is under pressure and could cause severe burns. Wait until the engine is cool before adding coolant to the reservoir.



D150204BBH

#### Fuel gauge

The fuel gauge indicates the approximate amount of fuel remaining in the fuel tank. The fuel tank capacity is given in section 8. The fuel gauge is supplemented by a low fuel warning light, which will illuminate when the fuel tank is near empty.

On inclines or curves, the fuel gauge pointer may fluctuate or the low fuel warning light may come on earlier than usual due to the movement of fuel in the tank.

A WARNING - Fuel gauge
Running out of fuel can expose
vehicle occupants to danger.

You must stop and obtain additional fuel as soon as possible after the warning light comes on or when the gauge indicator comes close to the E level.

# **CAUTION**

Avoid driving with a very low fuel level. If you run out of fuel, it could cause the engine to misfire and result in excessive loading of the catalytic converter.

FarmaSOS.com

D150206ABH


#### Trip computer

The trip computer is a microcomputer-controlled driver information system that displays information related to driving, including odometer, tripmeter, elapsed time, average speed, average fuel consumption (if equipped), instant fuel consumption and distance to empty on the display when the ignition switch is in the ON position. All stored driving information (except odometer) is reset if the battery is disconnected.



#### **TRIP Button**

Push the TRIP button for less than 1 second to select tripmeter function as follows:





#### Odometer (km or mi.)

The odometer indicates the total distance the vehicle has been driven.

You will also find the odometer useful to determine when periodic maintenance should be performed.

FarmaSOS.com



Tripmeter (km or mi.)
TRIP A: Tripmeter A
TRIP B: Tripmeter B


This mode indicates the distance of individual trips selected since the last tripmeter reset.

The meter's working range is from 0.0 to 999.9 km (0.0 to 999.9 miles).

Pressing the TRIP button for more than 1 second, when the tripmeter (TRIP A or TRIP B) is being displayed, clears the tripmeter to zero (0.0).



**DISP Button**Press the DISP button to change between modes.

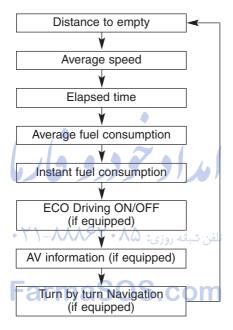



#### Distance to empty (km or mi.)

This mode indicates the estimated distance to empty based on the current fuel in the fuel tank and the amount of fuel delivered to the engine. When the remaining distance is below 50 km (30 miles), "---" will be displayed and the distance to empty indicator will blink.

The meter's working range is from 50 to 990 km (30 to 990 miles).



### Average speed (km/h or MPH)

This mode calculates the average speed of the vehicle since the last average speed reset.

Even if the vehicle is not in motion, the average speed keeps going while the engine is running.

Pressing the DISP button (or the RESET button) for more than 1 second, when the average speed is being displayed, clears the average speed to zero (---). If the ignition switch is turned to OFF for more than 2 hours, it will be reset automatically.




#### Elapsed time

This mode indicates the total time traveled since the last driving time reset.

Even if the vehicle is not in motion, the driving time keeps going while the engine is running.

The meter's working range is from 0:00~99:59.

Pressing the DISP button (or the RESET button) for more than 1 second, when the driving time is being displayed, clears the driving time to zero (0:00). If the ignition switch is turned to OFF for more than 2 hours, it will be reset automatically.

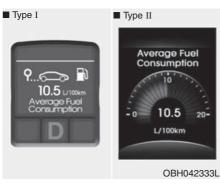

#### Average fuel consumption (if equipped) (1/100 km or MPG)

This mode calculates the average fuel consumption from the total fuel used and the distance since the last average consumption reset. The total fuel used is calculated from the fuel consumption input. For an accurate calculation, drive more than 50 m (0.03 miles).

Pressing the DISP button (or the RESET button) for more than 1 second, when the average fuel consumption is being displayed, clears the average fuel consumption to zero (---).

If the vehicle speed exceeds 1 km/h after refueled more than 6 *l*, the average fuel consumption will be cleared to zero (---).



# Instant fuel consumption (l/100 km or MPG)

This mode calculates the instant fuel consumption every 0.2 second from the driving distance and quantity of fuel injection.

#### \* NOTICE


- If the vehicle is not on level ground or the battery power has been interrupted, the "Distance to empty" function may not operate correctly.
  - The trip computer may not register additional fuel if less than 6 liters (1.6 gallons) of fuel are added to the vehicle.
- The fuel consumption (if equipped) and distance to empty values may vary significantly based on driving conditions, driving habits, and condition of the vehicle.
- The distance to empty value is an estimate of the available driving distance.

  This value may differ from the actual driving distance available.

  Output

  Description:

FarmaSOS.com

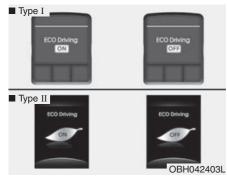

ECO Driving ON/OFF mode (if equipped) You can turn the ECO indicator on/off on the instrument cluster in this mode.

If you push the DISP button (or the RESET button) more than 1 second in the ECO Driving ON mode, ECO Driving OFF is displayed in the screen and the ECO indicator turns off while driving.

If you want to display the ECO indicator again, press the DISP button (or the RESET button) more than 1 second in the ECO Driving OFF mode and then ECO Driving ON mode is displayed in the screen.



AV information (if equipped) This mode displays the state of the AV (RADIO, CD, USB, AUX etc.).



Turn by turn navigation (if equipped) This mode displays the information of the navigation. تلفن شيانه روزي: ۱۹۸۸ ۲۰۸۵ تلفن شيانه روزي:

D150300AFN

# Warnings and indicators

All warning lights are checked by turning the ignition switch ON (do not start the engine). Any light that does not illuminate should be checked by an authorized HYUNDAI dealer.

After starting the engine, check to make sure that all warning lights are off. If any are still on, this indicates a situation that needs attention. When releasing the parking brake, the brake system warning light should go off. The fuel warning light will stay on if the fuel level is low.

FarmaSOS.com

ECO indicator (if equipped)

**ECO** 

The ECO indicator is a system that informs you to drive economically. It is displayed if you drive fuel efficiently to help you improve fuel efficiency.

- The ECO indicator (green) will turn on when you are driving fuel efficiently in the ECO Driving ON mode.
  - If you don't want the indicator displayed, you can turn the ECO Driving ON mode to OFF mode by pressing the DISP button (or the RESET button).
  - As per ECO Driving ON/OFF mode operation, refer to the previous page.
- The fuel-efficiency can be changed by the driver's driving habit and road condition.
- It doesn't work at the condition which doesn't meet economical driving such as P (Park), N (Neutral), R (Reverse) or sports mode.
- While the instant fuel consumption mode is displayed on the LCD screen, the ECO indicator turns off (if equipped).

# **A** WARNING

Don't keep watching the indicator while driving. It will distract you while driving and cause an accident that results in severe personal injury.



تلفن شبانه روزی: ۱۳۸۸۶۲۰۸۵ وزی:

FarmaSOS.com

ECO-P indicator (if equipped)

With intelligent accelerator pedal (if equipped)



The ECO-P (pedal) indicator light will illuminate when the ECO-P button is pressed. If the fuel efficiency is low, the reactive force of intelligent accelerator pedal will be increased. It is allow to control over excess acceleration and you can drive fuel efficiently to help you improve fuel efficiency.

If you press the ECO-P button again, the indicator light turns off and the intelligent accelerator pedal is not operated in ECO driving mode.

For more information, refer to "Intelligent accelerator pedal" in section 5.

D150302ABH Air bag warning light



This warning light will illuminate for approximately 6 seconds each time you turn the ignition switch to the ON position.

This light also comes on when the Supplemental Restraint System (SRS) is not working properly. If the SRS air bag warning light \*does not come on, or continuously remains on after operating for about 6 seconds when you turned the ignition switch to the ON position or started the engine, or if it comes on while driving, have the SRS inspected by an authorized HYUNDAI dealer

D150303AFN Anti-lock brake system (ABS) warning light



This light illuminates if the ignition switch is turned ON and goes off in approximately 3 seconds if the system is operating normally.

If the ABS warning light remains on, comes on while driving, or does not come on when the ignition switch is turned to the ON position, this indicates that there may be a malfunction with the ABS.

If this occurs, have your vehicle checked by an authorized HYUNDAI dealer as soon as possible. The normal braking system will still be operational, but without the assistance of the anti-lock brake system.

FarmaSOS.com

Electronic brake force distribution (EBD) system warning light



If two warning lights illuminate at the same time while driving, your vehicle may have a malfunction with the ABS and EBD system.



In this case, your ABS and regular brake system may not work normally. Have the vehicle checked by an authorized HYUNDAI dealer as soon as possible.

# **WARNING**

If the both ABS and brake warning lights are on and stay on, your vehicle's brake system will not work normally during sudden braking. In this case, avoid high speed driving and abrupt braking. Have your vehicle checked by an authorized HYUNDAI dealer as soon as possible.

#### \* NOTICE

If the ABS warning light or EBD warning light is on and stays on, the speedometer or odometer/tripmeter may not work. In this case, have your vehicle checked by an authorized HYUNDAI dealer as soon as possible.

D150304AFN-FF Seat belt warning



#### Seat belt warning light

As a reminder to the driver, the seat belt warning light will blink for approximately 6 seconds each time you turn the ignition switch ON regardless of belt fastening. If the driver's seat belt is unfastened after the ignition switch is ON, the seat belt warning light blinks again for approximately 6 seconds.

Seat belt warning chime (if equipped)

If the driver's seat belt is not fastened when the ignition switch is turned ON. the seat belt warning chime will sound for approximately 6 seconds. At this time, if the seat belt is fastened, the chime will stop at once.

D150305AUN Turn signal indicator



The blinking green arrows on the instrument panel show the direction indicated by the turn signals. If the arrow comes on but does not blink, blinks more rapidly than normal, or does not illuminate at all, a malfunction in the turn signal system is indicated. Your dealer should be consulted for repairs.

D150306AUN High beam indicator

+ 7 1 - 1 1 1 1 1 1 1 1 1



This indicator illuminates when the headlights are on and in the high beam position or when the turn signal lever is pulled into the Flash-to-Pass position.

D150331ABH Tail light indicator



This indicator illuminates when the tail lights are on.

D150307AFN Engine oil pressure warning light



This warning light indicates the engine oil pressure is low.

If the warning light illuminates while driving:

- 1. Drive safely to the side of the road and stop.
- 2. With the engine off, check the engine oil level. If the level is low, add oil as required.

If the warning light remains on after adding oil or if oil is not available, call an authorized HYUNDAI dealer.

#### **!**\CAUTION

If the engine is not stopped immediately after the engine oil pressure warning light is illuminated, severe damage could result.

# **A** CAUTION

If the oil pressure warning light stays on while the engine is running, serious engine damage may result. The oil pressure warning light comes on whenever there is insufficient oil pressure. In normal operation, it should come on when the ignition switch is turned on, then go out when the engine is started. If the oil pressure warning light stays on while the engine is running, there is a serious malfunction.

If this happens, stop the car as soon as it is safe to do so, turn off the engine and check the oil level. If the oil level is low, fill the engine oil to the proper level and start the engine again. If the light stays on with the engine running, turn the engine off immediately. In any instance where the oil light stays on when the engine is running, the engine should be checked by an authorized HYUNDAI dealer before the car is driven again.

D150308AEN

Parking brake & brake fluid warning light



#### Parking brake warning

This light is illuminated when the parking brake is applied with the ignition switch in the START or ON position. The warning light should go off when the parking brake is released while the engine is running.

The parking brake warning chime will sound to remind you that the parking brake is applied when you are driving above 10 km/h (6 mph). Always release the parking brake before you drive.

تلفن شبانه روزی: ۱۹۰۵-۱۸۸۹ ۲۹۸۸-۲۱

FarmaSOS.com

#### Low brake fluid level warning

If the warning light remains on, it may indicate that the brake fluid level in the reservoir is low.

If the warning light remains on:

- 1. Drive carefully to the nearest safe location and stop your vehicle.
- With the engine stopped, check the brake fluid level immediately and add fluid as required. Then check all brake components for fluid leaks.
- Do not drive the vehicle if leaks are found, the warning light remains on or the brakes do not operate properly. Have the vehicle towed to any authorized HYUNDAI dealer for a brake system inspection and necessary repairs.

Your vehicle is equipped with dual-diagonal braking systems. This means you still have braking on two wheels even if one of the dual systems should fail. With only one of the dual systems working, more than normal pedal travel and greater pedal pressure are required to stop the car. Also, the car will not stop in as short a distance with only a portion of the brake system working. If the brakes fail while you are driving, shift to a lower gear for additional engine braking and stop the car as soon as it is safe to do so.

To check bulb operation, check whether the parking brake and brake fluid warning light illuminates when the ignition switch is in the ON position.



Driving the vehicle with a warning light on is dangerous. If the brake warning light remains on, have the brakes checked and repaired immediately by an authorized HYUNDAI dealer.

D150331ABH

Low tire pressure
telltale (if equipped)



Low tire pressure position telltale (if equipped)



The low tire pressure telltale comes on for 3 seconds after the ignition switch is turned to the ON position.

If the warning light does not come on, or continuously remains on after coming on for about 3 seconds when you turned the ignition switch to the ON position, the Tire Pressure Monitoring System is not working properly. If this occurs, have your vehicle checked by an authorized HYUNDAI dealer as soon as possible.

These warning lights will also illuminate if one or more of your tires are significantly under-inflated. The low tire pressure position telltale (supplemental) indicates which tire is significantly under-inflated by illuminating the corresponding position light. You should stop and check your tires as soon as possible. If the warning lights illuminate while driving, reduce vehicle speed immediately and stop the vehicle. Avoid hard braking and overcorrecting at the steering wheel. Inflate the tires to the proper pressure as indicated on the vehicle's tire information placard.

# **▲** WARNING - Low tire pressure

Significantly low tire pressure makes the vehicle unstable and can contribute to loss of vehicle control and increased braking distances.

Continued driving on low pressure tires will cause the tires to overheat and fail.

D150332AEN

TPMS (Tire Pressure Monitoring System) malfunction indicator (if equipped)

**TPMS** 

The TPMS malfunction indicator comes on for 3 seconds after the ignition switch is turned to the ON position. If the warning light does not come on, or continuously remains on after coming on for about 3 seconds when you turned the ignition switch to the ON position, the Tire Pressure Monitoring System is not working properly. If this occurs, have your vehicle checked by an authorized HYUNDAI dealer as soon as possible.

The warning light also comes on and stays on when there is a problem with the Tire Pressure Monitoring System.

If this happens, the system may not monitor the tire pressure. Have the system checked by an authorized HYUNDAI dealer as soon as possible.

# **WARNING** - Safe stopping

- The TPMS cannot alert you to severe and sudden tire damage caused by external factors.
- If you feel any vehicle instability, immediately take your foot off the accelerator, apply the brakes gradually and with light force, and slowly move to a safe position off the road.

For more information about the TPMS, refer to "Tire Pressure Monitoring System" in section 6.

D150312ABH

Shift pattern indicator



PRND

D150313AEN

Charging system warning light



The indicator displays to show the automatic transmission shift lever selection.

D150309AUN
Front fog light indicator
(if equipped)



This light comes on when the front fog lights are ON.

This warning light indicates a malfunction of either the generator or electrical charging system.

If the warning light comes on while the vehicle is in motion:

- 1. Drive to the nearest safe location.
- With the engine off, check the generator drive belt for looseness or breakage.
- 3. If the belt is adjusted properly, a problem exists somewhere in the electrical charging system. Have an authorized HYUNDAI dealer correct the problem as soon as possible.

FarmaSOS.com

D150315AHD

Trunk lid open warning light



This warning light illuminates when the trunk lid is not closed securely with the ignition in any position.

D150316AUN

Door ajar warning light



This warning light illuminates when a door is not closed securely with the ignition in any position.

D150317ABH Immobilizer indicator



#### Without smart key system

This light illuminates when the immobilizer key is inserted and turned to the ON position to start the engine.

At this time, you can start the engine. The light goes out after the engine is running. If this light blinks when the ignition switch is in the ON position before starting the engine, have the system checked by an authorized HYUNDAI dealer.

#### With smart key system (if equipped)

If any of the following occurs in a vehicle equipped with the smart key, the immobilizer indicator illuminates, blinks or the light goes off.

- When the smart key is in the vehicle, if the engine start/stop button is turned to the ACC or ON position, the indicator will illuminate until the engine is started. However, when the smart key is not in the vehicle, if the engine start/stop button is depressed, the indicator will blink for a few minutes to indicate that you will not be able to start the engine.
- When the ignition switch is turned to the ON position and the indicator turns off after 2 seconds, the system may have a problem. Have the vehicle checked by an authorized HYUNDAI dealer.
- When the battery is weak, if the engine start/stop button is depressed, the indicator will blink and you will not be able to start the engine. However, you may still be able to start the engine by inserting the smart key in the smart key holder. If smart key system related parts have a problem, the indicator blinks

D150318AUN

Low fuel level warning light



This warning light indicates the fuel tank is nearly empty. When it comes on, you should add fuel as soon as possible. Driving with the fuel level warning light on or with the fuel level below "E" can cause the engine to misfire and damage the catalytic converter.

D150319AUN

Low washer fluid level

warning light (if equipped)



This warning light indicates the washer fluid reservoir is near empty. Refill the washer fluid as soon as possible.

D150320ABH-FF

Malfunction indicator light (MIL) (check engine light)



This indicator light is part of the Engine Control System which monitors various emission control system components. If this light illuminates while driving, it indicates that a potential malfunction has been detected somewhere in the emission control system.

This light will also illuminate when the ignition switch is turned to the ON position, and will go out in a few seconds after the engine is started. If it illuminates while driving, or does not illuminate when the ignition switch is turned to the ON position, take your vehicle to your nearest authorized HYUNDAI dealer and have the system checked.

Generally, your vehicle will continue to be drivable, but have the system checked by an authorized HYUNDAI dealer promptly.

### ↑ CAUTION

Prolonged driving with the Malfunction Indicator Light illuminated may cause damage to the emission control systems which could effect drivability and/or fuel economy.

# **!**\ CAUTION

If the Malfunction Indicator Light illuminates, potential catalytic converter damage is possible which could result in loss of engine power. Have the Engine Control System inspected as soon as possible by an authorized HYUNDAI dealer.

FarmaSOS.com

D150323BBH-EE ESP (Electronic Stability Program) indicator

**ESP** 

The ESP indicator will illuminate when the ignition switch is turned ON, but should go off after approximately 3 seconds. If the indicator does not come on. or continuously remains on after coming on for about 3 seconds when you turned the ignition switch to the ON position, or if the indicator comes on while driving, the ESP is not working properly. Take vour car to an authorized HYUNDAI dealer and have the system checked.

When the ESP is on, it monitors the driving conditions and under normal driving conditions, the ESP light will remain off. When a slippery or low traction condition is encountered, the ESP will operate. and the ESP indicator will blink to indicate the ESP is operating.

D150324ABH-FF ESP OFF indicator

**ESP OFF** 

The ESP OFF indicator will illuminate when the ignition switch is turned ON, but should go off after approximately 3 seconds. To switch to ESP OFF mode. press the ESP OFF button. The ESP OFF indicator will illuminate indicating the ESP is deactivated.

D150325BBH

Cruise indicator (if equipped)

**CRUISE** indicator

CRUISE

The indicator light illuminates when the cruise control system is enabled.

The cruise indicator light in the instrument cluster is illuminated when the CRUISE button on the steering wheel is pushed.

The indicator light turns off when the CRUISE button is pushed again. For more information about the use of cruise control, refer to "Cruise control system or Smart cruise control system" in section 5.

Cruise SET indicator

**SET** 

The indicator light illuminates when the cruise function switch (SET- or RES+) is ON. The cruise SET indicator light in the instrument cluster or on the LCD screen is illuminated when the cruise control switch (SET- or RES+) is pushed. The cruise SET indicator light does not illuminate when the cruise control switch (CANCEL) is pushed or the system is disengaged.

D150320ABH

Smart cruise control indicator (if equipped)

SCC (Smart cruise control) malfunction indicator



The warning light illuminates when the vehicle to vehicle distance functioning is not operated correctly.

Take your vehicle to an authorized HYUNDAI dealer and have the system checked.

SCC (Smart cruise control) sensor malfunction indicator



If the sensor or cover is stained with foreign matter such as snow, the indicator will illuminate. Remove the stains around the sensor by using a soft cloth.

For more information about the use of smart cruise control, refer to "Smart cruise control system" in section 5.

LDWS indicator (if equipped)

LDWS

The LDWS indicator will illuminate when you turn the lane departure warning system on by pressing the LDWS switch.

LDWS malfunction indicator (if equipped)



If the LDWS malfunction indicator comes on, the LDWS is not working properly. Take your vehicle to an authorized HYUNDAI dealer and have the system checked.

D150327ABH

Key reminder warning chime (if equipped)

If the driver's door is opened while the ignition key is left in the ignition switch (ACC or LOCK position), the key reminder warning chime will sound. This is to prevent you from locking your keys in the vehicle. The chime sounds until the key is removed from the ignition switch or the driver's door is closed.

#### With smart key

If the driver's door is opened while the smart key is in the vehicle with the engine start/stop button in ACC or the smart key is in the smart key holder with the engine start/stop button in OFF, the key reminder warning chime will sound.

The chime sounds until the smart key is removed from the smart key holder or the driver's door is closed.

D150330AFN Overspeed warning (if equipped)

120 km/h

Overspeed warning light

If you drive with the speed of 120 km/h or more, the overspeed warning light will blink. This is to prevent you from driving your vehicle with overspeed.

Overspeed warning chime

If you drive with the speed of 120 km/h or more, the overspeed warning chime will sound for about 5 seconds. This is to prevent you from driving your vehicle with overspeed.

FarmaSOS.com

D150332ABH

EPB (Electric Parking Brake) malfunction indicator (if equipped)

**EPB** 

The EPB malfunction indicator will illuminate when the ignition switch is turned ON, but should go off after approximately 3 seconds. If the warning light does not come on, or continuously remains on after coming on for about 3 seconds when you turned the ignition switch to the ON position, the Electric Parking Brake is not working properly.

If it comes on while driving, the EPB is not working properly.

Take your vehicle to an authorized HYUNDAI dealer and have the system checked.

The EPB malfunction indicator may illuminate when the ESP indicator comes on to indicate that the ESP is not working properly, but if this occurs, it does not indicate malfunction of the FPB

D150333ABH **AUTO HOLD indicator** (if equipped)

**AUTO** HOLD

If you press the AUTO HOLD switch, the AUTO HOLD indicator on the cluster comes on white. And when you stop the vehicle completely by pressing the brake pedal, the indicator changes from white to green.

If the AUTO HOLD malfunction indicator on the LCD screen lights up yellow, the AUTO HOLD is not working properly. Take vour vehicle to an authorized HYUNDAI dealer and have the system checked.

For more information, refer to "AUTO HOLD" in section 5.

D150334ABH

AFLS (Adaptive Front Lighting System) malfunction indicator (if equipped)

**AFLS** 

ECS (Electronic Control Suspension) malfunction indicator (if equipped)

D150335ABH

**ECS** 

If the AFLS malfunction indicator comes on, the AFLS is not working properly. Drive to the nearest safe location and restart the engine. If the indicator continuously remains on, take your vehicle to an authorized HYUNDAI dealer and have the system checked.

SPORT indicator (if equipped) With electronic controlled suspension (if equipped)



The SPORT indicator light will illuminate when the SPORT button is pressed. It enables you to drive dynamically. The indicator light turns off when the SPORT button is pressed again. The sporty driving mode returns to the normal mode.

For more information, refer to "Electronic controlled suspension" in section 5.

The ECS malfunction indicator will illuminate when the ignition switch is turned ON, but should go off after approximately 3 seconds. If the warning light does not come on, or continuously remains on after coming on for about 3 seconds when you turned the ignition switch to the ON position, the ECS is not working properly.

If it comes on while driving, the electronic control suspension is not working properly.

Take your vehicle to an authorized HYUNDAI dealer and have the system checked.

ECS malfunction indicator may illuminate when the ESP indicator comes on to indicate that the ESP is not working properly, but it does not indicate malfunction of the ECS.

D150401ABH

# Warning on the LCD screen (if equipped)

Key is not in vehicle





If the smart key is not in the vehicle and if any door is opened or closed with the ignition switch in ACC, ON, or START, the warning illuminates on the LCD screen. The chime also sounds for 5 seconds when there smart key is not in the vehicle and any door is closed.

Turn the ignition switch off or get hold of the smart key.

D150402ABH

Key is not detected





If the smart key is not in the vehicle or is not detected and you push the engine start/stop button, the warning illuminates on the LCD screen for 10 seconds.

FarmaSOS.com

D150403ABH Low key battery





When the smart key in the vehicle discharges, the warning illuminates on the LCD screen for 10 seconds.

Replace the battery with a new one. If it is not possible, you can start the engine by inserting the smart key into the smart key holder and pushing the engine start/stop button.

# D150404ABH Press brake pedal to start engine





If the ignition switch turn to the ACC position twice by pushing the engine start/stop button repeatedly without pressing the brake pedal, the warning illuminates on the LCD screen for 10 seconds to indicate that you should press the brake pedal to start the engine.

# D150405ABH Shift to "P" position





If you push the engine start/ stop P button with the ignition switch ON and the shift lever not in P(Park), the warning illuminates on the LCD screen for 10 seconds to indicate that you should press the start/stop button with the shift lever in P(Park) to turn off the engine.

D150406ABH Remove key






When you turn off the engine with the smart key in the smart key holder, the warning illuminates on the LCD screen for 10 seconds.

Push the smart key inward and pull it out from the smart key holder.

#### D150407ABH Insert key





If you push the engine start/ stop button while the "Key is not detected" illuminates on the LCD screen, the warning illuminates for 10 seconds.

# D150408ABH Press start button again





If there is a problem with the engine start/ stop button system, the warning illuminates for 10 seconds to indicate that you could start the engine by pressing the engine start/ stop button while pressing the brake pedal.

If the warning illuminates each time you push the start/stop button, take your vehicle to an authorized HYUNDAI dealer and have the system checked.

#### D150409ABH

Shift to "P" or "N" to start the engine





If you try to start the engine with the sift lever not in P(Park) or N(Neutral), the warning illuminates for 10 seconds on the LCD screen.

You can also start the engine with the shift lever in N(Neutral), but for your safety start the engine with the shift lever in P(Park).

#### D150410ABH

Press start button while turn steering





When the steering wheel does not unlock, the warning illuminates for 10 seconds on the LCD screen.

D150411ABH

Check steering wheel lock





When the steering wheel does not lock, the warning illuminates for 10 seconds on the LCD screen.

تلفن شبانه روزی: ۱۵۸۰۶۲۰۸۵ ۲۲۰ تلفن شبانه روزی: ۱۳۵۰ ۲۵۸۸۶۲۰۲۰

FarmaSOS.com

D150412ABH

Check stop lamp fuse






When the stop lamp fuse is disconnected, the warning illuminates for 10 seconds on the LCD screen.

Replace the fuse with a new one. If that is not possible you can start the engine by pressing the engine start/stop button for 10 seconds with the ignition switch in ACC.

### PARKING ASSIST SYSTEM (IF EQUIPPED)

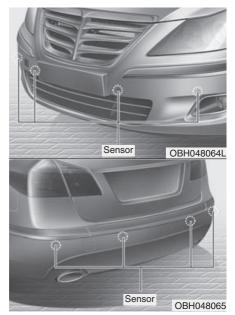

D170000ABH


The parking assist system assists the driver during movement of the vehicle by chiming if any object is sensed within the distance of 60 cm in front and 100 cm in behind the vehicle. This system is a supplemental system and it is not intended to nor does it replace the need for extreme care and attention of the driver.

The sensing range and objects detectable by the sensors are limited. When moving the vehicle, pay as much attention to what is in front of and behind you as you would in a vehicle without a parking assist system.

## **WARNING**

The parking assist system should only be considered as a supplementary function. The driver must check the front and rear view. The operational function of the parking assist system can be affected by many factors and conditions of the surroundings, so the responsibility rests always with the driver.

## FarmaSOS.com

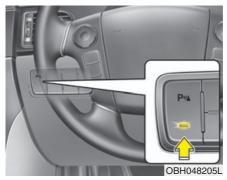

D170101ABH

## Operation of the parking assist system

#### Operating condition

- This system will activate when the parking assist button is pressed with the engine running.
- Sensing distance in backing up is approximately 100 cm when you are driving less than 10 km/h.
- Sensing distance in moving forward is approximately 60 cm when you are driving less than 10 km/h.
- When more than two objects are sensed at the same time, the closest one will be recognized first.

### \* NOTICE

It may not operate if it's distance from the object is already less than approximately 25 cm when the system is ON.

#### D170102ABH

### Types of warning sound

- When an object is 100 cm to 61 cm from the rear bumper: Buzzer beeps intermittently
- When an object is 60 cm to 31 cm from the front or rear bumper: Buzzer sounds two beeps intermittently
- When an object is within 30 cm of the front or rear bumper: Buzzer sounds continuously.

D170200ABH

## Non-operational conditions of parking assist system

Parking assist system may not operate normally when:

- Moisture is frozen to the sensor. (It will operate normally when moisture melts.)
- Sensor is covered with foreign matter, such as snow or water, or the sensor cover is blocked. (It will operate normally when the material is removed or the sensor is no longer blocked.)
- Sensor is stained with foreign matter such as snow or water. (Sensing range will return to normal when removed.)

تلفن شیانه روزی: ۱۵۸۸۶۲ ۲۸۸۸۶۲ ۲

FarmaSOS.com

## There is a possibility of parking assist system malfunction when:

- Driving on uneven road surfaces such as unpaved roads, gravel, bumps, or gradient.
- Objects generating excessive noise such as vehicle horns, loud motorcycle engines, or truck air brakes can interfere with the sensor.
- 3. Heavy rain or water spray.
- 4. Wireless transmitters or mobile phones present near the sensor.
- 5. Sensor is covered with snow.

#### Detecting range may decrease when:

- 1. Outside air temperature is extremely hot or cold.
- 2. Undetectable objects smaller than 1 m and narrower than 14 cm in diameter.

## The following objects may not be recognized by the sensor:

- 1. Sharp or slim objects such as ropes, chains or small poles.
- Objects, which tend to absorb sensor frequency such as clothes, spongy material or snow.

#### \* NOTICE

- 1. The warning may not sound sequentially depending on the speed and shapes of the objects detected.
- 2. The parking assist system may malfunction if the vehicle bumper height or sensor installation has been modified. Any non-factory installed equipment or accessories may also interfere with the sensor performance.
- 3. Sensor may not recognize objects less than 30 cm from the sensor, or it may sense an incorrect distance. Use with caution.
- 4. When the sensor is frozen or stained with snow or water, the sensor may be inoperative until the stains are removed using a soft cloth.
- 5. Do not push, scratch or strike the sensor with any hard objects that could damage the surface of the sensor. Sensor damage could occur.

#### \* NOTICE

This system can only sense objects within the range and location of the sensors, it can not detect objects in other areas where sensors are not installed. Also, small or slim objects, or objects located between sensors may not be detected. Always visually check in front and behind the vehicle when driving. Be sure to inform any drivers in the vehicle that may be unfamiliar with the

vehicle that may be unfamiliar with the system regarding the systems capabilities and limitations.

## **A WARNING**

Pay close attention when the vehicle is driven close to objects on the road, particularly pedestrians, and especially children. Be aware that some objects may not be detected by the sensors, due to the objects distance, size or material, all of which can limit the effectiveness of the sensor. Always perform a visual inspection to make sure the vehicle is clear of all obstructions before moving the vehicle in any direction.

D170400ABH


### **Self-diagnosis**

If you don't hear an audible warning sound or if the buzzer sounds intermittently when shifting the shift lever into the R (Reverse) position, this may indicate a malfunction in the rear parking assist system. If this occurs, have your vehicle checked by an authorized HYUNDAI dealer as soon as possible.

## **WARNING**

Your new vehicle warranty does not cover any accidents or damage to the vehicle or injuries to its occupants related to a parking assist system. Always drive safely and cautiously.

## FRONT BLIND SPOT MONITORING SYSTEM (IF EQUIPPED)

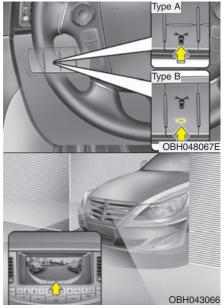

D340000ABH

Front blind spot monitoring system is a supplemental system that shows blind spot in front of the vehicle through the AV monitor

The front blind spot monitoring system will operate when you push the button and shift the shift lever into N(Neutral) or D(Drive) while driving less then 10km/h.

After the vehicle stops for 4 minutes with the shift lever in N(Neutral) or D(Drive), it will bring up the previous screen.

### **WARNING**

This is a supplementary system. It is the responsibility of the driver to always check the area around the vehicle before driving because there is a dead zone that can't be seen through the camera.


Always keep the camera lens clean. If the lens is covered with foreign matter, the camera may not operate normally.

#### \* NOTICE

The front blind spot monitoring system may not operate normally, when you drive in the extremely high or low temperature area.

(operating temperature: -20°C~65°C  $(-4^{\circ}F \sim 149^{\circ}F))$ 

## REARVIEW CAMERA (IF EQUIPPED)

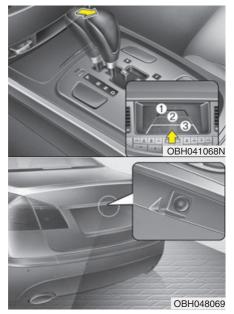

D330000ABH

The rearview camera will activate when the back-up light is ON with the ignition switch ON and the shift lever in the R position.

This system is a supplemental system that shows behind the vehicle through the AV monitor while backing-up.

The green line (1) is the position 300 cm (118.11 in) from the rear bumper.

The yellow line (2) is the position 100 cm (39.37 in) from the rear bumper.

The red line (3) is the position 50 cm (19.68 in) from the rear bumper.

## **WARNING**

- This system is a supplementary function only. It is the responsibility of the driver to always check the inside/outside rearview mirror and the area behind the vehicle before and while backing up because there is a dead zone that can't be seen through the camera.
- Always keep the camera lens clean. If the lens is covered with foreign matter, the camera may not operate normally.

#### \* NOTICE

The rearview camera may not operate normally, when you drive in the extremely high or low temperature area.

(operating temperature:  $-20^{\circ}\text{C}\sim65^{\circ}\text{C}$  ( $-4^{\circ}\text{F}\sim149^{\circ}\text{F}$ ))

#### HAZARD WARNING FLASHER



D180000AUN

The hazard warning flasher should be used whenever you find it necessary to stop the car in a hazardous location. When you must make such an emergency stop, always pull off the road as far as possible.

The hazard warning lights are turned on by pushing in the hazard switch. This causes all turn signal lights to blink. The hazard warning lights will operate even though the key is not in the ignition switch.

To turn the hazard warning lights off, push the switch a second time.

#### LIGHTING

D190100ABH

### **Battery saver function**

- The purpose of this feature is to prevent the battery from being discharged. The system automatically turns off the parking lights when the driver removes the ignition key (smart key: turns off the engine) and opens the driver-side door.
- With this feature, the parking lights will be turned off automatically if the driver parks on the side of road at night.
   If necessary, to keep the lights on when the ignition key is removed (smart key: turns off the engine), perform the following:
  - 1) Open the driver-side door.
  - Turn the parking lights OFF and ON again using the light switch on the steering column.

## Headlight welcome function (if equipped)

When the headlight is ON or AUTO position and all doors (and trunk) are closed and locked, if you press the door unlock button on the transmitter (or the smart key), the headlights will come on for about 15 seconds. At this time, if you press the door lock or unlock button, the headlights will turn off immediately.

## Headlight escort function (Type A) (if equipped)

If you turn the ignition switch to the ACC or OFF position with the headlights ON, the headlights (and/or tail lights) remain on for about 20 minutes. However, if the driver's door is opened and closed, the headlights are turned off after 30 seconds.

The headlights can be turned off by pressing the lock button on the transmitter (or smart key) twice or turning the light switch to the OFF or Auto position. If the headlight switch is in the AUTO position, the function can only operate at night.

## **A** CAUTION

If the driver gets out of the vehicle through other doors (except driver's door and front passenger's door), the battery saver function does not operate and the headlight escort function does not turn off automatically. Therefore, it causes the battery to be discharged. In this case, make sure to turn off the lamp before getting out of the vehicle.


## Headlight escort function (Type B) (if equipped)

If you turn the ignition switch to the ACC or OFF position with the headlights ON, the headlights (and/or tail lights) remain on for about 5 minutes. However, if the driver's door is opened and closed, the headlights are turned off after 15 seconds.

The headlights can be turned off by pressing the lock button on the transmitter (or smart key) twice or turning the light switch to the OFF or Auto position. If the headlight switch is in the AUTO position, the function can only operate at night.

## **!** CAUTION

If the driver gets out of the vehicle through other doors (except driver's door and front passenger's door), the battery saver function does not operate and the headlight escort function does not turn off automatically. Therefore, it causes the battery to be discharged. In this case, make sure to turn off the lamp before getting out of the vehicle.

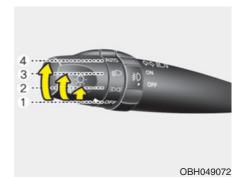

D190400AUN

### **Lighting control**

The light switch has a Headlight and a Parking light position.

To operate the lights, turn the knob at the end of the control lever to one of the following positions:

- (1) OFF position
- (2) Parking light position
- (3) Headlight position
- (4) Auto light/AFLS position (if equipped)



D190401ABH

Parking light position ( 30%)

When the light switch is in the parking light position (1st position), the tail, license and instrument panel lights are ON and the tail light indicator is ON. (if equipped)

FarmaSOS.com



Headlight position (∅)

When the light switch is in the headlight position (2nd position), the head, tail, license and instrument panel lights are ON.

## \* NOTICE

The ignition switch must be in the ON position to turn on the headlights.



D190403AUN Auto light/AFLS position (if equipped)

When the light switch is in the AUTO light position while the engine is running, the taillights and headlights will be turned ON or OFF automatically depending on the amount of light outside the vehicle.

If your vehicle is equipped with the adaptive front lighting system (AFLS), it will also operate when the headlamp is ON.

## A CAUTION

- Never place anything over sensor (1) located on the instrument panel. This will ensure better auto-light system control.
- · Don't clean the sensor using a window cleaner. The cleaner may leave a light film which could interfere with sensor operation.
- If your vehicle has window tint or other types of metallic coating on the front windshield, the Auto light system may not work properly.



FarmaSOS.com



D190500AUN

### High beam operation

To turn on the high beam headlights, push the lever away from you. Pull it back for low beams.

The high beam indicator will light when the headlight high beams are switched on.


To prevent the battery from being discharged, do not leave the lights on for a prolonged time while the engine is not running.

#### **WARNING**

Do not use high beam when there are other vehicles. Using high beam could obstruct the other driver's vision.



To flash the headlights, pull the lever towards you. It will return to the normal (low beam) position when released. The headlight switch does not need to be on to use this flashing feature.

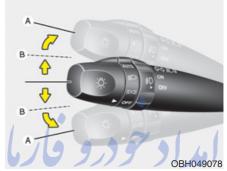

D190600ABH

## Turn signals and lane change signals

The ignition switch must be on for the turn signals to function. To turn on the turn signals, move the lever up or down (A). Green arrow indicators on the instrument panel indicate which turn signal is operating. They will self-cancel after a turn is completed. If the indicator continues to flash after a turn, manually return the lever to the OFF position.

To signal a lane change, move the turn signal lever slightly and hold it in position (B). The lever will return to the OFF position when released.

If an indicator stays on and does not flash or if it flashes abnormally, one of the turn signal bulbs may be burned out and will require replacement.

## One-touch triple turn signal (if equipped)

To activate an one-touch triple turn signal move the turn signal lever slightly for less than 1.8 seconds and then release it. The lane change signals will blink 3 times.

#### \* NOTICE

If an indicator flash is abnormally quick or slow, a bulb may be burned out or have a poor electrical connection in the circuit.



D190700ABH


### Front fog light (if equipped)

Fog lights are used to provide improved visibility and avoid accidents when visibility is poor due to fog, rain or snow etc. The fog lights will turn on when fog light switch (1) is turned to ON after the parking light is turned on.

To turn off the fog lights, turn the switch to OFF.

### **A** CAUTION

When in operation, the fog lights consume large amounts of vehicle electrical power. Only use the fog lights when visibility is poor or unnecessary battery and generator drain could occur.

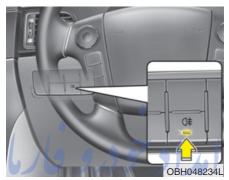

D190800AUN

### Rear fog light (if equipped)

To turn the rear fog lights on, turn the headlight switch to the headlight on position and press the rear fog light switch (light on switch will illuminate).

The rear fog lights turn on when the rear fog switch is pressed after the front fog switch is turned to ON and the headlight switch to the parklight position. (if equipped)

To turn the rear fog lights off, press the rear fog light switch again or turn the headlight switch to the OFF position.

## Daytime running light (if equipped)

Daytime Running Lights (DRL) can make it easier for others to see the front of your vehicle during the day. DRL can be helpful in many different driving conditions, and it is especially helpful after dawn and before sunset.

The DRL system will turn OFF when:

- 1. The parking light switch is ON.
- 2. Engine stops.

## Headlight leveling device (if equipped)

D191002AEN

#### Automatic type

It is automatically adjusted the headlight beam level according to the number of the passengers and the loading weight in the luggage area.

And it offers the proper headlight beam under the various conditions.

## **A WARNING**

If it is not working properly even though your car is inclined backward according to passenger's posture, or the headlight beam is irradiated to the high or low position, have your vehicle inspected by an authorized HYUNDAI dealer. Don't attempt to inspect or replace the wiring yourself to prevent malfunction.



D191300ABH

## AFLS (Adaptive Front Lighting System) (if equipped)

Adaptive front lighting system uses the steering angle and vehicle speed, to keep your field of vision wide by swiveling and leveling the headlamp.

Turn the knob to the AUTO position when the engine is running. The adaptive front lighting system will operate when the headlamp is ON. To turn off the AFLS, turn the knob to the other position. After turning the AFLS off, headlamp swiveling no longer occurs, but leveling operates continuously.



If the AFLS malfunction indicator comes on, the AFLS is not working properly. Drive to the nearest safe location and restart the engine. If the indicator continuously remains on, take your vehicle to an authorized HYUNDAI dealer and have the system checked.

#### D191100ABH

## Headlight washer (if equipped)

If your vehicle is equipped with the headlight washer it will be operating at the same time when you operate the windshield washer. It will operate when the headlight switch is in the first or second position and the ignition switch is in the ON position.

The washer fluid will be sprayed on to the headlights.

#### \* NOTICE


Check the headlight washers periodically to confirm that the washer fluid is being sprayed properly onto the headlight lenses.



تلفن شبانه روزی: ۱-۸۸۸۶۲۰۸۵ تلفن شبانه روزی:

FarmaSOS.com

#### **WIPERS AND WASHERS**

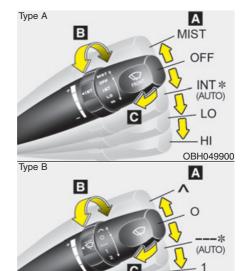

Windshield wiper/washer

OBH049900L

#### A: Wiper speed control


- · MIST ( ∕ ) Single wipe
- · OFF (O) Off
- · INT (---) Intermittent wipe AUTO – Auto control wipe
- $\cdot$  LO (1) Low wiper speed
- · HI (2) High wiper speed

## B : Intermittent or Auto control wipe time adjustment

C: Wash with brief wipes

تلفن شبانه روزی: ۱-۸۸۸۶۲ ۲۸ الفن شبانه روزی: ۱-۸۸۸۶۲ ۲۸ م

FarmaSOS.com

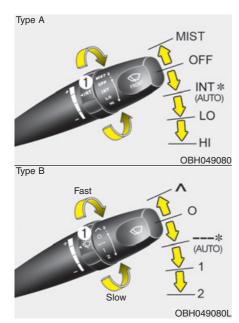

D200100ABH

## Windshield wipers

Operates as follows when the ignition switch is turned ON.

MIST( \( \simeq \)): For a single wiping cycle, push the lever upward and release it with the lever in the OFF position. The wipers will operate continuously if the lever is pushed upward and held.

OFF (O): Wiper is not in operation

INT (---): Wiper operates intermittently at the same wiping intervals.

Use this mode in a light rain or mist. To vary the speed setting, turn the speed control knob(1).

LO (1): Normal wiper speed HI (2): Fast wiper speed

#### \* NOTICE


If there is heavy accumulation of snow or ice on the windshield, defrost the windshield for about 10 minutes, or until the snow and/or ice is removed before using the windshield wipers to ensure proper operation.

### \* NOTICE

- When you operate the wipers, if your vehicle has a problem in any part of the wiper operation system, the wiper may operate in the LO (1) mode regardless of the wiper switch position. In this case, have your vehicle checked by an authorized HYUNDAI dealer as soon as possible.
- When the ignition key is removed, the wiper blade sometimes may move slightly to be properly positioned for reducing the deterioration of the windshield wipers.

تلفن شبانه روزی: ۱-۸۸۸۶۲ - ۲۱

FarmaSOS.com

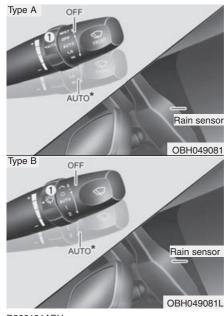

D200101ABH

Auto control (if equipped)

The rain sensor located on the upper end of the windshield glass senses the amount of rainfall and controls the wiping cycle for the proper interval. The more it rains, the faster the wiper operates. When the rain stops, the wiper stops.

To vary the speed setting, turn the speed control knob (1).

If the wiper switch is set in AUTO mode when the ignition switch is ON, the wiper will operate once to perform a self-check of the system. Set the wiper to OFF (O) position when the wiper is not in use.

### **A** CAUTION

When the ignition switch is ON and the windshield wiper switch is placed in the AUTO mode, use caution in the following situations to avoid any injury to the hands or other parts of the body:

- Do not touch the upper end of the windshield glass facing the rain sensor.
- Do not wipe the upper end of the windshield glass with a damp or wet cloth.
- Do not put pressure on the windshield glass.

## **A** CAUTION

When washing the vehicle, set the wiper switch in the OFF (O) position to stop the auto wiper operation.

The wiper may operate and be damaged if the switch is set in the AUTO mode while washing the vehicle.

Do not remove the sensor cover located on the upper end of the passenger side windshield glass. Damage to system parts could occur and may not be covered by your vehicle warranty.

When starting the vehicle in winter, set the wiper switch in the OFF (O) position. Otherwise, wipers may operate and ice may damage the windshield wiper blades. Always remove all snow and ice and defrost the windshield properly prior to operating the windshield wipers.



Type B

OBH049082L

#### D200200AUN

#### Windshield washers

In the OFF (O) position, pull the lever gently toward you to spray washer fluid on the windshield and to run the wipers 1-3 cycles.

Use this function when the windshield is dirty.

The spray and wiper operation will continue until you release the lever.

If the washer does not work, check the washer fluid level. If the fluid level is not sufficient, you will need to add appropriate non-abrasive windshield washer fluid to the washer reservoir.

The reservoir filler neck is located in the front of the engine compartment on the passenger side.

## **A** CAUTION

To prevent possible damage to the washer pump, do not operate the washer when the fluid reservoir is empty.

### **WARNING**

Do not use the washer in freezing temperatures without first warming the windshield with the defrosters; the washer solution could freeze on contact with the windshield and obscure your vision.

## **A** CAUTION

- To prevent possible damage to the wipers or windshield, do not operate the wipers when the windshield is dry.
- To prevent damage to the wiper blades, do not use gasoline, kerosene, paint thinner, or other solvents on or near them.
- To prevent damage to the wiper arms and other components, do not attempt to move the wipers manually.

تلفن شبانه روزی: ۱-۸۸۸۶۲ ۲۸ ا

FarmaSOS.com

#### INTERIOR LIGHT

D210000AFN



#### **A** CAUTION


Do not use the interior lights for extended periods when the engine is not running.

It may cause battery discharge.



### **WARNING**

Do not use the interior lights when driving in the dark. Accidents could happen because the view may be obscured by interior lights.

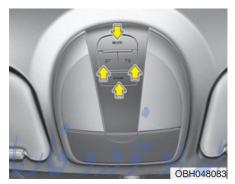

D210100ABH-FF

## Map lamp

• 宏感: Push the switch to turn the map lamp on or off. This light produces a spot beam for convenient use as a map lamp at night or as a personal lamp for the driver and the front passenger.

• MOOD: Push the switch to turn the mood lamp on or off.

• ROOM: Push the switch to turn the map lamp and the room lamp on or off



D210200BBH

### Room lamp

• DOOR: In the DOOR position, the map lamp and the room lamp come on when any door is opened regardless of the ignition switch position.

> When doors are unlocked by the transmitter (or smart key), the map lamp and the room lamp come on for approximately 30 seconds as long as any door is not open. The map lamp and the room lamp goes out gradually after approximately 30 seconds if the door is closed.

However, if the ignition switch is ON or all doors are locked. the map lamp and the room lamp will turn off immediately. If a door is opened with the ignition switch in the ACC or LOCK position, the map lamp and the room lamp stays on for about 20 minutes. However, if a door is opened with the ignition switch in the ON position, the map lamp and the room lamp stavs on continuously. Also, if vou turn the engine start/stop button off or remove the ignition key from the ignition switch when the room lamp is in off position with all doors closed,

• >> \text{ : Push the switch to turn the room lamp on or off. This light produces a spot beam for convenient use as a room lamp at night or as a personal lamp for the rear passenger.

the room lamp will turn on.

## **A** CAUTION

Do not leave the lamp switches on for an extended period of time when the vehicle is not running.



D210300ABH

## Trunk room lamp

The trunk room lamp comes on when the trunk is opened. المامة موزى: المامة الم

## **A** CAUTION

The trunk room lamp comes on as long as the trunk lid opens. To prevent unnecessary charging system drain, close the trunk lid securely after using the trunk room.



D210400AEN

## Door courtesy lamp (if equipped)

The door courtesy lamp comes ON when the door is opened to assist entering or exiting the vehicle. It also serves as a warning to passing vehicles that the vehicle door is open.



D210500AUN

## Glove box lamp

The glove box lamp comes on when the glove box is opened.

## **A** CAUTION

To prevent unnecessary charging system drain, close the glove box securely after using the glove box.




D210600AUN

## Vanity mirror lamp

Opening the lid of the vanity mirror will automatically turn on the mirror light.

## **A** CAUTION

To prevent unnecessary charging system drain, close the vanity mirror cover after using the mirror.

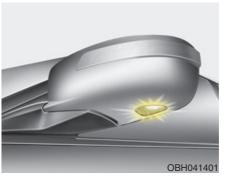

## Welcome light (if equipped)

When all the doors (and trunk) are locked and closed, the puddle lamp will come on for about 15 seconds if any of the below is performed.

- When the door unlock button is pressed on the transmitter.
- When the door unlock button is pressed on the smart key.
- When the button of the outside door handle is pressed.
- When the vehicle is approached with the smart key in possession.

But, if you don't lock or unlock the doors for 14 days after you lock the doors, the light does not come on. Press the door unlock button on the transmitter/smart key or press the button of the front outside door handle. The welcome light will illuminate.

#### **DEFROSTER**

SD220000AUN




#### **!** CAUTION

To prevent damage to the conductors bonded to the inside surface of the rear window, never use sharp instruments or window cleaners containing abrasives to clean the window.

#### \* NOTICE

If you want to defrost and defog the front windshield, refer to "Windshield defrosting and defogging" in this section.

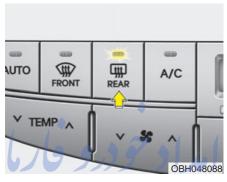

D220100AFN

#### Rear window defroster

The defroster heats the window to remove frost, fog and thin ice from the rear window, while the engine is running. To activate the rear window defroster. press the rear window defroster button located in the center facia switch panel. The indicator on the rear window defroster button illuminates when the defroster is ON.

If there is heavy accumulation of snow on the rear window, brush it off before operating the rear defroster.

The rear window defroster automatically turns off after approximately 20 minutes or when the ignition switch is turned off. To turn off the defroster, press the rear window defroster button again.

#### D220101AFN

#### Outside rearview mirror defroster (if equipped)

If your vehicle is equipped with the outside rearview mirror defrosters, they will operate at the same time you turn on the rear window defroster.

D220200AFN

### Front windshield deicer (if equipped)

If your vehicle is equipped with the front windshield deicer, it will be operating at the same time you operate the rear window defroster

## **AUTOMATIC CLIMATE CONTROL SYSTEM (IF EQUIPPED)**




تلفن شبانه روزی: ۱-۸۸۸۶۲ ۲۹

- 1. AUTO (automatic control) button
- 2. Front windshield defrost button FarmaSC
- 3. Rear window defrost button
- 4. Air conditioning button
- 5. OFF button
- 6. Air intake control button
- 7. AQS (Air quality system) button

- 8. Dual temperature control selection button
- 9. Driver's temperature control button
- 10. Fan speed control button
- 11. Mode selection button
- 12. Passenger's temperature control button
- 13. Climate information screen selection button


OBH048089

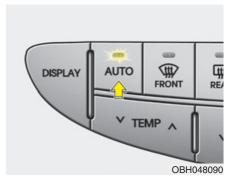

## Automatic heating and air conditioning

1. Press the AUTO button.

The modes, fan speeds, air intake and air-conditioning will be controlled automatically according to the temperature setting.

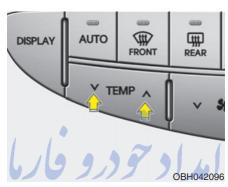


2. Press the TEMP button to set the desired temperature.

## 

- To turn the automatic operation off, select any button of the following:
  - Mode selection button
- Front windshield defrost button
- Fan speed control button

The selected function will be controlled manually while other functions operate automatically.

• For your convenience and to improve the effectiveness of the climate control, use the AUTO button and set the temperature to 23°C (73°F).

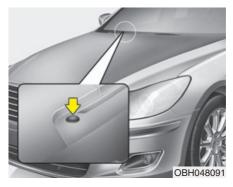

#### \* NOTICE

Never place anything over the sensor located on the instrument panel to ensure better control of the heating and cooling system.

#### D240200ABH

## Manual heating and air conditioning

The heating and cooling system can be controlled manually by pushing buttons other than the AUTO button. In this case, the system works sequentially according to the order of buttons selected.


When pressing any button except the AUTO button while using automatic operation, the functions not selected will be controlled automatically.

- 1. Start the engine.
- 2. Set the mode to the desired position. For improving the effectiveness of heating and cooling;

Heating: Cooling:

- 3. Set the temperature control to the desired position.
- 4. Set the air intake control to the outside (fresh) air position.
- 5. Set the fan speed control to the desired speed.
- 6. If air conditioning is desired, turn the air conditioning system on.

Press the AUTO button in order to convert to full automatic control of the system.

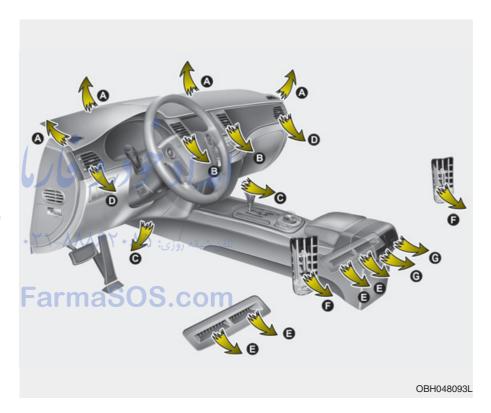

#### ★ Rear outlet vents (F)

- The air flow of the Rear outlet vents is controlled by the front climate control system and delivered through the inside air duct of the front doors. If the door is open or not closed completely, the air flow of the Rear outlet vent is not delivered properly. Make sure the front doors are closed completely.
- The air flow of the Rear outlet vents may be weaker than the instrument panel vents for the long air duct in the front doors.



D240201ABH

#### Mode selection

The mode selection button controls the direction of the air flow through the ventilation system.

The air flow outlet port is converted as follows:





## Floor & Defrost (A, C, D, E, F, G)

Most of the air flow is directed to the floor and the windshield with a small amount directed to the side window defrosters.



Floor-Level (A, C, D, E, F, G)

Most of the air flow is directed to the floor, with a small amount of the air being directed to the windshield and side window defrosters.




Bi-Level (B, C, D, E, F, G)

Air flow is directed towards the face and the floor.




Face-Level (B, D, F, G)

Air flow is directed toward the upper body and face. Additionally, each outlet can be controlled to direct the air discharged from the outlet.

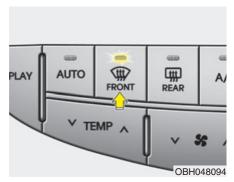

Defrost-Level (A, D)


Most of the air flow is directed to the windshield with a small amount of air directed to the side window defrosters.

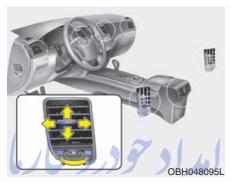

#### **Instrument panel vents**

The outlet vents can be opened or closed separately using the horizontal thumb-wheel. To close the vent, rotate it left to the maximum position. To open the vent, rotate it right to the desired position.

Also, you can adjust the direction of air delivery from these vents using the vent control lever as shown.

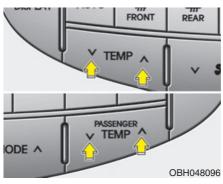


D240202ABH

#### Temperature control

The temperature will increase to the maximum (HI) by pushing the up (  $\wedge$  ) button.

The temperature will decrease to the minimum (Lo) by pushing the down (  $\vee$  ) button.

When pushing the button, the temperature will increase or decrease by 0.5°C/1°F. When set to the lowest temperature setting, the air conditioning will operate continuously.

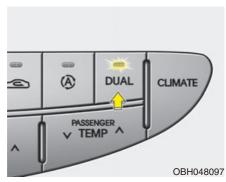

## Adjusting the driver and passenger side temperature individually

- Press the DUAL button to operate the driver and passenger side temperature individually. Pressing the right temperature control button will automatically switch to the DUAL mode as well.
- Press the left temperature control to adjust the driver side temperature.
   Press the right temperature control to adjust the passenger side temperature.

When the driver side temperature is set to the highest (HI) or lowest (Lo) temperature setting, the DUAL mode is deactivated for maximum heating or cooling.

## Adjusting the driver and passenger side temperature equally


- Press the DUAL button again to deactivate DUAL mode. The passenger side temperature will be set to the same temperature as the driver side temperature.
- Press the left temperature control button. The driver and passenger side temperature will be adjusted equally.

#### Temperature conversion

If the battery has been discharged or disconnected, the temperature mode display will reset to Centigrade.

This is a normal condition. You can switch the temperature mode between Centigrade to Fahrenheit as follows;

While pressing the MODE button, depress the DUAL button for 3 seconds or more. The display will change from Centigrade to Fahrenheit, or from Fahrenheit to Centigrade.

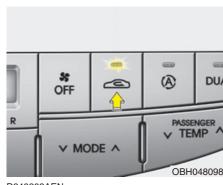

D240203AEN

#### Air intake control

This is used to select the outside (fresh) air position or recirculated air position.

To change the air intake control position, push the control button.

### Recirculated air position



With the recirculated air position selected, air from the passenger compartment will be drawn through the heating system and heated or cooled according to the function selected.

#### Outside (fresh) air position



With the outside (fresh) air position selected, air enters the vehicle from outside and is heated or cooled according to the function selected.


### \* NOTICE

Prolonged operation of the heater in the recirculated air position (without air conditioning selected) may cause fogging of the windshield and side windows and the air within the passenger compartment may become stale.

In addition, prolonged use of the air conditioning with the recirculated air position selected will result in excessively dry air in the passenger compartment.

## **WARNING**

- Continued climate control system operation in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility.
- Do not sleep in a vehicle with the air conditioning or heating system on. It may cause serious harm or death due to a drop in the oxygen level and/or body temperature.
- Continued climate control system operation in the recirculated air position can cause drowsiness or sleepiness, and loss of vehicle control. Set the air intake control to the outside (fresh) air position as much as possible while driving.

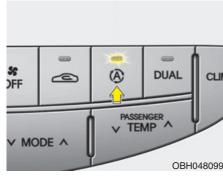

D240204ABH

### Air quality system (if equipped)

The air inflow from outside the vehicle can be automatically controlled. Press the button to activate the air quality control system.

When using AQS mode, AQS(Air Quality System) automatically senses outdoor air pollutants and minimizes them from entering the vehicle, however, unpleasant or foul odors that might be present may still be noticeable within the vehicle.

#### Exhaust gas cutoff mode:

Air enters the vehicle from the outside. If exhaust gas enters the vehicle from the outside, the exhaust gas cutoff mode is automatically converted from the outside air position to the recirculated air position to prevent exhaust gas from entering the vehicle.

#### \* NOTICE

It should be noted that prolonged operation of the heating system in recirculation mode will give rise to misting of the windshield and side windows and the air within the passenger compartment will become stale. In addition, prolonged use of the air conditioning with the recirculation mode selected may result in the air within the passenger compartment becoming excessively dry.



If the windows fog up with the Recirculation or A.Q.S mode selected, set the air intake control to the fresh air position or A.Q.S control to OFF.



D240205ABH

### Fan speed control

The fan speed can be set to the desired speed by pushing the fan speed control button.

The higher the fan speed is, the more air is delivered.

Pressing the OFF button turns off the fan.




D240206AUN

### Air conditioning

Push the A/C button to turn the air conditioning system on (indicator light will illuminate).


Push the button again to turn the air conditioning system off.

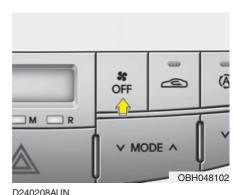

D240208AUN

#### OFF mode

Push the OFF button to turn off the air climate control system. However, you can still operate the mode and air intake buttons as long as the ignition switch is in the ON position.

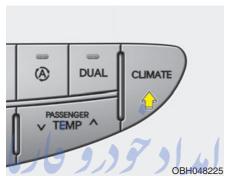

D240215ABH

## Climate information screen selection button

#### • Audio Type

When the ignition switch is ON and the audio is OFF, pushing the button goes to the climate information screen.

### System operation

#### D230501AUN

#### Ventilation

- 1. Set the mode to the 🔀 position.
- 2. Set the air intake control to the outside (fresh) air position.
- 3. Set the temperature control to the desired position.
- 4. Set the fan speed control to the desired speed.

#### D230502AEN

#### Heating

- 1. Set the mode to the 🔀 position.
- 2. Set the air intake control to the outside (fresh) air position.
- 3. Set the temperature control to the desired position.
- 4. Set the fan speed control to the desired speed.
- If dehumidified heating is desired, turn the air conditioning system (if equipped) on.
- If the windshield fogs up, set the mode to the or push the front defrost button ( ).

#### **Operation Tips**

- To keep dust or unpleasant fumes from entering the car through the ventilation system, temporarily set the air intake control to the recirculated air position.
   Be sure to return the control to the fresh air position when the irritation has passed to keep fresh air in the vehicle. This will help keep the driver alert and comfortable.
- Air for the heating/cooling system is drawn in through the grilles just ahead of the windshield. Care should be taken that these are not blocked by leaves, snow, ice or other obstructions.
- To prevent interior fog on the windshield, set the air intake control to the fresh air position and fan speed to the desired position, turn on the air conditioning system, and adjust the temperature control to desired temperature.

D230503AEN

Air conditioning (if equipped)

HYUNDAI Air Conditioning Systems are filled with environmentally friendly R-134a refrigerant.

- 1. Start the engine. Push the air conditioning button.
- 2. Set the mode to the 🧩 position.
- 3. Set the air intake control to the outside air or recirculated air position.
- Adjust the fan speed control and temperature control to maintain maximum comfort.

تلفن شبانه روزی: ۱-۸۸۸۶۲۰۸۵ تلفن شبانه روزی

FarmaSOS.com

#### \* NOTICE

- When using the air conditioning system, monitor the temperature gauge closely while driving up hills or in heavy traffic when outside temperatures are high. Air conditioning system operation may cause engine overheating. Continue to use the blower fan but turn the air conditioning system off if the temperature gauge indicates engine overheating.
- When opening the windows in humid weather air conditioning may create water droplets inside the vehicle. Since excessive water droplets may cause damage to electrical equipment, air conditioning should only be run with the windows closed.


#### Air conditioning system operation tips

- If the vehicle has been parked in direct sunlight during hot weather, open the windows for a short time to let the hot air inside the vehicle escape.
- To help reduce moisture inside of the windows on rainy or humid days, decrease the humidity inside the vehicle by operating the air conditioning system.
- During air conditioning system operation, you may occasionally notice a slight change in engine speed as the air conditioning compressor cycles. This is a normal system operation characteristic.
- Use the air conditioning system every month only for a few minutes to ensure maximum system performance.

- When using the air conditioning system, you may notice clear water dripping (or even puddling) on the ground under the passenger side of the vehicle. This is a normal system operation characteristic.
- Operating the air conditioning system in the recirculated air position provides maximum cooling, however, continual operation in this mode may cause the air inside the vehicle to become stale.
- During cooling operation, you may occasionally notice a misty air flow because of rapid cooling and humid air intake. This is a normal system operation characteristics.

تلفن شبانه روزی: ۱۵۸۰۲۰۸۸ – ۲۱

FarmaSOS.com

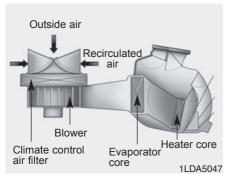

D230300AEN

## Climate control air filter (if equipped)

The climate control air filter installed behind the glove box filters the dust or other pollutants that come into the vehicle from the outside through the heating and air conditioning system. If dust or other pollutants accumulate in the filter over a period of time, the air flow from the air vents may decrease, resulting in moisture accumulation on the inside of the windshield even when the outside (fresh) air position is selected. If this happens, have the climate control air filter replaced by an authorized HYUNDAI dealer.

#### \* NOTICE

- Replace the filter every 15,000 km (10,000 miles) or once a year.
   If the car is being driven in severe conditions such as dusty or rough roads, more frequent air conditioner filter inspections and changes are required.
- When the air flow rate suddenly decreases, the system should be checked at an authorized HYUNDAI dealer.

D230400AEN

# Checking the amount of air conditioner refrigerant and compressor lubricant

When the amount of refrigerant is low, the performance of the air conditioning is reduced. Overfilling also has a negative impact on the air conditioning system.


Therefore, if abnormal operation is found, have the system inspected by an authorized HYUNDAI dealer.

### \* NOTICE

It is important when servicing the air conditioning system that the correct type and amount of oil and refrigerant is used. Otherwise, damage to the compressor and abnormal system operation may occur.

# A WARNING

The air conditioning system should be serviced by an authorized HYUNDAI dealer. Improper service may cause serious injury to the person performing the service.

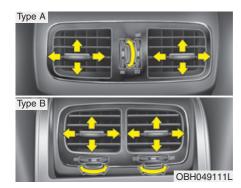

D2301000BBH-EE

#### Rear vent

It will operate at the same time when you operate the climate control system.

You can adjust the temperature by turning the temperature control knob. Turn the knob to the red mark when warm air is desired, or to the blue mark when cool air is desired.

The outlet vents can be opened or closed using the thumbwheel. To close the vent, rotate it down (or left) to the maximum position. To open the vent, rotate it up (or right) to the desired position.

Also, you can adjust the direction of air delivery from these vents using the vent control lever as shown.

#### WINDSHIELD DEFROSTING AND DEFOGGING

D250000AFN




## A WARNING - Windshield heating

Do not use the vi or my position during cooling operation extremely humid weather. The difference between the temperature of the outside air and that of the windshield could cause the outer surface of the windshield to fog up, causing loss of visibility. In this case, set the mode selection knob or button to the 🔀 position and fan speed control knob or button to the lower speed.

- For maximum defrosting, set the temperature control to the extreme right/hot position and the fan speed control to the highest speed.
- · If warm air to the floor is desired while defrosting or defogging, set the mode to the floor-defrost position.
- Before driving, clear all snow and ice from the windshield, rear window, outside rear view mirrors, and all side windows.
- Clear all snow and ice from the hood and air inlet in the cowl grill to improve heater and defroster efficiency and to reduce the probability of fogging up the inside of the windshield.



FarmaSOS.com

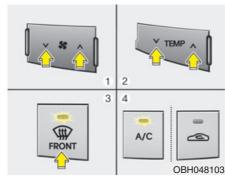


#### D250201AFN

#### To defog inside windshield

- 1. Set the fan speed to the desired position.
- 2. Select desired temperature.
- 3. Press the defrost button ( ).
- 4. The air conditioning will be turned on according to the detected ambient temperature and outside (fresh) air position will be selected automatically.

If the air conditioning and outside (fresh) air position are not selected automatically, adjust the corresponding button manually. If the m position is selected, lower fan speed is adjusted to a higher fan speed.

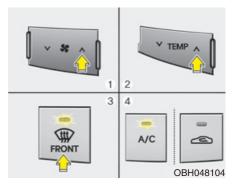

#### D250202AEN

#### To defrost outside windshield

- 1. Set the fan speed to the highest (extreme right) position.
- 2. Set the temperature to the extreme hot (HI) position.
- 3. Press the defrost button ( ).
- The air conditioning will be turned on according to the detected ambient temperature and outside (fresh) air position will be selected automatically.

If the mosition is selected, lower fan speed is adjusted to a higher fan speed.

#### D250300AUN


## **Defogging logic**

To reduce the possibility of fogging up the inside of the windshield, the air intake or air conditioning are controlled automatically according to certain conditions such as or the position. To cancel or return the defogging logic, do the following.

امداد حودرو فارما



FarmaSOS.com

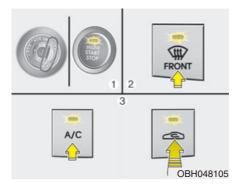

#### D250302ABH

- Turn the ignition switch to the ON position.
- 2. Press the defrost button ( ).
- While holding the air conditioning button (A/C) pressed, press the air intake control button at least 5 times within 3 seconds.

The A/C display blinks 3 times with 0.5 second of interval. It indicates that the defogging logic is canceled or returned to the programmed status.

If the battery has been discharged or disconnected, it resets to the defog logic status.



D250305ABH

inside the windshield

Auto defogging system (if equipped)
Auto defogging reduces the probability of fogging up the inside of the windshield by automatically sensing the moisture of

The auto defogging system operates when the heater or air conditioning is on.



This indicator illuminates when the auto defogging system senses the moisture of inside the windshield and operates.

If more moisture is in the vehicle, the higher steps operate as follow. For example if auto defogging does not defog inside the windshield at step 1 Outside air position, it tries to defog again at step 2 Blowing air toward the windshield.

Step 1 : Outside air position

Step 2: Blowing air toward the windshield

Step 3 : Increasing air flow toward the windshield

Step 4 : Operating the air conditioning

Step 5 : Maximizing the air conditioning

If your vehicle is equipped with the auto defogging system, it is automatically activated when the conditions are met. However, if you would like to cancel the auto defogging system, press the front defroster button 4 times within 2 seconds while pressing the AUTO button. The indicator will blink 3 times to notify you that the system is cancelled. To use the auto defogging system again, follow the procedures mentioned above.

If the battery has been disconnected or discharged, it resets to the auto defogging status.

### \* NOTICE

- If the A/C off or recirculated air position is manually selected while the auto defogging system is on, the auto defogging indicator will blink 3 times to give notice that manual operation is canceled.
- If the air quality system (AQS) is selected while the auto defogging system is operating at the step 1 outside air position, the recirculated air position may operate when the outside air is polluted.

## **A** CAUTION

Do not remove the sensor cover located on the upper end of the passenger side windshield glass. Damage to system parts could occur and may not be covered by your vehicle warranty.

#### STORAGE COMPARTMENTS

D270000AUN


These compartments can be used to store small items required by the driver or passengers.

## **A** CAUTION

- To avoid possible theft, do not leave valuables in the storage compartments.
- · Always keep the storage compartment covers closed while driving. Do not attempt to place so many items in the storage compartment that the storage compartment cover cannot close securely.

## WARNING - Flammable materials

Do not store cigarette lighters. propane cylinders, or other flammable/explosive materials in the vehicle. These items may catch fire and/or explode if the vehicle is exposed to hot temperatures for extended periods.

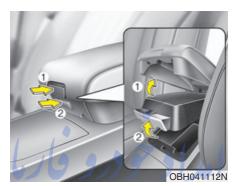


D270100AFN

### Center console storage

These compartments can be used to store small items required by the driver or front passenger.

To open the center console storage, push

the button (1) or (2).

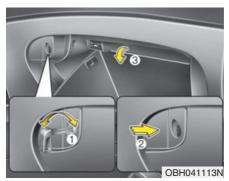

D270200ABH

#### Glove box

The glove box can be locked and unlocked with a master key (or mechanical key of the smart key) (1).

To open the glove box, push the button (2) and the glove box will automatically open (3). Close the glove box after use.

## **WARNING**

To reduce the risk of injury in an accident or sudden stop, always keep the glove box door closed while driving.

## **A** CAUTION

Do not keep food in the glove box for a long time.



D270300AUN

### Sunglass holder

To open the sunglass holder, press the cover and the holder will slowly open. Place your sunglasses in the compartment door with the lenses facing out. Push to close.

FarmaSOS.com

## **WARNING**

- Do not keep objects except sunglasses inside the sunglass holder. Such objects can be thrown from the holder in the event of a sudden stop or an accident, possibly injuring the passengers in the vehicle.
- Do not open the sunglass holder while the vehicle is moving. The rear view mirror of the vehicle can be blocked by an open sunglass holder.
- Do not put the glasses forcibly into a sunglass holder to prevent breakage or deformation of glasses. It may cause personal injury if you try to open it forcibly when the glasses are jammed in holder.

#### **INTERIOR FEATURES**



D280100ABH

## Cigarette lighter

For the cigarette lighter to work, the ignition switch must be in the ACC position or the ON position.

To open the cover, push the cover forward.

To use the cigarette lighter, push it all the way into its socket. When the element has heated, the lighter will pop out to the "ready" position.

If it is necessary to replace the cigarette lighter, use only a genuine HYUNDAI replacement or its approved equivalent.

## **A WARNING**

- Do not hold the lighter in after it is already heated because it will overheat.
- If the lighter does not pop out within 30 seconds, remove it to prevent overheating.

## **A** CAUTION

Only a genuine HYUNDAI lighter should be used in the cigarette lighter socket. The use of plug-in accessories (shavers, hand-held vacuums, and coffee pots, etc.) may damage the socket or cause electrical failure.

FarmaSOS.com



D280200ABH **Ashtray** 

## **WARNING** - Ashtray use

- Do not use the vehicle's ashtrays as waste receptacles.
- Putting lit cigarettes or matches in an ashtray with other combustible materials may cause a fire.

To open the cover, push the cover forward. To clean the ashtray, the plastic receptacle should be removed by lifting the plastic ash receptacle upward and pulling it out.

#### D280300ABH


#### Cup holder

## **WARNING** - Hot liquids

- Do not place uncovered cups of hot liquid in the cup holder while the vehicle is in motion. If the hot liquid spills, you could be burned. Such a burn to the driver could lead to loss of control of the vehicle.
- To reduce the risk of personal injury in the event of sudden stop or collision, do not place uncovered or unsecured bottles, glasses, cans, etc., in the cup holder while the vehicle is in motion.

## **WARNING**

Keep cans or bottles out of direct sun light and do not put them in a vehicle that is heated up. It may explode.

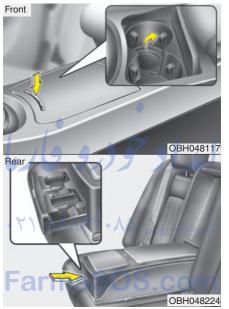


Cups or small beverage cans may be placed in the cup holders.

#### Front

To open the cover, press the cover and it will slowly open.

#### Rear

To open the cover, press the button and it will slowly open.

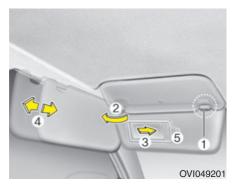

### **Sunvisor**

Use the sunvisor to shield direct light through the front or side windows.

To use the sunvisor, pull it downward.

To use the sunvisor for the side window.

pull it downward, unsnap it from the bracket (1) and swing it to the side (2). To use the vanity mirror, pull down the visor and slide the mirror cover (3).

Adjust the sunvisor extension forward or backward (4).

The ticket holder (5) is provided for holding a tollgate ticket. (if equipped)

## **CAUTION** - Vanity mirror lamp


Close the vanity mirror cover securely and return the sunvisor to its original position after use. If the vanity mirror is not closed securely, the lamp will stay on and could result in battery discharge and possible sunvisor damage.

## **WARNING**

For your safety, do not obstruct your vision when using the sunvisor.

تلفن شبانه روزی: ۱-۸۸۸۶۲ ۲۸ ۲۸ تلفن شبانه روزی: ۲۱-۸۸۸۶۲ ۲۰

## FarmaSOS.com

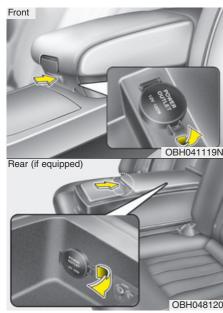

D280500AEN

#### **Power outlet**

The power outlet is designed to provide power for mobile telephones or other devices designed to operate with vehicle electrical systems. The devices should draw less than 10 amps with the engine running.

## / CAUTION

- · Use the power outlet only when the engine is running and remove the accessory plug after use. Using the accessory plug for prolonged periods of time with the engine off could cause the battery to discharge.
- · Only use 12V electric accessories which are less than 10A in electric capacity.
- · Adjust the air-conditioner or heater to the lowest operating level when using the power outlet.
- Close the cover when not in use.
- · Some electronic devices can cause electronic interference when plugged into a vehicle's power outlet. These devices may cause excessive audio static and malfunctions in other electronic systems or devices used in your vehicle.

## **WARNING**

Do not put a finger or a foreign element (pin, etc.) into a power outlet and do not touch with a wet hand. You may get an electric shock.



تلفن شیانه روزی: ۵۸+۲۹۸۸۸ - ۲۱

FarmaSOS.com

D280600AFN

## Digital clock

Whenever the battery terminals or related fuses are disconnected, you must reset the time.

When the ignition switch is in the ACC or ON position, the clock buttons operate as follows:

### **WARNING**

Do not adjust the clock while driving. You may lose your steering control and cause an accident that results in severe personal injury or death.



D280601AUN

#### **Hour (1)**

Pressing the H button with your finger, a pencil or similar object will advance the time displayed by one hour.

#### D280602AUN

### Minute (2)

Pressing the M button with your finger, a pencil or similar object will advance the time displayed by one minute.

#### D280603AUN

#### Reset (3)

To clear away minutes, press the R button with your finger, a pencil or similar object. Then the clock will be set precisely on the hour.

For example, if the R button is pressed while the time is between 9:01 and 9:29, the display will be reset to 9:00.


9:01 ~ 9:29 display changed to 9:00 9:30 ~ 9:59 display changed to 10:00

#### D280604AEN

#### Display conversion

To change the 12 hour format to the 24 hour format, press the R button until the display blinks. منافذ شباته روزي:

For example, if the R button is pressed while the time is 10:15 p.m., the display will be changed to 22:15.

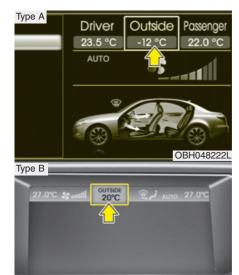

D281200ABH

#### **Outside thermometer**

The current outside temperature is displayed in 1°C (1°F) increments. The temperature range is between -30°C  $\sim$  60°C (-30°F $\sim$ 140°F).

OBH041400L

#### **Temperature conversion**

If the battery has been discharged or disconnected, the temperature mode display will reset to Centigrade.

This is a normal condition. You can switch the temperature mode between Centigrade to Fahrenheit as follows;


While pressing the MODE button, depress the DUAL button for 3 seconds or more. The display will change from Centigrade to Fahrenheit, or from Fahrenheit to Centigrade.


The outside temperature onthe display may not change immediately like a general thermometer to prevent the driver from being inattentive.



D280800AEN

Clothes hanger (if equipped)



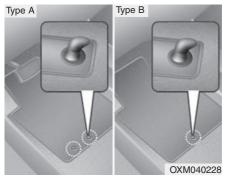

B571A03Y-AAT

## Floor mat anchor(s) (if equipped)

When using a floor mat on the front floor carpet, make sure it attaches to the floor mat anchor(s) in your vehicle. This keeps the floor mat from sliding forward.

## **WARNING**

The following must be observed when installing ANY floor mat to the vehicle.

- Ensure that the floor mats are securely attached to the vehicle's floor mat anchor(s) before driving the vehicle.
- Do not use ANY floor mat that cannot be firmly attached to the vehicle's floor mat anchors.
- Do not stack floor mats on top of one another (e.g. all-weather rubber mat on top of a carpeted floor mat). Only a single floor mat should be installed in each position.

IMPORTANT - Your vehicle was manufactured with driver's side floor mat anchors that are designed to securely hold the floor mat in place. To avoid any interference with pedal operation, HYUNDAI recommends that only the HYUNDAI floor mat designed for use in your vehicle be installed.



D281000AEN

## Luggage net (holder) (if equipped)

To keep items from shifting in the cargo area, you can use the holders located in the cargo area to attach the luggage net.


FarmaSOS.com

## **A** CAUTION

To prevent damage to the goods or the vehicle, care should be taken when carrying fragile or bulky objects in the luggage compartment.

## **WARNING**

Avoid eye injury. DO NOT overstretch the luggage net, ALWAYS keep your face and body out of the luggage net's recoil path. DO NOT use when the strap has visible signs of wear or damage.

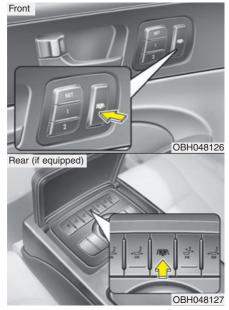

D281500ABH

#### Rear curtain

To fold the rear curtain, depress the button. To unfold the rear curtain, depress the button again. The rear curtain will be folded automatically when you shift the shift lever into R (Reverse) and unfolded automatically when you shift the shift lever from R (Reverse) into P (Park).


After the rear curtain is folded by shifting the shift lever into R (Reverse), if you drive more than 20km/h with the shift lever in D (Drive), the rear curtain will be unfolded automatically.

## **A** CAUTION

Do not pull or fold the rear curtain by hand. It could cause motor failure.

تلفن شبانه روزی: ۱-۸۸۸۶۲۰۸۵ تلفن

FarmaSOS.com

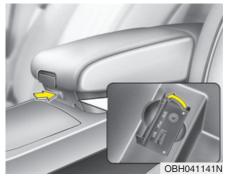

D281400AFD

## Aux, USB and iPod® port (if equipped)

If your vehicle has an aux and/or USB (universal serial bus) port or iPod® port, you can use an aux port to connect audio devices a USB port to plug in a USB, and an iPod® port to plug in an iPod®.

### \* NOTICE

When using a portable audio device connected to the power outlet, noise may occur during playback. If this happens, use the power source of the portable audio device.



D281800ABH

## Navigation system (if equipped)

The navigation system ascertains the present position of your vehicle by using information from satellites and guides you to the place you assign as the destination.

Detailed information for the navigation system is described in a separately supplied manual.



تلفن شبانه روزی: ۱۲۰۸۸۶۲۹۸۸ - ۲۲

FarmaSOS.com



D282000ABH

## DIS (Driver Information System) (if equipped)

Informations for DIS are described in the DIS manual supplied separately.

#### D281900ABH

## Bluetooth® Wireless Technology hands-free (if equipped)

You can use the phone wirelessly by using the *Bluetooth®* Wireless Technology.

Detailed information for the *Bluetooth®* Wireless Technology hands-free is described in the manual supplied separately.

#### **AUDIO SYSTEM**

#### \* NOTICE

If you install an aftermarket HID headlamp, your vehicle's audio and electronic device may malfunction.



D300102ABH

### Glass antenna (if equipped)

When the radio power switch is turned on while the ignition switch is in either the "ON" or "ACC" position, your car will receive both AM and FM broadcast signals through the antenna in the rear window glass.

## **A** CAUTION

- Do not clean the inside of the rear window glass with a cleaner or use a scraper to remove foreign deposits as this may cause damage to the antenna elements.
- Avoid adding metallic coatings such as Ni, Cd, and so on. These can disturb receiving AM and FM broadcast signals.



D300200AFN

## Steering wheel audio control

The steering wheel audio control button is installed to promote safe driving.



Do not operate audio remote control buttons simultaneously.

#### D300204ABH

#### VOLUME (VOL $\land$ / $\lor$ ) (1)

- Press the up button (△) to increase volume.
- Press the down button ( ∨ ) to decrease volume.

#### D300203AEN

### SEEK/PRESET ( $\land$ / $\lor$ ) (2)

If the SEEK/PRESET button is pressed for 0.8 second or more, it will work as follows in each mode.

#### RADIO mode

It will function as the AUTO SEEK select button. It will SEEK until you release the button.

#### CDP mode

It will function as the FF/REW button.

#### CDC mode

It will function as the DISC UP/DOWN button.

If the SEEK/PRESET button is pressed for less than 0.8 second, it will work as follows in each mode.

#### RADIO mode

It will function as the PRESET STATION select buttons.

#### CDP mode

It will function as the TRACK UP/DOWN button.

#### CDC mode

It will function as the TRACK UP/DOWN button.

Detailed information for audio control buttons is included in the following pages in this section.


### MODE (3)

Press the MODE button to select Fadio, CD (Compact Disc) or CDC \*(Compact Disc Changer).

#### D300205AEN

#### MUTE (4) (if equipped)

- Press the MUTE button to cancel the sound.
- Press the MUTE button again to activate the sound.

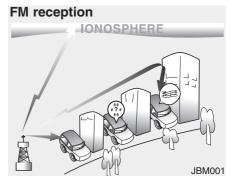


D300800AEN

### How car audio works

AM (MW, LW) and FM radio signals are broadcast from transmitter towers located around your city. They are intercepted by the radio antenna on your car. This signal is then received by the radio and sent to your car speakers.

When a strong radio signal has reached your vehicle, the precise engineering of your audio system ensures the best possible quality reproduction. However, in some cases the signal coming to your vehicle may not be strong and clear. This can be due to factors such as the distance from the radio station, closeness of other strong radio stations or the presence of buildings, bridges or other large obstructions in the area.


## AM (MW, LW) reception

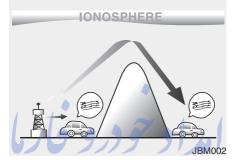


AM (MW, LW) broadcasts can be received at greater distances than FM broadcasts. This is because AM(MW, LW) radio waves are transmitted at low frequencies. These long, low frequency radio waves can follow the curvature of the earth rather than travelling straight out into the atmosphere. In addition, they curve around obstructions so that they can provide better signal coverage.



FM broadcasts are transmitted at high frequencies and do not bend to follow the earth's surface. Because of this, FM broadcasts generally begin to fade at short distances from the station. Also, FM signals are easily affected by buildings, mountains, or other obstructions. These can result in certain listening conditions which might lead you to believe a problem exists with your radio. The following conditions are normal and do not indicate radio trouble:

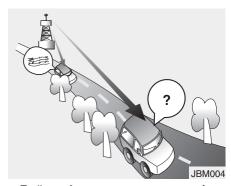

- Fading As your car moves away from the radio station, the signal will weaken and sound will begin to fade. When this occurs, we suggest that you select another stronger station.
- Flutter/Static Weak FM signals or large obstructions between the transmitter and your radio can disturb the signal causing static or fluttering noises to occur. Reducing the treble level may lessen this effect until the disturbance clears.

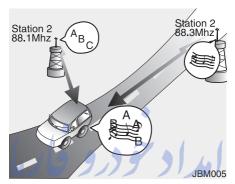

- Station Swapping As a FM signal weakens, another more powerful signal near the same frequency may begin to play. This is because your radio is designed to lock onto the clearest signal. If this occurs, select another station with a stronger signal.
- Multi-Path Cancellation Radio signals being received from several directions can cause distortion or fluttering. This can be caused by a direct and reflected signal from the same station, or by signals from two stations with close frequencies. If this occurs, select another station until the condition has passed.

## Using a cellular phone or a two-way radio

When a cellular phone is used inside the vehicle, noise may be produced from the audio equipment. This does not mean that something is wrong with the audio equipment. In such a case, use the cellular phone at a place as far as possible from the audio equipment.

## **A** CAUTION

When using a communication system such a cellular phone or a radio set inside the vehicle, a separate external antenna must be fitted. When a cellular phone or a radio set is used with an internal antenna alone, it may interfere with the vehicle's electrical system and adversely affect safe operation of the vehicle.

## **A** WARNING

Don't use a cellular phone when you are driving. You should stop at a safe place to use a cellular phone.

#### Care of discs

- If the temperature inside the car is too high, open the car windows for ventilation before using your car audio.
- It is illegal to copy and use MP3/WMA files without permission. Use CDs that are created only by lawful means.
- Do not apply volatile agents such as benzene and thinner, normal cleaners and magnetic sprays made for analogue disc onto CDs.
- To prevent the disc surface from getting damaged. Hold and carry CDs by the edges or the edges of the center hole only.
- Clean the disc surface with a piece of soft cloth before playback (wipe it from the center to the outside edge).
- Do not damage the disc surface or attach pieces of sticky tape or paper onto it.
- Make sure nothing other than CDs are inserted into the CD player (Do not insert more than one CD at a time).

- Keep CDs in their cases after use to protect them from scratches or dirt.
- Depending on the type of CD-R/CD-RW CDs, certain CDs may not operate normally depending upon manufacturing companies or processes and recording methods. In such circumstances, if you still continue to use those CDs, they may cause the malfunction of your car audio system.

# \* NOTICE - Playing an Incompatible Copy Protected Audio CD

Some copy protected CDs, which do not comply with the international audio CD standards (Red Book), may not play on your car audio. Please note that if you try to play copy protected CDs and the CD player does not perform correctly the CDs maybe defective, not the CD player.

## RADIO, SET UP, VOLUME CONTROL (PA710BH)



- 1. Power ON/OFF
- 2. FM Selection Button
- 3. AM Selection Button
- 4. Automatic Channel Selection Button
- 5. Preset Button
- 6. AST (AUTO STORE Button)
- 7. TUNE/SETUP Button

PA710BHC(BHG,BHM)

## 1. Power ON/OFF & Volume Control Switch

Turns ON/OFF when the ignition switch is in ACC or ON. Turn the switch to the right to increase the volume, turn the switch to the left to decrease the volume.

#### 2. FM Selection Button

Turns to FM mode and toggles FM1 and FM2 when the button is pressed each time.

#### 3. AM Selection Button

Turns to AM mode.

## 4. Automatic Channel Selection Button

- When the [SEEK V] button is pressed, it reduces the band frequency to automatically select channel. Stops at the previous frequency if no channel is found
- When the [SEEK \ ] button is pressed, it increases the band frequency to automatically select channel. Stops at the previous frequency if no channel is found.

#### 5. Pre-set Button

Push [1]~[6] buttons less than 0.8 second to play the channel saved in each button. Push pre-set button for more than 0.8 second to save current channel to the respective button with a beep.

FarmaSOS.com

## 6. AST (AUTO STORE) Button

When the button is pressed, it automatically selects and saves channels with high reception rate to PRESET buttons(1~6) and plays the most strong frequency saved in PRESET.

If no channel is saved after AST, it will play the previous channel.

#### 7. TUNE/SETUP Button

When you turn the button clockwise or counterclockwise, the frequency increases or decreases by each step.

General(AM 9kHz, FM 100kHz), USA (AM 10kHz, FM 200kHz)

Press the button to enter the SETUP mode. If no action is taken for 5 seconds after pressing the button, it will return to the play mode. (After entering SETUP mode, move between items using the left, right and push functions of the TUNE/SETUP button.)



## 1. RANDOM Play Button

Turns on/off the randomization of the play list of files in the currently played DISC. To cancel the mode, press the button once again.

#### 2. REPEAT Button

Repeats current song when the button is pressed for less than 0.8 second.

Repeats the entire DISC when the button is pressed for more than 0.8 second.

#### 3. CD Selection Button

Turns to CD mode.

## 4. Automatic Track Selection Button

- Push [SEEK V] button for less than 0.8 second and press again within 1 seconds to play the previous song.
- Push [SEEK V] button for more than 0.8 second to initiate reverse direction high speed sound search of current song.
- Push [SEEK ∧] button for less than 0.8 second to play the next song.
- Push [SEEK \( \)] button for more than 0.8 second to initiate high speed sound search of current song.

#### 5. CD Eject Button

Push ≜ button to eject the CD during CD playback. This button is enabled when ignition switch is off.

### 6. SCAN Play Button

Play back the first 10 seconds of each song in the DISC. To cancel the mode, press the button once again.

#### 7. TUNE/SETUP Button

Turn the button clockwise to display songs after current song.

Also, turn the button counterclockwise to display songs before current song.

To listen to the displayed song, press the button to skip to the song and play.

#### 8. INFO Button

Displays the information of the current CD TRACK (or FILE) in the order of DISC TITLE→DISC ARTIST→TRACK TITLE→TRACK ARTIST→TOTAL→Play Screen→DISC TITLE... when the button is pressed each time.

#### 9. Folder Search Button

- Push [FOLDER 

  ] button child folder
  of the current folder and display the first
  song in the folder. Press TUNE/SETUP
  button to move to the folder displayed. It
  will play the first song in the folder.
- Push [FOLDER \( \)] button parent folder and displays the first song in the folder. Press TUNE/SETUP button to move to the folder displayed. It will play the first song in the folder.
   (MP3 only)

#### 10. CD Indicator

When the ignition switch is in ACC or ON and if the CD is loaded, this indicator is illuminated. If the CD is ejected the light turnes off.

## 11. CD loading slot

Face the printed side upward and gently push in. When the ignition switch is on ACC or ON and power is off, power is automatically turned on if the CD is loaded. CDP supports 12 cm CDs. But if VCD, Data CD, DVD are loaded, "Media Error" message will appear.



تلفن شبانه روزى: ۵۸۰۲۹۸۸۸–۲۲

FarmaSOS.com

## 

- To use the external USB device, make sure the device is not mounted when starting up the vehicle and mount the device after starting up.
- If you start the vehicle when the USB device is mounted, it may damage the USB device. (USB is not ESA)
- If the vehicle is started up or turned off while the external USB device is connected, the external USB device may not work.
- It may not play inauthentic MP3 or WMA files.
  - 1) It can only play MP3 files with the compression rate between 8Kbps~320Kbps.
  - 2) It can only play WMA music files with the compression rate between 8Kbps~320Kbps.
- Take cautions for static electricity when mounting or dismounting the external USB device.
- Encoded MP3 PLAYER is not recognizable.

(Continued)

#### (Continued)

- Depending on the condition of the external USB device, the connected external USB device can be unrecognizable.
- When the formatted byte/sector setting of External USB devices is not either 512BYTE or 2048BYTE, then the device will not be recognized.
- Only the USB device formatted to FAT 12/16/32.
- USB device without USB IF authentication may not be recognizable.
- Make sure the USB connection terminal does not come in contact with human body or any object.
- If you repeat mounting or dismounting USB device in a short period of time, it may break the device.
- You might hear strange noise when mounting or dismounting a USB device.

(Continued)

#### (Continued)

- If you dismount the external USB device during playback in USB mode, the external USB device can be damaged or malfunction. Therefore, mount the external USB device when the engine is turned off or in another mode.
- Depending on the type and capacity of the external USB device or the type of the files stored in the device, there is a difference in the time taken for recognition of the device, but this is not a trouble and you only have to wait.
- Do not use the USB device for other purposes than playing music files.
- Use of USB accessories such as the recharger or heater using USB I/F may lower the performance or cause trouble.
- If you use devices such as the USB hub you purchased separately, the vehicle's audio system may not recognize the USB device. Connect the USB device directly to the multimedia terminal of the vehicle.

(Continued)

#### (Continued)

- If USB device is divided by logical drives, only the music files on the highest-priority drive are recognized by car audio.
- Devices such as MP3 Player/ Cellular phone/Digital camera those are not recognizable by standard USB I/F can be unrecognizable.
- USB devices other than standardized goods (METAL COVER TYPE USB) can be unrecognizable.
- USB flash memory reader (such as CF, SD, microSD, etc.) or external-HDD type devices can be unrecognizable.
- Music files protected by DRM (DIGITAL RIGHTS MANAGEMENT) are not recognizable.
- The data in the USB memory may lost while using this AUDIO, It is recommeded to back up important data on a personal.

(Continued)

#### (Continued)

 Please avoid using USB memory products which can be used as key chains or cellular phone accessories as they could cause damage to the USB jack. Please make certain only to use plug type connector products as shown below.





FarmaSOS.com

## **USING USB (PA710BH)**



- 1. RANDOM Play Button
- 2. REPEAT Button
- 3. Automatic Track Selection Button
- 4. AUX Selection Button
- 5. SCAN Play Button
- 6. TUNE/SETUP Button
- 7. INFO Button
- 8. Folder Search Button

PA710BHC(BHG,BHM)

In case USB is connected to the multiple terminal inside the console on the right hand side of the driver's seat.

#### 1. RANDOM Play Button

Turns on/off the randomization of the play list of files in the currently played folder. Press the button for more than 0.8 seconds to randomly play the entire songs in the USB device. To cancel the mode, press the button once again.

#### 2. REPEAT Button

Repeats current song when the button is pressed for less than 0.8 second.

Repeats the entire folder when the button is pressed for 0.8 second or longer.

## 3. Automatic Track Selection Button

- Push [SEEK V] button for less than 0.8 second to play from the beginning of current song.
- Push [SEEK V] button for less than 0.8 second and press again within 1 seconds to play the previous song.
- Push [SEEK V] button for 0.8 second or longer to initiate reverse direction high speed sound search of current song.
- Push [SEEK ∧] button for less than 0.8 second to play the next song.
- Push [SEEK \( \)] button for 0.8 second or longer to initiate high speed sound search of current song.

#### 4. AUX Selection Button

If USB device is connected, it switches to the USB mode to play the song files stored in the USB.

If the auxiliary device is connected, it turns to AUX mode to play the sound from the auxiliary player.

## 5. SCAN Play Button

Play back the first 10 seconds of each song in the folder. To cancel the mode, press the button once again.

#### 6. TUNE/SETUP Button

Turn this button clockwise to display songs after current song.

Also, turn this button counterclockwise to display songs before current song.

To listen to the displayed song, press the button to skip to the song and play.

#### 7. INFO Button

Displays the information of the file currently palyed in order of FILE→TITLE →ARTIST→ALBUM→FOLDER→TOTAL→ Play Screen→FILE... when the button is pressed each time.

#### 8. Folder Search Button

- Push [FOLDER 

  ] button child folder
  of the current folder and display the first
  song in the folder. Press TUNE/SETUP
  button to move to the folder displayed. It
  will play the first song in the folder.
- Push [FOLDER \( \)] button parent folder and displays the first song in the folder. Press TUNE/SETUP button to move to the folder displayed. It will play the first song in the folder. (MP3 only)



تلفن شبانه روزی: ۵۸۰۲۹۸۸۸ تلفن شبانه روزی:

FarmaSOS.com

## RUNNING iPod® (PA710BH)



- 1. RANDOM Play Button
- 2. REPEAT Button
- 3. Automatic Track Selection Button
- 4. AUX Selection Button
- 5. Category Select Button
- 6. TUNE/SETUP Button
- 7. INFO Button

PA710BHC(BHG, BHM)

Using un iPod® when the exclusive cable is connected to the multiple terminal inside the console on the right hand side of the driver's seat.

## 1. RANDOM Playback Button

Press the button for less than 0.8 second to activate or deactivate the random play-back of the songs within the current category. Press the button for longer than 0.8 second to randomly play all songs in the entire album of the iPod®. Press the button once again to cancel the mode.

#### 2. REPEAT Button

Repeats the song currently played.

## 3. Automatic Track Selection Button

- Push [SEEK V] button for less than 0.8 second to play from the beginning of the current song.
- Push [SEEK V] button for less than 0.8 second and press again within 1 seconds to play the previous song.
- Push [SEEK V] button for 0.8 second or longer to initiate reverse direction high speed sound search of current song.
- Push [SEEK ∧] button for less than 0.8 second to play the next song.
- Push [SEEK \( \)] button for 0.8 second or longer to initiate high speed sound search of current song.

#### 4. AUX Selection Button

If an iPod® is connected, it switches to the iPod® mode to play the song files stored in the iPod®.

### 5. Category Selection Button

Press [CAT FOLDER \(\simegr) \sqrt{1}\) button to move the category and display the first song in the category. Press TUNE/SETUP button to move to the category displayed. It will play the first song in the folder.

(PLAYLISTS → ARTISTS→ ALBUMS → GENRES → SONGS → COMPOSERS → PLAYLISTS → ...)

#### 6. TUNE/SETUP Button

Turn this button clockwise or counterclockwise, it will display the category menu. To select the displayed menu, press the button.

#### 7. INFO Button

Displays the information of the file currently played in order of TITLE → ARTIST → ALBUM → Play Screen → TITLE...

## \* NOTICE FOR USING iPod® DEVICE

- Some iPod® models might not support the communication protocol and the files will not be played. (iPod® models supported: Mini, 4G, Photo, Nano, 5G)
- The order of search or playback of songs in the iPod® can be different from the order searched in the audio system.
- If the iPod® crashes due to its own trouble, reset iPod®. (Reset: Refer to iPod® manual)
- iPod® may not operate normally on low battery.

## **⚠** CAUTION IN USING iPod® DEVICE

- You need the power cable exclusive for iPod® in order to operate iPod® with the buttons on the audio system. The PC cable provided by Apple may cause malfunction and do not use it for yehicle use.
- When connecting the device with iPod<sup>®</sup> cable, push in the jack fully not to interfere with communication.
- When adjusting the sound effects of iPod® and the audio system, the sound effects of both devices will overlap each and might cause reduce or distort the quality of the sound.
- Deactivate (turn off) the equalizer function of iPod® when adjusting the audio system's volume, and turn off the equalizer of the audio system when using the equalizer of iPod®.

(Continued)

#### (Continued)

- When the iPod® cable is connected, the system can be switched to the AUX mode even without the iPod® device and can cause noise. Disconnect iPod® cable when you are not using the iPod® device.
- When the iPod<sup>®</sup> is not used at audio system, iPod<sup>®</sup> cable has to be separate from iPod<sup>®</sup> device. Origin display of iPod<sup>®</sup> may not be displayed.

## RADIO, SET UP, VOLUME CONTROL (PA760BH)



- 1. Power ON/OFF
- 2. FM Selection Button
- 3. AM Selection Button
- 4. Automatic Channel Selection Button
- 5. Preset Button
- 6. AST (AUTO STORE Button)
- 7. TUNE/SETUP Button

\* Lexicon mark is optional

PA760BHC(BHG,BHM)

## 1. Power ON/OFF & Volume Control Button

Turns ON/OFF set when the ignition switch is in ACC or ON. If the button is turned to the right, it increases the volume and left, decreases the volume.

#### 2. FM Selection Button

Turns to FM mode and toggles FM1 and FM2 when the button is pressed each time.

#### 3. AM Selection Button

Turns to AM mode.

## 4. Automatic Channel Selection Button

- When the [SEEK V] button is pressed, it reduces the band frequency to automatically select channel. Stops at the previous frequency if no channel is found.
- When the [SEEK \ ] button is pressed, it increases the band frequency to automatically select channel. Stops at the previous frequency if no channel is found.

#### 5. Preset Button

Push [1]~[6] buttons less than 0.8 second to play the channel saved in each button. Push pre-set button for more than 0.8 second to save current channel to the respective button with a beep.

FarmaSUS.com

#### 6. AST (AUTO STORE Button)

When the button is pressed, it automatically selects and saves channels with high reception rate to PRESET buttons(1~6) and plays the most strong frequency saved in PRESET.

If no channel is saved after AST, it will play the previous channel.

#### 7. TUNE/SETUP Button

- When you rotate to clockwise or counterclockwise, the frequency increase or decreases by each step.
  - General(AM 9kHz, FM 100kHz), USA (AM 10kHz, FM 200kHz)
- When you press this button, enter the SETUP mode. If no action is taken for 5 seconds after pressing the button, it will return to the play mode. (After entering SETUP mode, move between items using the left, right and push functions of the TUNE/SETUP button.)

\* SURROUND is only Lexicon model.

## CDC (PA760BH)



- 1. RANDOM Play Button
- 2. REPEAT Button
- 3. CD Selection Button
- 4. Automatic Track Selection Button
- 5. CD Eject Button
- 6. DISC Selection Button
- 7. SCAN Play Button
- 8. TUNE/SETUP Button
- 9. INFO Button
- 10. Folder Search Button
- 11. CD Load Button
- 12. CD loading slot

PA760BHC(BHG,BHM)

### 1. RANDOM Play Button

Turns on/off the randomization of the play list of files in the currently played DISC. To cancel the mode, press the button once again.

#### 2. REPEAT Button

Repeats current song when the button is pressed for less than 0.8 second.

Repeats the entire DISC when the button is pressed for 0.8 second or longer.

#### 3. CD Selection Button

Turns to CD mode.

## 4. Automatic Track Selection Button

- Push [SEEK V] button for less than 0.8 second to play from the beginning of current song.
- Push [SEEK V] button for less than 0.8 second and press again within 1 seconds to play the previous song.
- Push [SEEK V] button for more than 0.8 second to initiate reverse direction high speed sound search of current song.
- Push [SEEK ∧] button for less than 0.8 second to play the next song.
- Push [SEEK \( \)] button for more than 0.8 second to initiate high speed sound search of current song.

#### 5. CD eject Button

Push ≜ button for less than 0.8 second to eject the CD during CD playback. All eject disc in the slot when the button is pressed for 0.8 second or longer. This button is enabled when ignition switch is off.

#### 6. DISC Selection Button

- [DISC \( \)] Change Button Change disc to the next disc.

### 7. SCAN Play Button

Play back the first 10 seconds of each song in the DISC. To cancel the mode, press the button once again.

#### 8. TUNE/SETUP Button

Turn this button clockwise to display songs after current song.

Also, turn this button counterclockwise to display songs before current song.

To listen to the displayed song, press the button to skip to the song and play.

#### 9. INFO Button

Displays the information of the current CD TRACK (or FILE) in the order of DISC TITLE→DISC ARTIST→TRACK TITLE→TRACK ARTIST→TOTAL→Play Screen→DISC TITLE... when the button is pressed each time.

#### 10. Folder Search Button

- Push [FOLDER \( \sqrt{} \)] button child folder of the current folder and display the first song in the folder. Press TUNE/SETUP button to move to the folder displayed. It will play the first song in the folder.
- Push [FOLDER \( \)] button parent folder and displays the first song in the folder. Press TUNE/SETUP button to move to the folder displayed. It will play the first song in the folder. (MP3 only)

#### 11.CD LOAD Button

Push [LOAD] button to load CDs to available 6-Disc deck (from  $1\sim6$ ). Push [LOAD] button for more than 0.8 second to load into all available decks.

The last CD will play.

### 12. CD loading slot

Please face printed side upward and gently push in. When the ignition switch is on ACC or ON and power is off, power is automatically turned on if the CD is loaded. This CDP supports 12cm CDs. But if VCD, Data CD, DVD are loaded, "Media Error" message will appear.



تلفن شبانه روزی: ۱۳۰۵ مراکب ۲۱–۲۱۹

FarmaSOS.com

## **A** CAUTION IN USING USB DEVICE

- To use the external USB device, make sure the device is not mounted when starting up the vehicle and mount the device after starting up.
- If you start the vehicle when the USB device is mounted, it may damage the USB device. (USB is not ESA)
- If the vehicle is started up or turned off while the external USB device is connected, the external USB device may not work.
- It may not play inauthentic MP3 or WMA files.
  - 1) It can only play MP3 files with the compression rate between 8Kbps~320Kbps.
  - It can only play WMA music files with the compression rate between 8Kbps~320Kbps.
- Take cautions for static electricity when mounting or dismounting the external USB device.
- Encoded MP3 PLAYER is not recognizable.

(Continued)

### (Continued)

- Depending on the condition of the external USB device, the connected external USB device can be unrecognizable.
- When the formatted byte/sector setting of External USB devices is not either 512BYTE or 2048BYTE, then the device will not be recognized.
- Only the USB device formatted to FAT 12/16/32.
- USB device without USB IF authentication may not be recognizable.
- Make sure the USB connection terminal does not come in contact with human body or any object.
- If you repeat mounting or dismounting USB device in a short period of time, it may break the device.
- You might hear strange noise when mounting or dismounting a USB device.

(Continued)

### (Continued)

- If you dismount the external USB device during playback in USB mode, the external USB device can be damaged or malfunction. Therefore, mount the external USB device when the engine is turned off or in another mode.
- Depending on the type and capacity of the external USB device or the type of the files stored in the device, there is a difference in the time taken for recognition of the device, but this is not a trouble and you only have to wait.
- Do not use the USB device for other purposes than playing music files.
- Use of USB accessories such as the recharger or heater using USB I/F may lower the performance or cause trouble.
- If you use devices such as the USB hub you purchased separately, the vehicle's audio system may not recognize the USB device. Connect the USB device directly to the multimedia terminal of the vehicle.

(Continued)

### (Continued)

- If USB device is divided by logical drives, only the music files on the highest-priority drive are recognized by car audio.
- Devices such as MP3 Player/ Cellular phone/Digital camera those are not recognizable by standard USB I/F can be unrecognizable.
- USB devices other than standardized goods (METAL COVER TYPE USB) can be unrecognizable.
- USB flash memory reader (such as CF, SD, microSD, etc.) or external-HDD type devices can be unrecognizable.
- Music files protected by DRM (DIGITAL RIGHTS MANAGEMENT) are not recognizable.
- The data in the USB memory may lost while using this AUDIO, It is recommeded to back up important data on a personal.

(Continued)

#### (Continued)

 Please avoid using USB memory products which can be used as key chains or cellular phone accessories as they could cause damage to the USB jack. Please make certain only to use plug type connector products as shown below.





FarmaSOS.com





- 1. RANDOM Play Button
- 2. REPEAT Button
- 3. Automatic Track Selection Button
- 4. AUX Selection Button
- 5. SCAN Play Button
- 6. TUNE/SETUP Button
- 7. INFO Button
- 8. Folder Search Button

PA760BHC(BHG,BHM)

In case USB is connected to the multiple terminal inside the console on the right hand side of the driver's seat.

## 1. RANDOM Play Button

Turns on/off the randomization of the play list of files in the currently played folder. Press the button for more than 0.8 second to randomly play the entire songs in the USB device. To cancel the mode, press the button once again.

#### 2. REPEAT Button

Repeats current song when the button is pressed for less than 0.8 second.

Repeats the entire folder when the button is pressed for 0.8 second or longer.

# 3. Automatic Track Selection Button

- Push [SEEK V] button for less than 0.8 second and press again within 1 seconds to play the previous song.
- Push [SEEK V] button for more than 0.8 second or initiate reverse direction high speed sound search of current song.
- Push [SEEK ∧] button for less than 0.8 second to play the next song.
- Push [SEEK \( \)] button for more than 0.8 second to initiate high speed sound search of current song.

#### 4. AUX Selection Button

If USB device is connected, it switches to the USB mode to play the song files stored in the USB.

If the auxiliary device is connected, it turns to AUX mode to play the sound from the auxiliary player.

# 5. SCAN Play Button

Play back the first 10 seconds of each song in the folder. To cancel the mode, press the button once again.

#### 6. TUNE/SETUP Button

Turn this button clockwise to display songs after current song.

Also, turn this button counterclockwise to display songs before current song.

To listen to the displayed song, press the button to skip to the song and play.

#### 7. INFO Button

Displays the information of the file currently palyed in order of FILE→TITLE →ARTIST→ALBUM→FOLDER→TOTAL→ Play Screen→FILE... when the button is pressed each time.

#### 8. Folder Search Button

- Push [FOLDER 

  ] button child folder
  of the current folder and display the first
  song in the folder. Press TUNE/SETUP
  button to move to the folder displayed. It
  will play the first song in the folder.
- Push [FOLDER \( \)] button parent folder and displays the first song in the folder. Press TUNE/SETUP button to move to the folder displayed. It will play the first song in the folder. (MP3 only)



تلفن شبانه روزی: ۵۸۰۲۹۸۸۸ تلفن شبانه روزی:

FarmaSOS.com

# RUNNING iPod® (PA760BH)



- 1. RANDOM Play Button
- 2. REPEAT Button
- 3. Automatic Track Selection Button
- 4. AUX Selection Button
- 5. Category Select Button
- 6. TUNE/SETUP Button
- 7. INFO Button

PA760BHC(BHG,BHM)

Using un iPod® when the exclusive cable is connected to the multiple terminal inside the console on the right hand side of the driver's seat.

# 1. RANDOM Playback Button

Press the button for less than 0.8 second to activate or deactivate the random play-back of the songs within the current category. Press the button for longer than 0.8 second to randomly play all songs in the entire album of the iPod®. Press the button once again to cancel the mode.

#### 2. REPEAT Button

Repeats the song currently played.

# 3. Automatic Track Selection Button

- Push [SEEK V] button for less than 0.8 second to play from the beginning of the current song.
- Push [SEEK V] button for less than 0.8 second and press again within 1 seconds to play the previous song.
- Push [SEEK V] button for 0.8 second or longer to initiate reverse direction high speed sound search of current song.
- Push [SEEK ∧] button for less than 0.8 second to play the next song.
- Push [SEEK \( \)] button for 0.8 second or longer to initiate high speed sound search of current song.

#### 4. AUX Selection Button

If an iPod® is connected, it switches to the iPod® mode to play the song files stored in the iPod®.

# 5. Category Selection Button

Press [CAT FOLDER \(\simegr) \sqrt{1}\) button to move the category and display the first song in the category. Press TUNE/SETUP button to move to the category displayed. It will play the first song in the folder.

(PLAYLISTS → ARTISTS → ALBUMS → GENRES → SONGS → COMPOSERS → PLAYLISTS → ...)

#### 6. TUNE/SETUP Button

Turn this button clockwise or counterclockwise, it will display the category menu. To select the displayed menu, press the button.

#### 7. INFO Button

Displays the information of the file currently played in order of TITLE→ARTIST →ALBUM→Play Screen→TITLE...

# \* NOTICE FOR USING iPod® DEVICE

- Some iPod® models might not support the communication protocol and the files will not be played. (iPod® models supported: Mini, 4G, Photo, Nano, 5G)
- The order of search or playback of songs in the iPod® can be different from the order searched in the audio system.
- If the iPod® crashes due to its own trouble, reset iPod®. (Reset: Refer to iPod® manual)
- iPod® may not operate normally on low battery.


# CAUTION IN USING iPod® DEVICE

- You need the power cable exclusive for iPod® in order to operate iPod® with the buttons on the audio system. The PC cable provided by Apple may cause malfunction and do not use it for yehicle use.
- When connecting the device with iPod® cable, push in the jack fully not to interfere with communication.
- When adjusting the sound effects of iPod® and the audio system, the sound effects of both devices will overlap each and might cause reduce or distort the quality of the sound.
- Deactivate (turn off) the equalizer function of iPod® when adjusting the audio system's volume, and turn off the equalizer of the audio system when using the equalizer of iPod®.

(Continued)

## (Continued)

- When the iPod® cable is connected, the system can be switched to the AUX mode even without the iPod® device and can cause noise. Disconnect iPod® cable when you are not using the iPod® device.
- When the iPod<sup>®</sup> is not used at audio system, iPod<sup>®</sup> cable has to be separate from iPod<sup>®</sup> device. Origin display of iPod<sup>®</sup> may not be displayed.

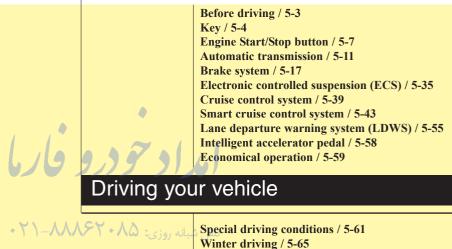

Vehicle weight / 5-69
Trailer towing / 5-70

#### E010000ABH

# Δ ....

#### **WARNING - ENGINE EXHAUST CAN BE DANGEROUS!**

Engine exhaust fumes can be extremely dangerous. If, at any time, you smell exhaust fumes inside the vehicle, open the windows immediately.

#### • Do not inhale exhaust fumes.

Exhaust fumes contain carbon monoxide, a colorless, odorless gas that can cause unconsciousness and death by asphyxiation.

## Be sure the exhaust system does not leak.

The exhaust system should be checked whenever the vehicle is raised to change the oil or for any other purpose. If you hear a change in the sound of the exhaust or if you drive over something that strikes the underneath side of the car, have the exhaust system checked as soon as possible by an authorized HYUNDAI dealer.

#### • Do not run the engine in an enclosed area.

Letting the engine idle in your garage, even with the garage door open, is a hazardous practice. Never run the engine in your garage any longer than it takes to start the engine and back the car out.

# • Avoid idling the engine for prolonged periods with people inside the car.

If it is necessary to idle the engine for a prolonged period with people inside the car, be sure to do so only in an open area with the air intake set at "Fresh" and fan operating at one of the higher speeds so fresh air is drawn into the interior.

If you must drive with the trunk lid open because you are carrying objects that make this necessary:

- 1. Close all windows.
- 2. Open side vents.
- 3. Set the air intake control at "Fresh", the air flow control at "Floor" or "Face" and the fan at one of the higher speeds.

To assure proper operation of the ventilation system, be sure the ventilation air intakes located just in front of the windshield are kept clear of snow, ice, leaves or other obstructions.

#### **BEFORE DRIVING**

E020100AUN

# Before entering vehicle

- Be sure that all windows, outside mirror(s), and outside lights are clean.
- · Check the condition of the tires.
- Check under the vehicle for any sign of leaks.
- Be sure there are no obstacles behind you if you intend to back up.

E020200AUN

# **Necessary inspections**

Fluid levels, such as engine oil, engine coolant, brake fluid, and washer fluid should be checked on a regular basis, with the exact interval depending on the fluid. Further details are provided in section 7, "Maintenance".

# A WARNING

Driving while distracted can result in a loss of vehicle control, that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

#### E020300AUN

# **Before starting**

- Close and lock all doors.
- Position the seat so that all controls are easily reached.
- Adjust the inside and outside rearview mirrors.
- Be sure that all lights work.
- Check all gauges.
- Check the operation of warning lights when the ignition switch is turned to the ON position.
- Release the parking brake and make sure the brake warning light goes out.

For safe operation, be sure you are familiar with your vehicle and its equipment.

# **WARNING**

All passengers must be properly belted whenever the vehicle is moving. Refer to "Seat belts" in section 3 for more information on their proper use.

# **WARNING**

Always check the surrounding areas near your vehicle for people, especially children, before putting a car into D (Drive) or R (Reverse).

# ★ WARNING - Driving under the influence of alcohol or drugs

Drinking and driving is dangerous. Drunk driving is the number one contributor to the highway death toll each year. Even a small amount of alcohol will affect your reflexes, perceptions and judgment. Driving while under the influence of drugs is as dangerous or more dangerous than driving drunk.

You are much more likely to have a serious accident if you drink or take drugs and drive.

If you are drinking or taking drugs, don't drive. Do not ride with a driver who has been drinking or taking drugs. Choose a designated driver or call a cab.

# **A** WARNING

- When you intend to park or stop the vehicle with the engine on, be careful not to depress the accelerator pedal for a long period of time. It may overheat the engine or exhaust system and cause fire.
- When you make a sudden stop or turn the steering wheel rapidly, loose objects may drop on the floor and it could interfere with the operation of the foot pedals, possibly causing an accident. Keep all things in the vehicle safely stored.
- If you do not focus on driving, it may cause an accident. Be careful when operating what may disturb driving such as audio or heater. It is the responsibility of the driver to always drive safely.

## **KEY**



F030100AFN

# Illuminated ignition switch

Whenever a front door is opened, the ignition switch will be illuminated for your convenience, provided the ignition switch is not in the ON position. The light will go off immediately when the ignition switch is turned on or go off after about 30 seconds when the door is closed.



# Ignition switch position

E030201AUN

# LOCK

The steering wheel locks to protect against theft. The ignition key can be removed only in the LOCK position. When turning the ignition switch to the LOCK position, push the key inward at the ACC position and turn the key toward the LOCK position.

E030202ABH

ACC (Accessory)

The steering wheel is unlocked and electrical accessories are operative.

#### \* NOTICE

If difficulty is experienced turning the ignition switch to the ACC position, turn the key while turning the steering wheel right and left to release the tension.

E030203AB

The warning lights can be checked before the engine is started. This is the normal running position after the engine is started.

Do not leave the ignition switch ON if the engine is not running to prevent the battery from discharging.

E030204AUN

#### **START**

Turn the ignition switch to the START position to start the engine. The engine will crank until you release the key; then it returns to the ON position. The brake warning lamp can be checked in this position.

F030205ABH

# A WARNING - Ignition switch

- Never turn the ignition switch to LOCK or ACC while the vehicle is moving. This would result in loss of directional control and braking function, which could cause an accident.
- The anti-theft steering column lock is not a substitute for the parking brake. Before leaving the driver's seat, always make sure the shift lever is engaged in P (Park), set the parking brake fully and shut the engine off. Unexpected and sudden vehicle movement may occur if these precautions are not taken.
- Never reach for the ignition switch, or any other controls through the steering wheel while the vehicle is in motion. The presence of your hand or arm in this area could cause a loss of vehicle control, an accident and serious bodily injury or death.

(Continued)

# (Continued)

 Do not place any movable objects around the driver's seat as they may move while driving, interfere with the driver and lead to an accident.

# Starting the engine

F040000AUN-FU

# **WARNING**

Always wear appropriate shoes when operating your vehicle. Unsuitable shoes (high heels, ski boots,etc.) may interfere with your ability to use the brake and accelerator pedal.

#### E040100ABH

- 1. Make sure the parking brake is applied.
- 2. Place the shift lever in P (Park). Depress the brake pedal fully.
  - You can also start the engine when the shift lever is in the N (Neutral) position.
- 3. Turn the ignition switch to START and hold it there until the engine starts (a maximum of 10 seconds), then release the kev.
- 4. In extremely cold weather (below -18°C / 0°F) or after the vehicle has not been operated for several days, let the engine warm up without depressing the accelerator.

Whether the engine is cold or warm, it should be started without depressing the accelerator.

# **!\ CAUTION**

If the engine stalls while you are in motion, do not attempt to move the shift lever to the P (Park) position. If traffic and road conditions permit. you may put the shift lever in the N (Neutral) position while the vehicle is still moving and turn the ignition switch to the START position in an attempt to restart the engine.

# **!** CAUTION

Do not engage the starter for more than 10 seconds. If the engine stalls or fails to start, wait 5 to 10 seconds before re-engaging the starter. Improper use of the starter may damage it.

# **ENGINE START/STOP BUTTON (IF EQUIPPED)**



E030100ABH

# Illuminated engine start/stop button

Whenever the front door is opened, the engine start/stop button will illuminate for your convenience. The light will go off immediately when the engine start/stop button turns to the ON position or go off after about 30 seconds when the door is closed.

# Engine start/stop button position

E030701ABH

#### **OFF**

To turn off the engine, press the engine start/stop button with the engine start/stop button ON and the shift lever in P(Park). When you press the engine start/stop button without the shift lever in P(Park), the engine start/stop button does not turn to the OFF position, but turns to the ACC position.

Also, the steering wheel locks when the engine start/stop button is in the OFF position to protect against theft.

It locks when the door is opened, when you pull out the smart key from the smart key holder, or when you lock the doors using the transmitter (or the smart key).

# \* NOTICE

- If difficulty is experienced turning the engine start/stop button to the ACC position, turn the steering wheel right and left to release the tension while pressing the engine start/stop button.
- When you turn off the engine, the vehicle should be stopped.

# **WARNING**

You are able to turn off the engine (START) or vehicle power (ON), only when the vehicle is not in motion. In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the engine start/stop button for more than 2 seconds or 3 times successively within 3 seconds. If the vehicle is still moving, you can restart the engine without depressing the brake pedal by pressing the engine start/stop button with the shift lever in the N (Neutral) position.

#### E030202ABH

# ACC (Accessory)

Press the engine start/stop button when it is in the OFF position without depressing the brake pedal.

The steering wheel is unlocked and electrical accessories are operative.

If you leave the engine start/stop button in the ACC position for more than 1 hour, the engine is off automatically to prevent the battery from discharging.

#### E030203ABH

#### ON

Press the engine start/stop button while it is in the ACC position without depressing the brake pedal.

The warning lights can be checked before the engine is started. Do not leave the button in the ON position if the engine is not running to prevent the battery from discharging.

#### E030704ABH

#### START

To start the engine, press the brake pedal and press the engine start/stop button with the shift lever in the P(Park) or the N(Neutral) position. For your safety, start the engine with the shift lever in the P (Park) position.

#### \* NOTICE

 If you press the engine start/stop button without depressing the brake pedal, the engine does not start and the engine start/stop button changes as follow:

$$OFF \rightarrow ACC \rightarrow ON \rightarrow OFF$$

 If you leave the engine start/stop button in the ACC or the ON position for a long time, the battery may be discharged. E030205ABH

# **A WARNING**

- Never press the engine start/stop button while the vehicle is in motion. This would result in the engine turning off and loss of power assist for the steering and brakes, which may lead to loss of directional control and braking function, which could cause an accident.
- The anti-theft steering column lock is not a substitute for the parking brake. Before leaving the driver's seat, always make sure the shift lever is engaged in P (Park), set the parking brake fully and shut the engine off. Unexpected and sudden vehicle movement may occur if these precautions are not taken.

(Continued)

# (Continued)

- Never reach for the engine start/stop button, or any other controls through the steering wheel while the vehicle is in motion. The presence of your hand or arm in this area could cause a loss of vehicle control, an accident and serious bodily injury or death.
- Do not place any movable objects around the driver's seat as they may move while driving, interfere with the driver and lead to an accident.

# Starting the engine

E040000ABH

# **A** WARNING

Always wear appropriate shoes when operating your vehicle. Unsuitable shoes (high heels, ski boots, etc.) may interfere with your ability to use the brake and accelerator pedal.

#### E040100ABH

- 1. Carry the smart key or leave it inside the vehicle.
- 2. Make sure the parking brake is firmly applied.
- 3. Place the shift lever in the P(Park) position.
- 4. Depress the brake pedal.
- 5. Press the engine start/stop button.
- In extremely cold weather (below -18°C / 0°F) or after the vehicle has not been operated for several days, let the engine warm up without depressing the accelerator.

Whether the engine is cold or warm, it should be started without depressing the accelerator.

# **A** CAUTION

If the engine stalls while you are in motion, do not attempt to move the shift lever to the P (Park) position. If traffic and road conditions permit, you may put the shift lever in the N (Neutral) position while the vehicle is still moving and press the engine start/stop button in an attempt to restart the engine.

- Even if the smart key is in the vehicle, if it is far away from you, the engine may not start.
- When the engine start/stop button is in the ACC or ON position, if any door is open, the system checks for the smart key. If the smart key is not in the vehicle, the warning, "Key is not in vehicle" will come on, and if all doors are closed, the chime will also sound for about 5 seconds. The indicator will turn off while the vehicle is moving. Keep the smart key in the vehicle, when using the ACC position or if the vehicle engine is on.

# **WARNING**

The engine will start by pressing the engine start/stop button, only when the smart key is in the vehicle. Never allow children or any person who is unfamiliar with the vehicle to touch the engine start/stop button or related parts.



# \* NOTICE

- If the battery is weak or the smart key does not work correctly, you can start the engine by inserting the smart key into the smart key holder. To eject the smart key from the smart key holder, press the smart key inward passed the detent and then pull the key outward.
- When the stop lamp fuse is blown, you can't start the engine normally. Replace the fuse with a new one. If you are not able to replace the fuse, you can start the engine by pressing the engine start/stop button for 10 seconds with the engine start/stop button in the ACC. The engine can start without depressing the brake pedal. But for your safety always depress the brake pedal before starting the engine.

# **A** CAUTION

- Do not press the engine start/stop button for more than 5 seconds except when the stop lamp fuse is disconnected.
- When you eject the smart key from the smart key holder, press the smart key inward and pull it out. If you pull out the smart key forcibly without pushing the smart key, the smart key holder may be damaged and couldn't operate normally.

تلفن شبانه روزی: ۱-۸۸۸۶۲ ۲۸ - ۲۲

FarmaSOS.com

## **AUTOMATIC TRANSMISSION**



F060100ABH

# **Automatic transmission operation**

The automatic transmission has 8 forward speeds and one reverse speed. The individual speeds are selected automatically, depending on the position of the shift lever.

#### \* NOTICE

The first few shifts on a new vehicle, if the battery has been disconnected, may be somewhat abrupt. This is a normal condition, and the shifting sequence will adjust after shifts are cycled a few times by the TCM (Transmission Control Module) or PCM (Powertrain Control Module).

For smooth operation, depress the brake pedal when shifting from N (Neutral) to a forward or reverse gear.

# WARNING - Automatic transmission

- Always check the surrounding areas near your vehicle for people, especially children, before shifting a car into D (Drive) or R (Reverse).
- Before leaving the driver's seat, always make sure the shift lever is in the P (Park) position; then set the parking brake fully and shut the engine off. Unexpected and sudden vehicle movement can occur if these precautions are not followed in the order identified.

# **A** CAUTION

- To avoid damage to your transmission, do not accelerate the engine in R (Reverse) or any forward gear position with the brakes on.
- When stopped on an incline, do not hold the vehicle stationary with engine power. Use the service brake or the parking brake.
- Do not shift from N (Neutral) or P (Park) into D (Drive), or R (Reverse) when the engine is above idle speed.

تلفن شبانه روزی: ۱-۸۸۸۶۲ + ۲۸ ا

FarmaSOS.com

#### F060101BBH

## Transmission ranges

The indicator in the instrument cluster displays the shift lever position when the ignition switch is in the ON position.

#### P (Park)

Always come to a complete stop before shifting into P (Park). This position locks the transmission and prevents the drive wheels from rotating.

# **A WARNING**

- Shifting into P (Park) while the vehicle is in motion will cause the drive wheels to lock which will cause you to lose control of the vehicle.
- Do not use the P (Park) position in place of the parking brake.
   Always make sure the shift lever is latched in the P (Park) position and set the parking brake fully.
- Never leave a child unattended in a vehicle.



# **⚠** CAUTION

The transmission may be damaged if you shift into P (Park) while the vehicle is in motion.

## R (Reverse)

Use this position to drive the vehicle backward.

#### **!** CAUTION

Always come to a complete stop before shifting into or out of R (Reverse); you may damage the transmission if you shift into R (Reverse) while the vehicle is in motion, except as explained in "Rocking the vehicle" in this section.



FarmaSOS.com

#### N (Neutral)

The wheels and transmission are not engaged. The vehicle will roll freely even on the slightest incline unless the parking brake or service brakes are applied.


#### D (Drive)

This is the normal forward driving position. The transmission will automatically shift through a 8-gear sequence, providing the best fuel economy and power.

For extra power when passing another vehicle or climbing grades, depress the accelerator fully, at which time the transmission will automatically downshift to the next lower gear.

# \* NOTICE

Always come to a complete stop before shifting into D (Drive).

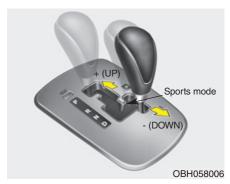

# Sports mode

Whether the vehicle is stationary or in motion, sports mode is selected by pushing the shift lever from the D (Drive) position into the manual gate. To return to D (Drive) range operation, push the shift lever back into the main gate.

In sports mode, moving the shift lever backwards and forwards will allow you to make gearshifts rapidly.

Up (+) : Push the lever forward once to shift up one gear.

Down (-): Pull the lever backwards once to shift down one gear.

# \* NOTICE

- In sports mode, the driver must execute upshifts in accordance with road conditions, taking care to keep the engine speed below the red zone.
- In sports mode, only the 8 forward gears can be selected. To reverse or park the vehicle, move the shift lever to the R (Reverse) or P (Park) position as required.
- In sports mode, downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected.
- In sports mode, when the engine rpm approaches the red zone shift points are varied to upshift automatically.
- To maintain the required levels of vehicle performance and safety, the system may not execute certain gearshifts when the shift lever is operated.
- When driving on a slippery road, push the shift lever forward into the +(up) position. This causes the transmission to shift into the 2nd (or 3rd) gear which is better for smooth driving on a slippery road. Push the shift lever to the -(down) side to shift back to the 1st gear.

#### E060102ABH

Shift lock system (if equipped)

For your safety, the automatic transmission has a shift lock system which prevents shifting the transmission from P (Park) or N (Neutral) into R (Reverse) unless the brake pedal is depressed.

To shift the transmission from P (Park) or N (Neutral) into R (Reverse):

- 1. Depress and hold the brake pedal.
- 2. Start the engine or turn the ignition switch to the ON position.
- 3. Move the shift lever.

If the brake pedal is repeatedly depressed and released with the shift lever in the P (Park) position, a chattering noise near the shift lever may be heard. This is a normal condition.

# **WARNING**

Always fully depress the brake pedal before and while shifting out of the P (Park) position into another position to avoid inadvertent motion of the vehicle which could injure persons in or around the car.



# Shift-lock override (if equipped)

If the shift lever cannot be moved from the P (Park) or N (Neutral) position into R (Reverse) position with the brake pedal depressed, continue depressing the brake, then do the following:

- Carefully remove the cap covering the shift-lock access hole.
- Insert a key (or screwdriver) into the access hole and press down on the key (or screwdriver).
- 3. Move the shift lever.
- Have your vehicle inspected by an authorized HYUNDAI dealer immediately.

E060103AUN

# Ignition key interlock system (if equipped)

The ignition key cannot be removed unless the shift lever is in the P (Park) position. If the ignition switch is in any other position, the key cannot be removed.



تلفن شبانه روزی: ۵۸۰۲۹۸۸۸–۲۲۰

FarmaSOS.com

#### E060200ABH

# Good driving practices

- Never move the shift lever from P (Park) or N (Neutral) to any other position with the accelerator pedal depressed.
- Never move the shift lever into P (Park) when the vehicle is in motion.
- Be sure the car is completely stopped before you attempt to shift into R (Reverse) or D (Drive).
- Never take the car out of gear and coast down a hill. This may be extremely hazardous. Always leave the car in gear when moving.
- Do not "ride" the brakes. This can cause them to overheat and malfunction. Instead, when you are driving down a long hill, slow down and shift to a lower gear. When you do this, engine braking will help slow the car.
- Slow down before shifting to a lower gear. Otherwise, the lower gear may not be engaged.
- Always use the parking brake. Do not depend on placing the transmission in P (Park) to keep the car from moving.

- Exercise extreme caution when driving on a slippery surface. Be especially careful when braking, accelerating or shifting gears. On a slippery surface, an abrupt change in vehicle speed can cause the drive wheels to lose traction and the vehicle to go out of control.
- Optimum vehicle performance and economy is obtained by smoothly depressing and releasing the accelerator pedal.

# **A** WARNING

- Always buckle-up! In a collision, an unbelted occupant is significantly more likely to be seriously injured or killed than a properly belted occupant.
- Avoid high speeds when cornering or turning.
- Do not make quick steering wheel movements, such as sharp lane changes or fast, sharp turns.
- The risk of rollover is greatly increased if you lose control of your vehicle at highway speeds.
- Loss of control often occurs if two or more wheels drop off the roadway and the driver oversteers to reenter the roadway.
- In the event your vehicle leaves the roadway, do not steer sharply. Instead, slow down before pulling back into the travel lanes.
- Never exceed posted speed limits.

# **WARNING**

If your vehicle becomes stuck in snow, mud, sand, etc., then you may attempt to rock the vehicle free by moving it forward and backward. Do not attempt this procedure if people or objects are anywhere near the vehicle. During the rocking operation the vehicle may suddenly move forward of backward as it becomes unstuck, causing injury or damage to nearby people or objects.

#### E060203AUN

Moving up a steep grade from a standing start

To move up a steep grade from a standing start, depress the brake pedal, shift the shift lever to D (Drive). Select the appropriate gear depending on load weight and steepness of the grade, and release the parking brake. Depress the accelerator gradually while releasing the service brakes.

When accelerating from a stop on a steep hill, the vehicle may have a tendency to roll backwards. Shifting the shift lever into 2 (Second Gear) will help prevent the vehicle from rolling backwards.

#### **BRAKE SYSTEM**

E070100AUN

#### **Power brakes**

Your vehicle has power-assisted brakes that adjust automatically through normal usage.

In the event that the power-assisted brakes lose power because of a stalled engine or some other reason, you can still stop your vehicle by applying greater force to the brake pedal than you normally would. The stopping distance, however, will be longer.

When the engine is not running, the reserve brake power is partially depleted each time the brake pedal is applied. Do not pump the brake pedal when the power assist has been interrupted.

Pump the brake pedal only when necessary to maintain steering control on slippery surfaces.

# **WARNING - Brakes**

- Do not drive with your foot resting on the brake pedal. This will create abnormal high brake temperatures, excessive brake lining and pad wear, and increased stopping distances.
- When descending a long or steep hill, shift to a lower gear and avoid continuous application of the brakes. Continuous brake application will cause the brakes to overheat and could result in a temporary loss of braking performance.
- Wet brakes may impair the vehicle's ability to safely slow down; the vehicle may also pull to one side when the brakes are applied. Applying the brakes lightly will indicate whether they have been affected in this way. Always test your brakes in this fashion after driving through deep water. To dry the brakes, apply them lightly while maintaining a safe forward speed until brake performance returns to normal.

(Continued)

## (Continued)

 Always, confirm the position of the brake and accelerator pedal before driving. If you don't check the position of the accelerator and brake pedal before driving, you may depress the accelerator instead of the brake pedal. It may cause a serious accident.

#### E070101AUN

### In the event of brake failure

If service brakes fail to operate while the vehicle is in motion, you can make an emergency stop with the parking brake. The stopping distance, however, will be much greater than normal.

WARNING - Parking brake Applying the parking brake while the vehicle is moving at normal speeds can cause a sudden loss of control of the vehicle. If you must use the parking brake to stop the vehicle, use great caution in applying the brake.

#### F070102AUN

# Disc brakes wear indicator

Your vehicle has disc brakes.

When your brake pads are worn and new pads are required, you will hear a high-pitched warning sound from your front brakes or rear brakes. You may hear this sound come and go or it may occur whenever you depress the brake pedal. Please remember that some driving con-


Please remember that some driving conditions or climates may cause a brake squeal when you first apply (or lightly apply) the brakes. This is normal and does not indicate a problem with your brakes.

# تلفن شبانه روزی: CAUTION • ۸۵

- To avoid costly brake repairs, do not continue to drive with worn brake pads.
- Always replace brake pads as complete front or rear axle sets.

# **WARNING** - Brake wear

This brake wear warning sound means your vehicle needs service. If you ignore this audible warning, you will eventually lose braking performance, which could lead to a serious accident.

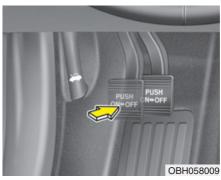

# Foot parking brake (if equipped)

F070201ABH

# Applying the parking brake

To engage the parking brake, first apply the foot brake and then depress the parking brake pedal down as far as possible. In addition it is recommended that when parking the vehicle on an incline, the shift lever should be in the P (Park) position.

# **A** CAUTION

- Driving with the parking brake applied will cause excessive brake pad and brake rotor wear.
- Do not operate the parking brake while the vehicle is moving except in an emergency situation. It could damage the vehicle system and make endanger driving safety.



E070202ABH

### Releasing the parking brake

To release the parking brake, depress the parking brake pedal a second time while applying the foot brake. The pedal will automatically extend to the fully released position. If the parking brake pedal does not release or does not release all the way, have the system checked by an authorized HYUNDAI dealer.

# **WARNING**

- To prevent unintentional movement when stopped and leaving the vehicle, do not use the shift lever in place of the parking brake. Set the parking brake and make sure the shift lever is securely positioned in P (Park).
- Never allow anyone who is unfamiliar with the vehicle to touch the parking brake. If the parking brake is released unintentionally, serious injury may occur.
- All vehicles should always have the parking brake fully engaged when parking to avoid inadvertent movement of the car which can injure occupants or pedestrians.



W-75

Check the brake warning light by turning the ignition switch ON (do not start the engine). This light will be illuminated when the parking brake is applied with the ignition switch in the START or ON position.

Before driving, be sure the parking brake is fully released and the brake warning light is off.

If the brake warning light remains on after the parking brake is released while engine is running, there may be a malfunction in the brake system. Immediate attention is necessary.

If at all possible, cease driving the vehicle immediately. If that is not possible, use extreme caution while operating the vehicle and only continue to drive the vehicle until you can reach a safe location or repair shop.



# **Electric parking brake (EPB)** (if equipped)

E070203BBH

The parking brake parking brake علفن شبانه رو

To apply the parking brake, first apply the brake pedal and pull the EPB switch. Make sure that the brake warning light comes on.

It is recommended that when parking the vehicle on an incline, the shift lever should be in the P (Park) position.

# **!\ CAUTION**

Do not operate the parking brake while the vehicle is moving except in an emergency situation. It could damage the vehicle system and make endanger driving safety.



F070704BBH

# Releasing the parking brake

The parking brake will be released automatically when you shift the transmission from P (Park) to R (Reverse), N (Neutral) or D (Drive) while pressing the foot brake pedal.

To release the parking brake manually with the ignition switch ON, press the EPB switch while applying the foot brake. Make sure that the brake warning light goes off.

If the parking brake does not release or does not release all the way, have the system checked by an authorized HYUNDAI dealer.

#### \* NOTICE

- · For your safety, you can engage the EPB even though the engine start/stop button is in the OFF position, but you cannot release it.
- · For your safety, press foot brake and release the parking brake manually with EPB switch when you drive downhill or back up the vehicle.

امداد خودرو جارما

تلفن شبانه روزی: ۱-۸۸۸۶۲ ۲۸ ا

FarmaSOS.com





OBH049340N

# **WARNING**

If you try to drive off by applying accelerator pedal with EPB engaged, a warning will sound and message will appear. Do not apply the accelerator pedal while the parking brake is engaged. Damage to the parking brake may occur.

# **WARNING**

- To prevent unintentional movement when stopped and leaving the vehicle, do not use the shift lever in place of the parking brake. Set the parking brake and make sure the shift lever is securely positioned in P (Park).
- Never allow anyone who is unfamiliar with the vehicle to touch the parking brake. If the parking brake is released unintentionally, serious injury may occur.
- All vehicles should always have the parking brake fully engaged when parking to avoid inadvertent movement of the car which can injure occupants or pedestrians.

# **A** CAUTION

- A click sound may be heard while operating or releasing the EPB, but these conditions are normal and indicate that the EPB is functioning properly.
- When leaving your keys with a parking lot attendant or valet, make sure to inform him/her how to operate the EPB.




Check the brake warning light by turning the ignition switch ON (do not start the engine). This light will be illuminated when the parking brake is applied with the ignition switch in the START or ON position.

Before driving, be sure the parking brake is fully released and the brake warning light is off.

If the brake warning light remains on after the parking brake is released while engine is running, there may be a malfunction in the brake system. Immediate attention is necessary.

If at all possible, cease driving the vehicle immediately. If that is not possible, use extreme caution while operating the vehicle and only continue to drive the vehicle until you can reach a safe location.

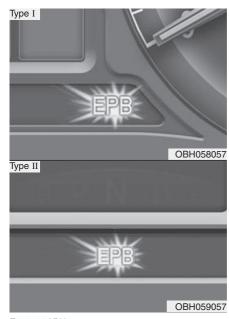

E070703ABH

# EPB malfunction indicator (if equipped)

This warning light illuminates if the engine start/stop button is turned to the ON position and goes off in approximately 3 seconds if the system is operation normally.

If the EPB malfunction indicator remains on, comes on while driving, or does not come on when the ignition switch or the engine start/stop button is turned to the ON position, this indicates that the EPB may have malfunctioned.

If this occurs, have your vehicle checked by an authorized HYUNDAI dealer as soon as possible.

The EPB malfunction indicator may illuminate when the ESP indicator comes on to indicate that the ESP is not working properly, but it does not indicate a malfunction of the FPR

F070704BBH

# **Emergency braking**

If there is a problem with the brake pedal while driving, emergency braking is possible by pulling and holding the EPB switch.



# **WARNING**

Do not operate the parking brake while the vehicle is moving except in an emergency situation.

# \* NOTICE

During emergency braking by the EPB, the parking brake warning light will illuminate to indicate that the system is operating.

FarmaSOS.com



F070706BBH

# **EPB** emergency release

If the EPB does not release properly, do as follows:

- 1. Shift the shift lever into P (Park).
- 2. Install the stopper to the wheel.
- 3. Open the trunk and remove the cover.
- 4. Remove the emergency release handle from the tool case.
- 5. Remove the emergency release cable cover.
- 6. Install the emergency release handle into the threaded end of the emergency release cable by turning it clockwise.
- 7. Pull up the handle until sounded a "took".

The EPB warning light blinks.



Type II



8. After using the EPB emergency release, a warning message will come on. You should operate the EPB switch for the vehicle to return to its normal condition. If the vehicle does not return to normal condition, take your vehicle to an authorized HYUNDAI dealer and have the system checked.

# **A** WARNING

Do not use the EPB emergency release except in an emergency situation. It is very dangerous driving with the EPB emergency release.

امداد حودرو فارما

تلفن شبانه روزی: ۵۸+۲۹۸۸۸–۲۲


FarmaSOS.com



## **AUTO HOLD (if equipped)**

#### E070800BBH

The AUTO HOLD maintains the vehicle in standstill after the driver brings the vehicle to a complete stop by foot brake and releases the brake pedal.

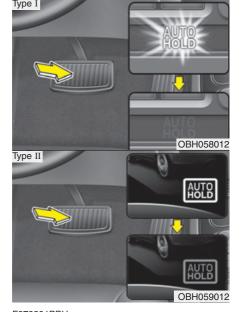

F070801BBH Set up


1. Press the AUTO HOLD switch. The AUTO HOLD indicator will come on white and the system will be in the standby position.

- 2. When you stop the vehicle completely by pressing the brake pedal, the AUTO HOLD maintains the brake pressure in order to hold the vehicle stationary. The indicator changes from white to green.
- 3. The vehicle will remain stationary even if you release the foot brake pedal.
- 4. If EPB is applied, Auto Hold will be released.

امداد حودرو جارما

تلفن شبانه روزی: ۱-۸۸۸۶۲ ۲۸ الفن شبانه روزی: ۱-۸۸۸۶۲ میانه

FarmaSOS.com

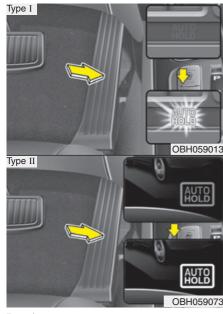

# Leaving

If you press the accelerator pedal with the transmission in R (Reverse), D (Drive) or sports mode, the AUTO HOLD will be released automatically and the vehicle will start to move. The indicator changes from green to white.

# **WARNING**

When driving off from AUTO HOLD by applying accelerator pedal, always check the surrounding area near your vehicle.

Slowly press the accelerator pedal for a smooth launch.



F070802BBH

#### Cancel

To cancel the AUTO HOLD operation, press the AUTO HOLD switch. The AUTO HOLD indicator will go out.



#### \* NOTICE

• The AUTO HOLD does not operate when;

OBH049342N

- the driver's door is open.
- the shift lever is in P (Park).
- For your safety, the AUTO HOLD automatically switches to EPB in such cases as

- the hood is open with transmission in D (Drive).
- the trunk lid is open with transmission in R (Reverse).
- the driver's seat belt is unbuckled and the driver's door is open.
- AUTO HOLD is operating for a long period of time.
- the vehicle is standing on a steep slope.

In these cases, the brake warning light comes on, the AUTO HOLD indicator changes from green to white, and a warning sounds and a message will appear to inform you that EPB has been automatically engaged.

Before driving off again, press foot brake pedal, check the surrounding area near your vehicle and release parking brake manually with the EPB switch.

• When AUTO HOLD is ON and the vehicle comes to a stop on a steep slope (about 25% gradient or more), the EPB will be automatically engaged. In this case, when you release EPB manually by pressing the EPB switch with foot brake pedal pressed, AUTO HOLD will hold the vehicle for 3 seconds in order to prevent the vehicle from rolling back during the launch.

- If the AUTO HOLD malfunction indicator lights up yellow on the LCD screen, the AUTO HOLD is not working properly. Take your vehicle to an authorized HYUNDAI dealer and have the system checked.
- While operating Auto Hold, you may hear mechanical noise. However, it is normal operating noise.

# **A** WARNING

- Press the accelerator pedal slowly when you start the vehicle.
- For your safety, cancel the AUTO HOLD when you drive downhill or back up the vehicle or park the vehicle.

# **CAUTION**

If there is a malfunction with the driver's door, hood or trunk open detection system, the AUTO HOLD may not work properly.

Take your vehicle to an authorized HYUNDAI dealer and have the system checked.

F070300AFN-FF

# Anti-lock brake system (ABS)

# **WARNING**

ABS (or ESP) will not prevent accidents due to improper or dangerous driving maneuvers. Even though vehicle control is improved during emergency braking, always maintain a safe distance between you and objects ahead. Vehicle speeds should always be reduced during extreme road conditions.

The braking distance for cars equipped with an anti-lock braking system (or Electronic Stability Program system) may be longer than for those without it in the following road conditions.

During these conditions the vehicle should be driven at reduced speeds:

- Rough, gravel or snow-covered roads.
- With tire chains installed.

(Continued)

# (Continued)

 On roads where the road surface is pitted or has different surface height.

The safety features of an ABS (or ESP) equipped vehicle should not be tested by high speed driving or cornering. This could endanger the safety of yourself or others.

The ABS continuously senses the speed of the wheels. If the wheels are going to lock, the ABS system repeatedly modulates the hydraulic brake pressure to the wheels.

When you apply your brakes under conditions which may lock the wheels, you may hear a "tik-tik" sound from the brakes, or feel a corresponding sensation in the brake pedal. This is normal and it means your ABS is active.

In order to obtain the maximum benefit from your ABS in an emergency situation, do not attempt to modulate your brake pressure and do not try to pump your brakes. Press your brake pedal as hard as possible or as hard as the situation warrants and allow the ABS to control the force being delivered to the brakes.

# FarmaSOS.com

# \* NOTICE

A click sound may be heard in the engine compartment when the vehicle begins to move after the engine is started. These conditions are normal and indicate that the anti-lock brake system is functioning properly.

- Even with the anti-lock brake system, your vehicle still requires sufficient stopping distance. Always maintain a safe distance from the vehicle in front of you.
- Always slow down when cornering. The anti-lock brake system cannot prevent accidents resulting from excessive speeds.
- On loose or uneven road surfaces, operation of the anti-lock brake system may result in a longer stopping distance than for vehicles equipped with a conventional brake system.



W-78

# **A** CAUTION

- If the ABS warning light is on and stays on, you may have a problem with the ABS. In this case, however, your regular brakes will work normally.
- The ABS warning light will stay on for approximately 3 seconds after the ignition switch is ON. During that time, the ABS will go through self-diagnosis and the light will go off if everything is normal. If the light stays on, you may have a problem with your ABS. Contact an authorized HYUNDAI dealer as soon as possible.


## **!**\ CAUTION

- When you drive on a road having poor traction, such as an icy road, and operate your brakes continuously, the ABS will be active continuously and the ABS warning light may illuminate. Pull your car over to a safe place and stop the engine.
- Restart the engine. If the ABS warning light is off, then your ABS system is normal. Otherwise, you may have a problem with the ABS. Contact an authorized HYUNDAI dealer as soon as possible.

# \* NOTICE

When you jump start your vehicle because of a drained battery, the engine may not run as smoothly and the ABS warning light may turn on at the same time. This happens because of the low battery voltage. It does not mean your ABS is malfunctioning.

- Do not pump your brakes!
- Have the battery recharged before driving the vehicle.

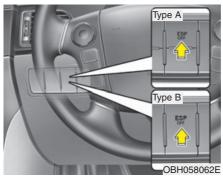

E070500AUN-EE

# Electronic stability program (ESP) (if equipped)

The Electronic Stability Program (ESP) system is designed to stabilize the vehicle during cornering maneuvers. ESP checks where you are steering and where the vehicle is actually going. ESP applies the brakes at individual wheels and intervenes in the engine management system to stabilize the vehicle.

# **WARNING**

Never drive too fast for the road conditions or too quickly when cornering. Electronic stability program (ESP) will not prevent accidents. Excessive speed in turns, abrupt maneuvers and hydroplaning on wet surfaces can still result in serious accidents. Only a safe and attentive driver can prevent accidents by avoiding maneuvers that cause the vehicle to lose traction. Even with ESP installed, always follow all the normal precautions for driving - including driving at safe speeds for the conditions.

The Electronic Stability Program (ESP) system is an electronic system designed to help the driver maintain vehicle control under adverse conditions. It is not a substitute for safe driving practices. Factors including speed, road conditions and driver steering input can all affect whether ESP will be effective in preventing a loss of control. It is still your responsibility to drive and corner at reasonable speeds and to leave a sufficient margin of safety. When you apply your brakes under conditions which may lock the wheels, you may hear a "tik-tik" sound from the brakes, or feel a corresponding sensation in the brake pedal. This is normal and it means your ESP is active. هن شبانه روزي

## \* NOTICE

A click sound may be heard in the engine compartment when the vehicle begins to move after the engine is started. These conditions are normal and indicate that the Electronic Stability Program System is functioning properly.

#### E070501ABH-EE

# ESP operation

#### **ESP ON condition**



- When the ignition is turned ON, ESP and ESP OFF indicator lights illuminate for approximately 3 seconds, then ESP is turned on.
- Press the ESP OFF button for at least half a second after turning the ignition ON to turn ESP off. (ESP OFF indicator will illuminate). To turn the ESP on, press the ESP OFF button (ESP OFF indicator light will go off).
- When starting the engine, you may hear a slight ticking sound. This is the ESP performing an automatic system self-check and does not indicate a problem.

# When operating



When the ESP is in operation, ESP indicator light blinks.

- When the Electronic Stability Program is operating properly, you can feel a slight pulsation in the vehicle. This is only the effect of brake control and indicates nothing unusual.
- When moving out of the mud or slippery road, the engine rpm (revolution per minute) may not be increased even if you press the accelerator pedal deeply. This is to maintain the stability and traction of the vehicle and does not indicate a problem.

#### F070502ABH



ESP operation off **ESP OFF state** 

- To cancel ESP operation. press the ESP OFF button for more than 0.5 second. (ESP OFF indicator light illuminates).
- If the engine stops when ESP is off. ESP remains off. Upon restarting the engine, the ESP will be automatically turned on again.

■ ESP indicator light (blinks)

**ESP** 

■ ESP OFF indicator light (comes on)

**ESP OFF** 

E070503ABH-EE

Indicator light

When the ignition switch is turned ON. the indicator light illuminates, then goes off if ESP system is operating normally. The ESP indicator light blinks whenever

ESP is operating.

The ESP OFF indicator light comes on when either the ESP is turned off with the button.

■ ESP warning light (comes on)

**ESP** 

F070505BBH-FF Warning light

If this warning light illuminates, your vehicle may have a malfunction with the ESP system. When this warning light illuminates, EPB and ECS warning light may also illuminate at the same time.

Have the vehicle checked by an authorized HYUNDAI dealer as soon as possible.

# **A** CAUTION

Driving with varying tire or wheel sizes may cause the ESP system to malfunction. When replacing tires, make sure they are the same size as your original tires.

# **WARNING**

The Electronic Stability Program system is only a driving aid; use precautions for safe driving by slowing down on curved, snowy, or icy roads. Drive slowly and don't attempt to accelerate whenever the ESP indicator light is blinking, or when the road surface is slippery.

F070504BBH-FF

ESP OFF usage

### When driving

- ESP should be turned on for daily driving whenever possible.
- To turn ESP off while driving, press the ESP OFF button while driving on a flat road surface.

Never press the ESP OFF button while ESP is operating (ESP indicator light blinks).

If ESP is turned off while ESP is operating, the vehicle may slip out of control.

### \* NOTICE

- When operating the vehicle on a dynamometer, ensure that the ESP is turned off (ESP OFF light illuminated).
- Turning the ESP off does not affect ABS or brake system operation.

# **A WARNING**

Never press the ESP OFF button while ESP is operating.

If the ESP is turned off while ESP is operating, the vehicle may go out of control.

To turn ESP off while driving, press the ESP OFF button while driving on a flat road surface.

#### E070600BFD

# **Good braking practices**

# **A** WARNING

- Whenever leaving vehicle or parking, always set the parking brake as far as possible and fully engage the vehicle's transmission into the park position. Vehicles not fully engaged in park with the parking brake set are at risk for moving inadvertently and injuring yourself or others.
- All vehicles should always have the parking brake fully engaged when parking to avoid inadvertent movement of the car which can injure occupants or pedestrians.

- After parking the vehicle, check to be sure the parking brake is not engaged and that the parking brake indicator light is out before driving away.
- Driving through water may get the brakes wet. They can also get wet when the car is washed. Wet brakes can be dangerous! Your car will not stop as quickly if the brakes are wet. Wet brakes may cause the car to pull to one side.
  - To dry the brakes, apply the brakes lightly until the braking action returns to normal, taking care to keep the car under control at all times. If the braking action does not return to normal, stop as soon as it is safe to do so and call an authorized HYUNDAL dealer for assistance.

FarmaSOS.com

- Don't coast down hills with the car out of gear. This is extremely hazardous. Keep the car in gear at all times, use the brakes to slow down, then shift to a lower gear so that engine braking will help you maintain a safe speed.
- Don't "ride" the brake pedal. Resting your foot on the brake pedal while driving can be dangerous because it can result in the brakes overheating and losing their effectiveness. It also increases the wear of the brake components.
- If a tire goes flat while you are driving, apply the brakes gently and keep the car pointed straight ahead while you slow down. When you are moving slowly enough for it to be safe to do so, pull off the road and stop in a safe place.

- If your car is equipped with an automatic transmission, don't let your car creep forward. To avoid creeping forward, keep your foot firmly on the brake pedal when the car is stopped.
- Use caution when parking on a hill. Firmly engage the parking brake and place the shift lever in P. If your car is facing downhill, turn the front wheels into the curb to help keep the car from rolling. If your car is facing uphill, turn the front wheels away from the curb to help keep the car from rolling. If there is no curb or if it is required by other conditions to keep the car from rolling, block the wheels.
- Under some conditions your parking brake can freeze in the engaged position. This is most likely to happen when there is an accumulation of snow or ice around or near the rear brakes or if the brakes are wet. If there is a risk that the parking brake may freeze, apply it only temporarily while you put the shift lever in P and block the rear wheels so the car cannot roll. Then release the parking brake.
- Do not hold the vehicle on the upgrade with the accelerator pedal. This can cause the transmission to overheat. Always use the brake pedal or parking brake.

تلفن شبانه روزی: ۱-۸۸۸۶۲ ۲۸۸ الفن شبانه روزی:


FarmaSOS.com

# **ELECTRONIC CONTROLLED SUSPENSION (ECS) (IF EQUIPPED)**

E130000ABH

ECS controls the vehicle suspension automatically to maximize passenger comfort by using the air spring in the suspension.

You can also control the vehicle suspension manually as the SPORT mode, NORMAL mode, or HIGH mode.

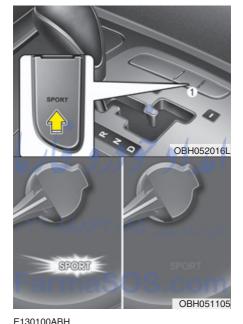

To select the SPORT mode

Push the SPORT button (1) to select the SPORT mode that provides a tighter suspension and firmer ride. The SPORT indicator will illuminate.

The SPORT mode is used for sporty driving such as driving on winding, mountainous roads or high speed driving.

Push the SPORT button again to return NORMAL mode that provides a softer ride. The SPORT indicator light will go off.



F130200ABH

# To control the vehicle height

Push the vehicle height control button to select the HIGH mode that make the vehicle height be higher than the NOR-MAL mode and the indicator light on the vehicle height control button will illuminate. It is useful in a rough road.

# \* NOTICE

When you drive over 70km/h, you could not select the HIGH mode. If the vehicle speed exceeds 70km/h while driving in the HIGH mode, the NORMAL mode will be selected automatically.

Push the vehicle height control button again to select the NORMAL mode that make the vehicle height be lower than the HIGH mode. The indicator light in the vehicle height control button will go off.


### \* NOTICE

- When the vehicle stops with the shift lever in D(Drive) or R(Reverse), you could not change the vehicle height.
- If the vehicle speed exceeds 120km/h while driving in NORMAL mode, the LOW mode lowers than NORMAL mode is selected automatically. LOW mode could not be selected by manually.
- Do not operate ECS when the air filter of the compressor in the lower part of the vehicle sinks under the water. Indraft of water into the compressor may happen, and ECS may not operate normally.
- Make sure there are no objects under the vehicle before changing the vehicle height.

(Continued)

### (Continued)

- A click sound may be heard while operating ECS, but these conditions are normal and indicate that ECS is functioning properly.
- Depending on the outside temperature the vehicle height may be different.
- Do not turn the ignition switch to the other position while operating ECS. This could cause damage to ECS.

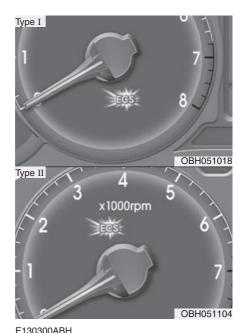

ECS (Electronic Controlled Suspension) Malfunction indicator

The ECS malfunction indicator will illuminate when the ignition switch is turned to the ON position, but should go off after approximately 3 seconds.

If the warning light does not come on, or continuously remains on after coming on for about 3 seconds when you turned the ignition switch to the ON position, the ECS is not working properly.


If it comes on while driving, ECS is not working properly.

Take your vehicle to an authorized HYUNDAI dealer and have the system checked.

The ECS malfunction indicator may illuminate when the ESP indicator comes on to indicate that the ESP is not working properly, but it does not indicate malfunction of the ECS.


# 

If the battery is discharged or if you push the SPORT button or the vehicle height control button repeatedly in short time, the ECS malfunction indicator may illuminate to protect the system.

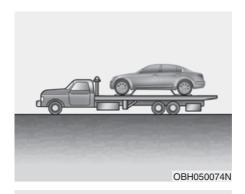

# **⚠** CAUTION

If the ECS malfunction indicator illuminates when there is no air in the suspension, the vehicle height will be very lower, so do not drive to protect the vehicle from the projections on the surface of the ground. Take your vehicle to an authorized HYUNDAI dealer by towing the vehicle and have the system checked. You should tow the vehicle as the picture.

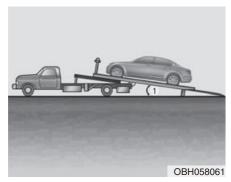

When you load the vehicle onto the tow truck, the loading angle(1) should be smaller than  $6^{\circ}$ .



تلفن شبانه روزی: ۵۸۰۲۹۸۸۸ تلفن شبانه روزی:

FarmaSOS.com

### CRUISE CONTROL SYSTEM



- ① CRUISE indicator
- 2 SET indicator

#### E090000ABH-EU

The cruise control system allows you to program the vehicle to maintain a constant speed without pressing the accelerator pedal.

This system is designed to function above approximately 40 km/h (25 mph) and below approximately 180 km/h (113 mph).

# **WARNING**

- If the cruise control is left on, (CRUISE indicator light in the instrument cluster illuminated) the cruise control can be activated unintentionally. Keep the cruise control system off (CRUISE indicator light OFF) when the cruise control is not in use, to avoid inadvertently setting a speed.
- Use the cruise control system only when traveling on open highways in good weather.
- Do not use the cruise control when it may not be safe to keep the car at a constant speed, for instance, driving in heavy or varying traffic, or on slippery (rainy, icy or snow-covered) or winding roads or over 6% up-hill or down-hill roads.
- Pay particular attention to the driving conditions whenever using the cruise control system.
- Be careful when driving downhill using the cruise control system, which may increase the vehicle speed.

# \* NOTICE

- During normal cruise control operation, when the SET switch is activated or reactivated after applying the brakes, the cruise control will energize after approximately 3 seconds. This delay is normal.
- To activate cruise control, depress the brake pedal at least once after turning the ignition switch to the ON position or starting the engine. This is to check if the brake switch which is important part to cancel cruise control is in normal condition.



E090100ABH-EU

# To set cruise control speed:

- Push the CRUISE button on the steering wheel to turn the system on. The CRUISE indicator light in the instrument cluster will illuminate.
- Accelerate to the desired speed, which must be more than 40 km/h (25 mph) and less than 180 km/h (113 mph).



 Push the SET- switch, and release it at the desired speed. The SET indicator light in the instrument cluster will illuminate. Release the accelerator pedal. The desired speed will automatically be maintained.

On a steep grade, the vehicle may slow down or speed up slightly while going uphill or downhill.



F090200ABH-FU

# To increase cruise control set speed:

Follow either of these procedures:

- Push the RES+ switch and hold it. Your vehicle will accelerate. Release the switch at the speed you want.
- Push the RES+ switch and release it immediately. The cruising speed will increase by 2.0 km/h (1.2 mph) or 1.0 mph (1.6 km/h) each time the RES+ switch is operated in this manner.



E090300ABH-EU

# To decrease the cruising speed:

Follow either of these procedures:

- Push the SET- switch and hold it. Your vehicle will gradually slow down. Release the switch at the speed you want to maintain.
- Push the SET- switch and release it immediately. The cruising speed will decrease by 2.0 km/h (1.2 mph) or 1.0 mph (1.6 km/h) each time the SETswitch is operated in this manner.

F090400ABH

# To temporarily accelerate with the cruise control on:


If you want to speed up temporarily when the cruise control is on, depress the accelerator pedal. Increased speed will not interfere with cruise control operation or change the set speed.

To return to the set speed, take your foot off the accelerator.

If you press the SET- switch at increased speed, the cruising speed will be set again.

تلفن شبانه روزی: ۱۵۸۰۶۲۰۸۵ ۲۲۰ تلفن شبانه روزی: ۱۳۵۰

FarmaSOS.com

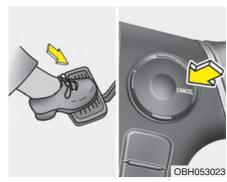

E090500ABH

# To cancel cruise control, do one of the following:

- Press the brake pedal.
- Shift the shift lever into N (Neutral)
- Press the CANCEL switch located on the steering wheel.
- Decrease the vehicle speed lower than the memory speed by 15 km/h (9 mph).
- Decrease the vehicle speed to less than approximately 32 km/h (20 mph).
- Increase the vehicle speed to more than approximately 200 km/h (125 mph).

Press the parking brake pedal or operate the EPB switch (if equipped). Do not operate the parking brake while driving except in an emergency situation.

Each of these actions will cancel cruise control operation (the SET indicator light in the instrument cluster will go off), but it will not turn the system off. If you wish to resume cruise control operation, push the RES+ switch located on your steering wheel. You will return to your previously preset speed.



E090600ABH

# 

If any method other than the CRUISE switch was used to cancel cruising speed and the system is still activated, the most recent set speed will automatically resume when the RES+ switch is pushed.

It will not resume, however, if the vehicle speed has dropped below approximately 40 km/h(25 mph).

# \* NOTICE

Always check the road conditions when pressing the RES+ switch to resume the speed.



U


# To turn cruise control off, do one of the following:

- Push the CRUISE button (the CRUISE indicator light in the instrument cluster will go off).
- Turn the ignition off.

F090700ABH

Both of these actions cancel cruise control operation. If you want to resume cruise control operation, repeat the steps provided in "To set cruise control speed" on the previous page.

# SMART CRUISE CONTROL SYSTEM (IF EQUIPPED)

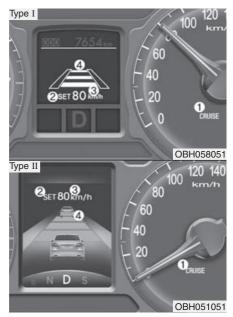

- ① CRUISE indicator
- ② SET indicator
- 3 Set speed
- 4 Vehicle-to-vehicle distance

F150000ABH

The smart cruise control system allows you to program the vehicle to maintain a constant speed and distance detecting the vehicle ahead without depressing the accelerator pedal.

# **WARNING**

- If the smart cruise control is left on, (CRUISE indicator light in the instrument cluster illuminated) the smart cruise control can be activated unintentionally. Keep the smart cruise control system off (CRUISE indicator light OFF) when the smart cruise control is not in use, to avoid inadvertently setting a speed.
- Use the smart cruise control system only when traveling on open highways in good weather.
- Do not use the smart cruise control when it may not be safe to keep the car at a constant speed, for instance, driving in heavy or varying traffic, or on slippery (rainy, icy or snow-covered) or winding roads or over 6% up-hill or down-hill roads.

(Continued)

# (Continued)

- Pay particular attention to the driving conditions whenever using the smart cruise control system.
- Be careful when driving downhill using the smart cruise control system, which may increase the vehicle speed.
- The smart cruise control system is not a substitute for safe driving practices but a convenience function only. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.

# \* NOTICE

- During normal smart cruise control operation, when the SET switch is activated or reactivated after applying the brakes, the smart cruise control will energize after approximately 3 seconds. This delay is normal.
- To activate smart cruise control, depress the brake pedal at least once after turning the ignition switch to the ON position or starting the engine. This is to check if the brake switch which is important part to cancel smart cruise control is in normal condition.



E150100ABH

# To set cruise control speed:

- Push the CRUISE button on the steering wheel to turn the system on. The CRUISE indicator light in the instrument cluster will illuminate.
- Accelerate to the desired speed.
   The smart cruise control speed can be set as follows:
  - 30 km/h~180 km/h: when there is no vehicle in front
  - 10 km/h~180 km/h: when there is a vehicle in front



OBH053021

 Push the SET- switch, and release it at the desired speed. The SET indicator light, set speed and vehicle to vehicle distance on the LCD screen will illuminate. Release the accelerator pedal. The desired speed will automatically be maintained.

If there is a vehicle in front of you, the speed may decrease to maintain the distance to the vehicle ahead.

On a steep grade, the vehicle may slow down or speed up slightly while going uphill or downhill.



E150200ABH

# To increase cruise control set speed:

Follow either of these procedures:

- Push the RES+ switch and hold it. Your vehicle set speed will increase by 10 km/h or 5 mph. Release the switch at the speed you want.
- Push the RES+ switch and release it immediately. The cruising speed will increase by 1.0 km/h (0.6 mph) or 1.0 mph (1.6 km/h) each time the RES+ switch is operated in this manner.
- You can set the speed to 180 km/h (113 mph).



E150300ABH

# To decrease the cruising speed:

Follow either of these procedures:

- Push the SET- switch and hold it. Your vehicle set speed will decrease by 10 km/h or 5 mph. Release the switch at the speed you want.
- Push the SET- switch and release it immediately. The cruising speed will decrease by 1.0 km/h (0.6 mph) or 1.0 mph (1.6 km/h) each time the SETswitch is operated in this manner.
- You can set the speed 30 km/h (18.6 mph).

#### F150400ABH

# To temporarily accelerate with the cruise control on:


If you want to speed up temporarily when the cruise control is on, depress the accelerator pedal. Increased speed will not interfere with cruise control operation or change the set speed.

To return to the set speed, take your foot off the accelerator.

If you press the SET- switch at an increased speed, the cruising speed will be set again.

# \* NOTICE

Be careful when accelerating temporarily, because the speed is not regulated automatically at this time even if there is a vehicle in front of you.

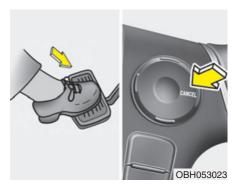

E150500ABH

# Cruise control will be canceled when;

- Depressing the brake pedal.
- Shifting the shift lever into N (Neutral) or R (Reverse).
- Pressing the CANCEL switch located on the steering wheel.
- Decreasing the vehicle speed to less than approximately 30 km/h (18.6 mph).
- Operating the parking brake pedal or the EPB switch (if equipped). Do not operate the parking brake while driving except in an emergency situation.
- . The ESP or ABS is operating.
- Downshifting to the 2nd gear with sports mode.

- Decreasing the vehicle speed to less than approximately 10 km/h (6.2 mph) as the vehicle in front of you.
- Accelerating the vehicle speed to more than approximately 180 km/h (113 mph).
- . The ESP is turned off.
- The sensor or the cover is dirty or obscured with foreign matter.

Each of these actions will cancel smart cruise control operation (the SET indicator light, set speed and vehicle to vehicle distance on the LCD screen will go off), but it will not turn the system off. If you wish to resume smart cruise control operation, push the RES+ switch located on your steering wheel. You will return to your previously preset speed.

# ACAUTION US. COM

If the sensor cover is dirty or obstructed, the smart cruise control will cancel automatically.



E090600ABH

# To resume cruise control set speed:

If any method other than the CRUISE switch was used to cancel cruising speed and the system is still activated, the most recent set speed will automatically resume when the RES+ switch is pushed.

It will not resume, however, if the vehicle speed has dropped below approximately 10 km/h (6.2 mph) when the sensor detects the vehicle ahead or if the vehicle speed has dropped below approximately 30 km/h (18.6 mph) when there is no vehicle in front of your vehicle.

### \* NOTICE

Always check the road conditions when pressing the RES+ switch to resume the speed.



F150700ABH

# To turn cruise control off, do one of the following:

- Push the CRUISE button (the CRUISE) indicator light in the instrument cluster will go off).
- Turn the engine off. Both of these actions cancel smart cruise control operation. If you want to resume smart cruise control operation, repeat the steps provided in "To set cruise control speed" on the previous page.



F150800ABH

# To set vehicle to vehicle distance:

This function allows you to program the vehicle to maintain a constant distance to the vehicle ahead without depressing the accelerator pedal or brake pedal.

The vehicle to vehicle distance will automatically activate when the smart cruise control system is on.

Select the appropriate distance according to road conditions and vehicle speed.

Each time the button is pressed, the vehicle to vehicle distance changes as follows;

Distance 3 
$$\rightarrow$$
 Distance 2  $\rightarrow$  Distance 1

For example, if you drive at 80 km/h (50 mph), the distance maintain as follows;

Distance 3 - approximately 55 m Distance 2 - approximately 40 m Distance 1 - approximately 26 m

# \* NOTICE

The 'Distance 3' is always set when the system is used for the first time after starting the engine.



E150801ABH

When the lane ahead is clear:

• The vehicle speed will maintain the set speed.



E150802ABH

When there is a vehicle ahead of you in your lane:

 Your vehicle speed will slow down or speed up to maintain the selected distance.  If the vehicle ahead speeds up, your vehicle will travel at a steady cruising speed after accelerating to the selected speed.



 The warning chime will sound and a message will appear when the vehicle speed decreases to less than 10 km/h (6.2 mph) due to a vehicle ahead, and the smart cruise control system will automatically deactivate.

- If the system is deactivated, you must actively adjust the vehicle speed, as well as the distance to the vehicle ahead by depressing the accelerator or brake pedal.
- Always check the road conditions. Do not rely on the warning chime.

# **A** CAUTION

- The warning chime sounds and malfunction indicator blinks if it is hard to maintain the selected distance to the vehicle ahead.
- If the warning chime sounds, actively adjust the vehicle speed, as well as the distance to the vehicle ahead by depressing the accelerator or brake pedal.
- Even if the warning chime is not activated, always pay attention to the driving conditions to prevent dangerous situations from occurring.



E150803ABH

# Sensor to detect distance to the vehicle ahead


The sensor detects distance to the vehicle ahead.

If the sensor is covered with dirt or other foreign matter, the vehicle to vehicle distance control may not operate correctly. Always keep the sensor clean.



Sensor malfunction indicator

If the sensor or cover is dirty or obscured with foreign matter such as snow, the indicator will illuminate. Clean the sensor by using a soft cloth.

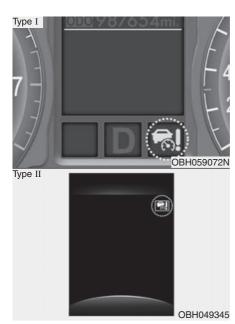

SCC (Smart cruise control) malfunction indicator

The warning light illuminates when the vehicle to vehicle distance control system is not functioning normally.

Take your vehicle to an authorized HYUNDAI dealer and have the system checked.

# **A** CAUTION

- Do not install accessories around the sensor and do not replace the bumper by yourself. It may interfere with the sensor performance.
- Always keep the sensor and bumper clean.
- To prevent sensor cover damage from occurring, wash the car with a soft cloth.
- Do not damage the sensor or sensor area by a strong impact. If the sensor moves slightly off position, the smart cruise control system will not operate correctly.
   If this occurs, have your vehicle checked by an authorized HYUNDAI dealer as soon as possible.
- Use only a genuine HYUNDAI sensor cover for your vehicle.



E150900ABH

# Limitations of the system

The smart cruise control system may have limits to its ability to detect distance to the vehicle ahead due to road and traffic conditions.

FarmaSOS.com

#### On curves

- On curves, the smart cruise control system may not detect a moving vehicle in your lane, and then your vehicle could accelerate to the set speed. Also, the vehicle speed will slow down when the vehicle ahead is recognized suddenly.
- Select the appropriate set speed on curves and apply the brakes or accelerator pedal if necessary.




 Your vehicle speed can be reduced due to a vehicle in the adjacent lane. Apply the accelerator pedal and select the appropriate set speed. Check to be sure that the road conditions permit safe operation of the smart cruise control.



E150902ABH
On inclines


- During uphill or downhill driving, the smart cruise control system may not detect a moving vehicle in your lane, and cause your vehicle to accelerate to the set speed. Also, the vehicle speed will slow down when the vehicle ahead is recognized suddenly.
- Select the appropriate set speed on inclines and apply the brakes or accelerator pedal if necessary.

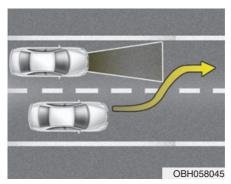

E150903ABH

# Lane changing

- A vehicle which moves into your lane from an adjacent lane cannot be recognized by the sensor until it is in the sensor's detection range.
- The sensor may not detect immediately when a vehicle cuts in suddenly.
   Always pay attention to the traffic, road and driving conditions.
- If a vehicle which moves into your lane is slower than your vehicle, your speed may decrease to maintain the distance to the vehicle ahead.
- If a vehicle which moves into your lane is faster than your vehicle, your vehicle will accelerate to the selected speed.

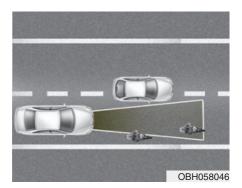

F150904ABH

# Vehicle recognition

Some vehicles ahead in your lane cannot be recognized by the sensor as follows:

- Narrow vehicles such as motorcycles or bicycles
- Vehicles offset to one side
- Slow-moving vehicles or sudden-decelerating vehicles
- Stopped vehicles
- Vehicles with small rear profile such as trailers with no loads

A vehicle ahead cannot be recognized correctly by the sensor if any of following occurs:

- When the vehicle is pointing upwards due to overloading in the trunk
- While the steering wheel is operating
- When driving to one side of the lane
- When driving on narrow lanes or on curves A

Apply the brakes or accelerator pedal if necessary.



FarmaSOS.com

# **WARNING**

 The vehicle cannot be stopped by using the smart cruise control system.

If an emergency stop is necessary, you must apply the brakes.

- Keep a safe distance according to road conditions and vehicle speed. If the vehicle to vehicle distance is too close during a high-speed driving, it may cause a serious collision.
- The smart cruise control system can not recognize a stopped vehicle, pedestrians or an oncoming vehicle. Always look ahead cautiously to prevent unexpected and sudden situations from occurring.
- In front of you, vehicles moving with a frequent lane change may cause a delay in the system's reaction or may cause the system to react to a vehicle actually in an adjacent lane. Always look ahead cautiously to prevent unexpected and sudden situations from occurring.

(Continued)

# (Continued)

- The smart cruise control system is not a substitute for safe driving practices but a convenience function only. It is the responsibility of the driver to always check the speed and the distance to the vehicle ahead.
- Always be aware of the selected speed and vehicle to vehicle distance.
- Always maintain sufficient braking distance and decelerate your vehicle by applying the brakes if necessary.
- As the smart cruise control system may not recognize complex driving situations, always pay attention to driving conditions and control your vehicle speed.
- For safe operation, carefully read and follow the instructions in this manual before use.

# **A** CAUTION


The smart cruise control system may not operate temporarily due to electrical interference.



تلفن شبانه روزی: ۱-۸۸۸۶۲ ۲۸۸۸ تلفن شبانه روزی

FarmaSOS.com


# LANE DEPARTURE WARNING SYSTEM (LDWS) (IF EQUIPPED)

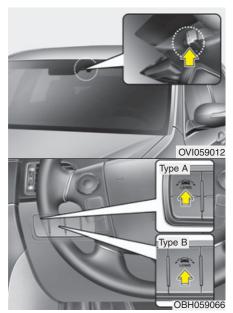


This system detects the lane with the sensor at the front windshield and warns you when your vehicle leaves the lane.

# MARNING


- The LDWS does not make the vehicle change lanes. It is the driver's responsibility to always check the road conditions
- Do not turn the steering wheel suddenly, when the LDWS warns you that your vehicle is leaving the lane.
- If the sensor can not detect the lane or if the vehicle speed does not exceed 60km/h, the LDWS won't warn you even though the vehicle leaves the lane.
- If your vehicle has window tint or other types of coating on the front windshield, the LDWS may not work properly.
- Do not let water or any kind of liquid come in contact with the LDWS sensor.
- Do not remove the LDWS parts and do not affect the sensor by a strong impact.
- Do not put objects that reflect light on the dash board.
- Always check the road conditions because you may not hear the warning chime because of audio. and external conditions.

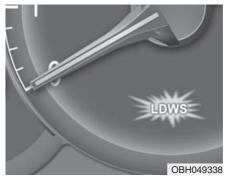

To operate the LDWS, press the switch with the ignition in the ON position. The indicator illuminates on the cluster. To cancel the LDWS, press the switch again.

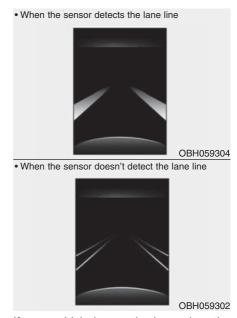

If your vehicle leaves the lane when the LDWS is operating and vehicle speed exceeds 60km/h, the warning operates as follows:

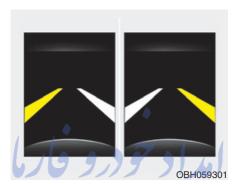

1. Visual warning
If you leave the lane, the lane you leave
on the LCD display blinks yellow with 0.8
second of interval. • ٨٠٠ نافن شيانه روزي:

2. Auditory warning
If you leave the lane, the warning sound operates with 0.8 second of interval.

3. Accelerator pedal warning (if equipped)

If you leave the lane, the accelerator pedal warning (vibration) operates after auditory warning.



# Warning indicator

If the LDWS FAIL warning indicator comes on, the LDWS is not working properly. Take your vehicle to an authorized HYUNDAI dealer and have the system checked.

# The LDWS does not operate when:

- The driver turns on the turn signal to change lane.
  - But, when the hazard warning flasher is operating, the LDWS operates normally.
- Operating the wiper switch with HI mode due to heavy rain.
- Driving on the lane line.

# \* NOTICE

To change lane, operate the turn signal switch then change the lane.

# The LDWS may not warn you even if the vehicle leaves the lane, or may warn you even if the vehicle does not leave the lane when:

- The lane can't be visible due to snow, rain, stain, a puddle or many other things.
- The brightness of the outside changes suddenly.
- Not turning on the headlight even at night or in the tunnel.
- Difficult to distinguish the color of the lane from the road.
- Driving on a steep grade or a curve.
- Light reflects from the water on the road.
- The lens or windshield is stained with foreign matter.
- The sensor cannot detect the lane because of fog, heavy rain or heavy snow.
- The surrounding of the inside rear view mirror temperature is high due to a direct ray of light.
- The lane is very wide or narrow.
- The lane line is damaged or indistinct.
- The shadow is on the lane line by a median strip.
- There is a mark similar to a lane line.
- There is a boundary structure.

- The distance from vehicle ahead is very short or the vehicle ahead drives hiding the lane line.
- The vehicle shakes heavily.
- The lane number increases or decreases or the lane lines are crossing complicatedly.
- Putting something on the dashboard.
- Driving with the sun in front of you.
- Driving in areas under construction.
- The lane line is more than two.

# INTELLIGENT ACCELERATOR PEDAL (IF EQUIPPED)


For your safety, the intelligent accelerator pedal operates as follows:

- The accelerator pedal vibrates when the lane departure warning system (if equipped) detects the vehicle has moved out of its lane.
- The reactive force of the accelerator pedal increases when the fuel efficiency is low.

The intelligent accelerator pedal function is available for use in vehicles equipped with lane departure warning system (LDWS) or ECO driving mode.

# **⚠** CAUTION

Do not be surprised when the pedal vibrates. It's not a malfunction but a warning for your safety.

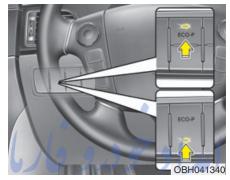

The ECO-P (pedal) indicator light will illuminate when the ECO-P button is pressed. If the fuel efficiency is low, the reactive force of intelligent accelerator pedal will be increased. It is allow to control over excess acceleration and you can drive fuel efficiently to help you improve fuel efficiency.

If you press the ECO-P button again, the indicator light turns off and the intelligent accelerator pedal is not operated in ECO driving mode. The intelligent accelerator pedal function is not activated in SPORT mode either.

To deactivate the intelligent accelerator pedal function in vehicles equipped with lane departure warning system (LDWS), turn off the LDWS function by using LDWS button.

### **ECONOMICAL OPERATION**

E100000AEN

Your vehicle's fuel economy depends mainly on your style of driving, where you drive and when you drive.

Each of these factors affects how many miles (kilometers) you can get from a gallon (liter) of fuel. To operate your vehicle as economically as possible, use the following driving suggestions to help save money in both fuel and repairs:

- Drive smoothly. Accelerate at a moderate rate. Don't make "jack-rabbit" starts or full-throttle shifts and maintain a steady cruising speed. Don't race between stoplights. Try to adjust your speed to that of the other traffic so you don't have to change speeds unnecessarily. Avoid heavy traffic whenever possible. Always maintain a safe distance from other vehicles so you can avoid unnecessary braking. This also reduces brake wear.
- Drive at a moderate speed. The faster you drive, the more fuel your car uses.
   Driving at a moderate speed, especially on the highway, is one of the most effective ways to reduce fuel consumption.

- Don't "ride" the brake pedal. This can increase fuel consumption and also increase wear on these components. In addition, driving with your foot resting on the brake pedal may cause the brakes to overheat, which reduces their effectiveness and may lead to more serious consequences.
- Take care of your tires. Keep them inflated to the recommended pressure. Incorrect inflation, either too much or too little, results in unnecessary tire wear. Check the tire pressures at least once a month.
- Be sure that the wheels are aligned correctly. Improper alignment can result from hitting curbs or driving too fast over irregular surfaces. Poor alignment causes faster tire wear and may also result in other problems as well as greater fuel consumption.

- Keep your car in good condition. For better fuel economy and reduced maintenance costs, maintain your car in accordance with the maintenance schedule in section 7. If you drive your car in severe conditions, more frequent maintenance is required (see section 7 for details).
- Keep your car clean. For maximum service, your vehicle should be kept clean and free of corrosive materials. It is especially important that mud, dirt, ice, etc. not be allowed to accumulate on the underside of the car. This extra weight can result in increased fuel consumption and also contribute to corrosion.
- Travel lightly. Don't carry unnecessary weight in your car. Weight reduces fuel economy.
- Don't let the engine idle longer than necessary. If you are waiting (and not in traffic), turn off your engine and restart only when you're ready to go.

- Remember, your vehicle does not require extended warm-up. After the engine has started, allow the engine to run for 10 to 20 seconds prior to placing the vehicle in gear. In very cold weather, however, give your engine a slightly longer warm-up period.
- Don't "lug" or "over-rev" the engine. Lugging is driving too slowly in too high a gear resulting in the engine bucking. If this happens, shift to a lower gear. Over-revving is racing the engine beyond its safe limit. This can be avoided by shifting at the recommended speeds.
- Use your air conditioning sparingly.
   The air conditioning system is operated by engine power so your fuel economy is reduced when you use it.
- Open windows at high speeds can reduce fuel economy.
- Fuel economy is less in crosswinds and headwinds. To help offset some of this loss, slow down when driving in these conditions.

Keeping a vehicle in good operating condition is important both for economy and safety. Therefore, have an authorized HYUNDAI dealer perform scheduled inspections and maintenance.

تلفن شبانه روزی: ۱-۸۸۸۶۲ ۲۹

# WARNING - Engine off during motion

Never turn the engine off to coast down hills or anytime the vehicle is in motion. The power steering and power brakes will not function properly without the engine running. Instead, keep the engine on and downshift to an appropriate gear for engine braking effect. In addition, turning off the ignition while driving could engage the steering wheel lock resulting in loss of vehicle steering which could cause serious injury or death.

FarmaSOS.com

# SPECIAL DRIVING CONDITIONS



F110100BBH

# Hazardous driving conditions

When hazardous driving conditions are encountered such as water, snow, ice. mud, sand, or similar hazards, follow these suggestions:

- · Drive cautiously and allow extra distance for braking.
- · Avoid sudden movements in braking or steering.

# **WARNING - ABS** Do not pump the brake pedal on a

vehicle equipped with ABS.

- · If stalled in snow, mud, or sand, use second gear. Accelerate slowly to avoid spinning the drive wheels.
- Use sand, rock salt, tire chains, or other non-slip material under the drive wheels to provide traction when stalled in ice, snow, or mud.

# **WARNING** - Downshifting

Downshifting with an automatic transmission, while driving on slippery surfaces can cause an accident. The sudden change in tire speed could cause the tires to skid. Be careful when downshifting on slippery surfaces.

#### F110200ATQ

# Rocking the vehicle

If it is necessary to rock the vehicle to free it from snow, sand, or mud, first turn the steering wheel right and left to clear the area around your drive wheels. Then, shift back and forth between R (Reverse) and any forward gear in vehicles equipped with an automatic transmission. Do not race the engine, and spin the wheels as little as possible. If you are still stuck after a few tries, have the vehicle pulled out by a tow vehicle to avoid engine overheating and possible damage to the transmission.

# **A** CAUTION

Prolonged rocking may cause engine over-heating, transmission damage or failure, and tire damage. WARNING - Spinning tires
Do not spin the wheels, especially
at speeds more than 56 km/h (35
mph). Spinning the wheels at high
speeds when the vehicle is stationary could cause a tire to overheat
which could result in tire damage
that may injure bystanders.

# \* NOTICE

The ESP system should be turned OFF prior to rocking the vehicle.

# **WARNING**

If your vehicle becomes stuck in snow, mud, sand, etc., then you may attempt to rock the vehicle free by moving it forward and backward. Do not attempt this procedure if people or objects are anywhere near the vehicle. During the rocking operation the vehicle may suddenly move forward of backward as it becomes unstuck, causing injury or damage to nearby people or objects.



E110300AUN

# **Smooth cornering**

Avoid braking or gear changing in corners, especially when roads are wet. Ideally, corners should always be taken under gentle acceleration. If you follow these suggestions, tire wear will be held to a minimum.



E110400ABH

# **Driving at night**

Because night driving presents more hazards than driving in the daylight, here are some important tips to remember:

 Slow down and keep more distance between you and other vehicles, as it may be more difficult to see at night, especially in areas where there may not be any street lights.

- Adjust your mirrors to reduce the glare from other driver's headlights.
- Keep your headlights clean and properly aimed on vehicles not equipped with the automatic headlight aiming feature. Dirty or improperly aimed headlights will make it much more difficult to see at night.
- Avoid staring directly at the headlights of oncoming vehicles. You could be temporarily blinded, and it will take several seconds for your eyes to readjust to the darkness.



E110500AUN

# Driving in the rain

Rain and wet roads can make driving dangerous, especially if you're not prepared for the slick pavement. Here are a few things to consider when driving in the rain:

- A heavy rainfall will make it harder to see and will increase the distance needed to stop your vehicle, so slow down.
- Keep your windshield wiping equipment in good shape. Replace your windshield wiper blades when they show signs of streaking or missing areas on the windshield.

- If your tires are not in good condition, making a quick stop on wet pavement can cause a skid and possibly lead to an accident. Be sure your tires are in good shape.
- Turn on your headlights to make it easier for others to see you.
- Driving too fast through large puddles can affect your brakes. If you must go through puddles, try to drive through them slowly.
- If you believe you may have gotten your brakes wet, apply them lightly while driving until normal braking operation returns.

#### E110600AUN

# **Driving in flooded areas**

Avoid driving through flooded areas unless you are sure the water is no higher than the bottom of the wheel hub. Drive through any water slowly. Allow adequate stopping distance because brake performance may be affected. After driving through water, dry the brakes by gently applying them several times while the vehicle is moving slowly.

# **Driving off-road**

Drive carefully off-road because your vehicle may be damaged by rocks or roots of trees. Become familiar with the off-road conditions where you are going to drive before you begin driving.



E110700ABH

# **Highway driving**

### Tires

Adjust the tire inflation pressures to specification. Low tire inflation pressures will result in overheating and possible failure of the tires.

Avoid using worn or damaged tires which may result in reduced traction or tire failure.

# \* NOTICE

Never exceed the maximum tire inflation pressure shown on the tires.

# **WARNING**

- Underinflated or overinflated tires can cause poor handling, loss of vehicle control, and sudden tire failure leading to accidents, injuries, and even death. Always check tires for proper inflation before driving. For proper tire pressures, refer to "Tires and wheels" in section 8.
- Driving on tires with no or insufficient tread is dangerous. Wornout tires can result in loss of vehicle control, collisions, injury, and even death. Worn-out tires should be replaced as soon as possible and should never be used for driving. Always check the tire tread before driving your car. For further information and tread limits, refer to "Tires and wheels" in section 7.

Fuel, engine coolant and engine oil
High speed travel consumes more fuel
than urban motoring. Do not forget to
check both engine coolant and engine oil.

### Drive belt

A loose or damaged drive belt may result in overheating of the engine.

### WINTER DRIVING



E120000ABH

More severe weather conditions of winter result in greater wear and other problems. To minimize winter driving problem, you should follow these suggestions: E120100AUN

# Snowy or icy conditions

To drive your vehicle in deep snow, it may be necessary to use snow tires or to install tire chains on your tires. If snow tires are needed, it is necessary to select tires equivalent in size and type of the original equipment tires. Failure to do so may adversely affect the safety and handling of your car. Furthermore, speeding, rapid acceleration, sudden brake applications, and sharp turns are potentially very hazardous practices.

During deceleration, use engine braking to the fullest extent. Sudden brake applications on snowy or icy roads may cause skids to occur. You need to keep sufficient distance between the vehicle in operation in front and your vehicle. Also, apply the brake gently. It should be noted that installing tire chains on the tire will provide a greater driving force, but will not prevent side skids.

# \* NOTICE

Tire chains are not legal in all countries. Check the country laws before fitting tire chains. E120101AUN

Snow tires

If you mount snow tires on your vehicle, make sure they are radial tires of the same size and load range as the original tires. Mount snow tires on all four wheels to balance your vehicle's handling in all weather conditions. Keep in mind that the traction provided by snow tires on dry roads may not be as high as your vehicle's original equipment tires. You should drive cautiously even when the roads are clear. Check with the tire dealer for maximum speed recommendations.

A WARNING - Snow tire size Snow tires should be equivalent in size and type to the vehicle's standard tires. Otherwise, the safety and handling of your vehicle may be adversely affected.

Do not install studded tires without first checking local, state and municipal regulations for possible restrictions against their use.



E120102ABH *Tire chains* 

Since the sidewalls of radial tires are thinner, they can be damaged by mounting some types of snow chains on them. Therefore, the use of snow tires is recommended instead of snow chains. Do not mount tire chains on vehicles equipped with aluminum wheels; snow chains may cause damage to the wheels. If snow chains must be used, use wiretype chains with a thickness of less than 12 mm (0.47 in). Damage to your vehicle caused by improper snow chain use is not covered by your vehicle manufacturers warranty.

Install tire chains only on the rear tires.

# **A** CAUTION

- Make sure the snow chains are the correct size and type for your tires. Incorrect snow chains can cause damage to the vehicle body and suspension and may not be covered by your vehicle manufacturer warranty. Also, the snow chain connecting hooks may be damaged from contacting vehicle components causing the snow chains to come loose from the tire. Make sure the snow chains are SAE class "S" certified.
- Always check chain installation for proper mounting after driving approximately 0.5 to 1 km (0.3 to 0.6 miles) to ensure safe mounting. Retighten or remount the chains if they are loose.

### Chain installation

When installing chains, follow the manufacturer's instructions and mount them as tightly as you can. Drive slowly with chains installed. If you hear the chains contacting the body or chassis, stop and tighten them. If they still make contact, slow down until it stops. Remove the chains as soon as you begin driving on cleared roads.

# **WARNING**

- Mounting chains

When mounting snow chains, park the vehicle on level ground away from traffic. Turn on the vehicle Hazard Warning flashers and place a triangular emergency warning device behind the vehicle if available. Always place the vehicle in P (Park), apply the parking brake and turn off the engine before installing snow chains.

## **WARNING** - Tire chains

- The use of chains may adversely affect vehicle handling.
- Do not exceed 30 km/h (20 mph) or the chain manufacturer's recommended speed limit, whichever is lower.
- Drive carefully and avoid bumps, holes, sharp turns, and other road hazards, which may cause the vehicle to bounce.
- Avoid sharp turns or lockedwheel braking.

### **!** CAUTION

- Chains that are the wrong size or improperly installed can damage your vehicle's brake lines, suspension, body and wheels.
- Stop driving and retighten the chains any time you hear them hitting the vehicle.

E120200AUN

## Use high quality ethylene glycol coolant

Your vehicle is delivered with high quality ethylene glycol coolant in the cooling system. It is the only type of coolant that should be used because it helps prevent corrosion in the cooling system, lubricates the water pump and prevents freezing. Be sure to replace or replenish your coolant in accordance with the maintenance schedule in section 7. Before winter, have your coolant tested to assure that its freezing point is sufficient for the temperatures anticipated during the winter.

E120300AEN

#### **Check battery and cables**

Winter puts additional burdens on the battery system. Visually inspect the battery and cables as described in section 7. The level of charge in your battery can be checked by an authorized HYUNDAI dealer or a service station.

E120400ABH

# Change to "winter weight" oil if necessary

In some climates it is recommended that a lower viscosity "winter weight" oil be used during cold weather. See section 8 for recommendations. If you aren't sure what weight oil you should use, consult an authorized HYUNDAI dealer.

E120500AUN

# Check spark plugs and ignition system

Inspect your spark plugs as described in section 7 and replace them if necessary. Also check all ignition wiring and components to be sure they are not cracked, worn or damaged in any way.

#### E120600AUN

### To keep locks from freezing

To keep the locks from freezing, squirt an approved de-icer fluid or glycerine into the key opening. If a lock is covered with ice, squirt it with an approved de-icing fluid to remove the ice. If the lock is frozen internally, you may be able to thaw it out by using a heated key. Handle the heated key with care to avoid injury.

#### E120700AEN

# Use approved window washer anti-freeze in system

To keep the water in the window washer system from freezing, add an approved window washer anti-freeze solution in accordance with instructions on the container. Window washer anti-freeze is available from an authorized HYUNDAI dealer and most auto parts outlets. Do not use engine coolant or other types of anti-freeze as these may damage the paint finish.

#### E120800ABH

# Don't let your parking brake freeze

Under some conditions your parking brake can freeze in the engaged position. This is most likely to happen when there is an accumulation of snow or ice around or near the rear brakes or if the brakes are wet. If there is a risk the parking brake may freeze, apply it only temporarily while you put the gear shift lever in P and block the rear wheels so the car cannot roll. Then release the parking brake.

#### E120900AUN

## Don't let ice and snow accumulate underneath

Under some conditions, snow and ice can build up under the fenders and interfere with the steering. When driving in severe winter conditions where this may happen, you should periodically check underneath the car to be sure the movement of the front wheels and the steering components is not obstructed.

#### F121000AUN

### Carry emergency equipment

Depending on the severity of the weather where you drive your car, you should carry appropriate emergency equipment. Some of the items you may want to carry include tire chains, tow straps or chains, flashlight, emergency flares, sand, a shovel, jumper cables, a window scraper, gloves, ground cloth, coveralls, a blanket, etc.

#### **VEHICLE WEIGHT**

E160000ABH

This section will guide you in the proper loading of your vehicle, to keep your loaded vehicle weight within its design rating capability. Properly loading your vehicle will provide maximum return of the vehicle design performance. Before loading your vehicle, familiarize yourself with the following terms for determining your vehicle's weight ratings, from the vehicle's specifications and the certification label:

E160100AUN

#### Base curb weight

This is the weight of the vehicle including a full tank of fuel and all standard equipment. It does not include passengers, cargo, or optional equipment.

E160200AUN

#### Vehicle curb weight

This is the weight of your new vehicle when you picked it up from your dealer plus any aftermarket equipment.

E160300AUN

#### Cargo weight

This figure includes all weight added to the Base Curb Weight, including cargo and optional equipment. E160400AUN

#### **GAW (Gross axle weight)**

This is the total weight placed on each axle (front and rear) - including vehicle curb weight and all payload.

E160500AUN

### GAWR (Gross axle weight rating)

This is the maximum allowable weight that can be carried by a single axle (front or rear). These numbers are shown on the certification label.

The total load on each axle must never exceed its GAWR.

E160600AUN

### GVW (Gross vehicle weight)

This is the Base Curb Weight plus actual Cargo Weight plus passengers.

160700AUN 18505.C

#### GVWR (Gross vehicle weight rating)

This is the maximum allowable weight of the fully loaded vehicle (including all options, equipment, passengers and cargo). The GVWR is shown on the certification label located on the driver's (or front passenger's) door sill. F160800AUN

### Overloading

WARNING - Vehicle weight
The gross axle weight rating
(GAWR) and the gross vehicle
weight rating (GVWR) for your vehicle are on the certification label
attached to the driver's (or front
passenger's) door. Exceeding
these ratings can cause an accident or vehicle damage. You can
calculate the weight of your load by
weighing the items (and people)
before putting them in the vehicle.
Be careful not to overload your
vehicle.

#### TRAILER TOWING

E140000ABH

We do not recommend using this vehicle for trailer towing.



تلفن شبانه روزی: ۵۸۰۲۹۸۸۸ - ۲۱

FarmaSOS.com

FarmaSOS.com

#### **ROAD WARNING**



F010100AUN

### Hazard warning flasher

The hazard warning flasher serves as a warning to other drivers to exercise extreme caution when approaching, overtaking, or passing your vehicle.

It should be used whenever emergency repairs are being made or when the vehicle is stopped near the edge of a roadway.

Depress the flasher switch with the ignition switch in any position. The flasher switch is located in the center console switch panel. All turn signal lights will flash simultaneously.

- The hazard warning flasher operates whether your vehicle is running or not.
- The turn signals do not work when the hazard flasher is on.

## FarmaSOS.com

## IN CASE OF AN EMERGENCY WHILE DRIVING

# If the engine stalls at a crossroad or crossing

If the engine stalls at a crossroad or crossing, set the shift lever in the N (Neutral) position and then push the vehicle to a safe place.

#### F020200ABH

### If you have a flat tire while driving

If a tire goes flat while you are driving:

- 1. Take your foot off the accelerator pedal and let the car slow down while driving straight ahead. Do not apply the brakes immediately or attempt to pull off the road as this may cause a loss of control. When the car has slowed to such a speed that it is safe to do so, brake carefully and pull off the road. Drive off the road as far as possible and park on firm, level ground. If you are on a divided highway, do not park in the median area between the two traffic lanes.
- When the car is stopped, turn on your emergency hazard flashers, set the parking brake and put the shift lever in P.

- 3. Have all passengers get out of the car. Be sure they all get out on the side of the car that is away from traffic.
- When changing a flat tire, follow the instruction provided later in this section.

#### F020300AEN

## If engine stalls while driving

- Reduce your speed gradually, keeping a straight line. Move cautiously off the road to a safe place.
- 2. Turn on your emergency flashers.
- Try to start the engine again. If your vehicle will not start, contact an authorized HYUNDAI dealer or seek other qualified assistance.

#### IF THE ENGINE WILL NOT START

F030100BBH

# If engine doesn't turn over or turns over slowly

- Be sure the shift lever is in N (Neutral) or P (Park) and the emergency brake is set.
- 2. Check the battery connections to be sure they are clean and tight.
- 3. Turn on the interior light. If the light dims or goes out when you operate the starter, the battery is discharged.
- 4. Check the starter connections to be sure they are securely tightened.
- Do not push or pull the vehicle to start it. See instructions for "Jump starting".

## **WARNING**


If the engine will not start, do not push or pull the car to start it. This could result in a collision or cause other damage.

F030200ABH

## If engine turns over normally but does not start

- 1. Check fuel level.
- With the ignition switch in the LOCK position, check all connectors at the ignition coils and spark plugs. Reconnect any that may be disconnected or loose.
- If the engine still does not start, call an authorized HYUNDAI dealer or seek other qualified assistance.

#### **EMERGENCY STARTING**

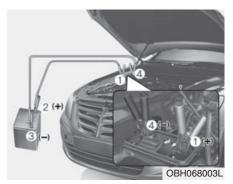

F040000ABH

Connect cables in numerical order and disconnect in reverse order.

#### \* NOTICE

Your vehicle has a battery in the trunk room, but when you jump start your vehicle, use the jumper terminal in the engine room. F040100AEN

#### Jump starting

Jump starting can be dangerous if done incorrectly. Therefore, to avoid harm to yourself or damage to your vehicle or battery, follow the jump starting procedures. If in doubt, we strongly recommend that you have a competent technician or towing service jump start your vehicle.

## (L) CAUTION

Use only a 12-volt jumper system. You can damage a 12-volt starting motor, ignition system, and other electrical parts beyond repair by use of a 24-volt power supply (either two 12-volt batteries in series or a 24-volt motor generator set).

## **▲ WARNING - Battery**

Never attempt to check the electrolyte level of the battery as this may cause the battery to rupture or explode causing serious injury.

## **A** WARNING - Battery

- Keep all flames or sparks away from the battery. The battery produces hydrogen gas which may explode if exposed to flame or sparks.
- If these instructions are not followed exactly, serious personal injury and damage to the vehicle may occur! If you are not sure how to follow this procedure, seek qualified assistance. Automobile batteries contain sulfuric acid. This is poisonous and highly corrosive. When jump starting, wear protective glasses and be careful not to get acid on yourself, your clothing or on the car.
- Do not attempt to jump start the vehicle if the discharged battery is frozen or if the electrolyte level is low; the battery may rupture or explode.

F040101ABH

Jump starting procedure

#### \* NOTICE

Your vehicle has a battery in the trunk room, but when you jump start your vehicle, use the jumper terminal in the engine room.

- Make sure the booster battery is 12volt and that its negative terminal is grounded.
- If the booster battery is in another vehicle, do not allow the vehicles to touch.
- 3. Turn off all unnecessary electrical loads.
- 4. Connect the jumper cables in the exact sequence shown in the illustration. First connect one end of a jumper cable to the positive terminal of the jump start connector (1), then connect the other end to the positive terminal on the booster battery (2).

Proceed to connect one end of the other jumper cable to the negative terminal of the booster battery (3), then the other end to the negative terminal of the jump start connector (4). Do not connect it to or near any part that moves when the engine is cranked.

Do not allow the jumper cables to contact anything except the correct battery terminals or the correct ground. Do not lean over the battery when making connections.

## **!** CAUTION - Battery cables

If you jump start the discharged battery in the trunk compartment, do not connect the jumper cable from the negative terminal of the booster battery to the negative terminal of the discharged battery. This can cause the discharged battery to overheat and crack, releasing battery acid.

Connect the jumper cable from the negative terminal of the booster battery to a solid, stationary or metallic point away from the discharged battery.

Start the engine of the vehicle with the booster battery and let it run at 2,000 rpm, then start the engine of the vehicle with the discharged battery.

If the cause of your battery discharging is not apparent, you should have your vehicle checked by an authorized HYUNDAI dealer. F040200BBH

#### **Push-starting**

Vehicles equipped with automatic transmission cannot be push-started.

Follow the directions in this section for jump-starting.

#### IF THE ENGINE OVERHEATS

F050000ABH

If your temperature gauge indicates overheating, you experience a loss of power, or hear loud pinging or knocking, the engine is probably too hot. If this happens, you should:

- 1. Pull off the road and stop as soon as it is safe to do so.
- Place the shift lever in P and set the parking brake. If the air conditioning is on, turn it off.
- 3. If engine coolant is running out under the car or steam is coming out from the hood, stop the engine. Do not open the hood until the coolant has stopped running or the steaming has stopped. If there is no visible loss of engine coolant and no steam, leave the engine running and check to be sure the engine cooling fan is operating. If the fan is not running, turn the engine off.

4. Check to see if the water pump drive belt is missing. If it is not missing, check to see that it is tight. If the drive belt seems to be satisfactory, check for coolant leaking from the radiator, hoses or under the car. (If the air conditioning had been in use, it is normal for cold water to be draining from it when you stop).

## **WARNING**

While the engine is running, keep hair, hands and clothing away from moving parts such as the fan and drive belts to prevent injury.

 If the water pump drive belt is broken or engine coolant is leaking out, stop the engine immediately and call the nearest authorized HYUNDAI dealer for assistance.

- 6. If you cannot find the cause of the overheating, wait until the engine temperature has returned to normal. Then, if coolant has been lost, carefully add coolant to the reservoir to bring the fluid level in the reservoir up to the halfway mark.
- Proceed with caution, keeping alert for further signs of overheating. If overheating happens again, call an authorized HYUNDAI dealer for assistance.

### **A** CAUTION

Serious loss of coolant indicates there is a leak in the cooling system and this should be checked as soon as possible by an authorized HYUNDAI dealer.

## **WARNING**

Do not remove the radiator cap when the engine is hot. This can allow coolant to be blown out of the opening and cause serious burns.

## TIRE PRESSURE MONITORING SYSTEM (TPMS) (IF EQUIPPED)



- (1) TPMS Malfunction Indicator
- (2) Low Tire Pressure Telltale
- (3) Low Tire Pressure Position Telltale (if equipped)

F060000ABH

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label. (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires.)

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure telltale when one or more of your tires is significantly under-inflated. Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability.

Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is provided by a separate telltale, which displays the symbol "TPMS" when illuminated. When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly.

Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.

#### \* NOTICE

If the TPMS, Low Tire Pressure telltale do not illuminate for 3 seconds when the ignition switch is turned to the ON position or engine is running, or if they remain illuminated after coming on for approximately 3 seconds, take your car to your nearest authorized HYUNDAI dealer and have the system checked. F060100ABH-EE



Low tire pressure telltale



Low tire pressure position telltale

When the tire pressure monitoring system warning indicators are illuminated, one or more of your tires is significantly under-inflated. The low tire pressure position telltale (supplemental) will indicate which tire is significantly under-inflated by illuminating the corresponding position on the LCD screen (if equipped).

If either telltale illuminates, immediately reduce your speed, avoid hard cornering and anticipate increased stopping distances. You should stop and check your tires as soon as possible. Inflate the tires to the proper pressure as indicated on the vehicle's placard or tire inflation pressure label located on the driver's side center pillar outer panel. If you cannot reach a service station or if the tire cannot hold the newly added air, replace the low pressure tire with the spare tire.

The Low Tire Pressure and Position telltale will remain on until you have the low pressure tire repaired and replaced on the vehicle.

#### \* NOTICE

The spare tire is not equipped with a tire pressure sensor.

## **A** CAUTION

In winter or cold weather, the low tire pressure telltale may be illuminated if the tire pressure was adjusted to the recommended tire inflation pressure in warm weather. It does not mean your TPMS is malfunctioning because the decreased temperature leads to a proportional lowering of tire pressure.

When you drive your vehicle from a warm area to a cold area or from a cold area to a warm area, or the outside temperature is greatly higher or lower, you should check the tire inflation pressure and adjust the tires to the recommended tire inflation pressure.

# **WARNING** - Low pressure damage

Significantly low tire pressure makes the vehicle unstable and can contribute to loss of vehicle control and increased braking distances.

Continued driving on low pressure tires can cause the tires to overheat and fail.

تلفن شبانه روزی: ۱۳۸۰ ۲۹۸۸۸–۲۲

FarmaSOS.com

F060200ABH



# TPMS (Tire Pressure Monitoring System) malfunction indicator

The TPMS malfunction indicator comes on and stays on when there is a problem with the Tire Pressure Monitoring System. The system is able to correctly detect an underinflation warning at the same time as system failure then it will illuminate both the TPMS malfunction and the low tire pressure telltale. If the Front Left sensor fails, the TPMS malfunction indicator illuminates, but if the Front Right, Rear Left, or Rear Right tire is under-inflated, the low tire pressure and position telltales may illuminate together with the TPMS malfunction indicator.

Have the system checked by an authorized HYUNDAI dealer as soon as possible to determine the cause of the problem.

### **A** CAUTION

- The TPMS malfunction indicator may be illuminated if the vehicle is moving around electric power supply cables or radios transmitter such as at police stations, government and public offices, broadcasting stations, military installations, airports, or transmitting towers, etc. This can interfere with normal operation of the Tire Pressure Monitoring System (TPMS).
- The TPMS malfunction indicator may be illuminated if snow chains are used or some separate electronic devices such as notebook computer, mobile charger, remote starter or navigation etc., are used in the vehicle. This can interfere with normal operation of the Tire Pressure Monitoring System (TPMS).

(Continued)

## (Continued)

· If there is a failed tire sensor, it is possible for TPMS to temporarily learn a replacement sensor when you drive closely to another vehicle equipped with TPMS too. In rare cases. this may temporarily delay the TPMS malfunction turning on.



تلفن شبانه روزی: ۵۸۰۲۹۸۸۸ - ۲۱

FarmaSOS.com

F060300BBH-FF

## Changing a tire with TPMS

If you have a flat tire, the Low Tire Pressure and Position telltales will come on. Have the flat tire repaired by an authorized HYUNDAI dealer as soon as possible or replace the flat tire with the spare tire.

#### **⚠** CAUTION

NEVER use a puncture-repairing agent to repair and/or inflate a low pressure tire. The tire sealant can damage the tire pressure sensor. If used, you will have to replace the tire pressure sensor.

Each wheel is equipped with a tire pressure sensor mounted inside the tire behind the valve stem. You must use TPMS specific wheels. It is recommended that you always have your tires serviced by an authorized HYUNDAI dealer as soon as possible.

The spare tire is not equipped with a tire pressure monitoring sensor. When the low pressure tire is replaced with the spare tire, the low tire pressure and the low tire pressure position telltales may extinguish and the TPMS malfunction indicator may illuminate after restarting and within 20 minutes continuous driving.

The TPMS malfunction indicator may remain on until the original tire equipped with a tire monitoring sensor is reinflated to the recommended pressure and reinstalled on the vehicle then driving for a few minutes.

Once the low pressure tire is reinflated to the recommended pressure and installed on the vehicle, the TPMS malfunction indicator and the low tire pressure and position telltales will extinguish within a few minutes of driving.

If the indicators are not extinguished after a few minutes, please visit an authorized HYUNDAI dealer.

You may not be able identify a low tire by simply looking at it. Always use a good quality tire pressure gauge to measure the tire's inflation pressure. Please note that a tire that is hot (from being driven) will have a higher pressure measurement than a tire that is cold (from sitting stationary for at least 3 hours and driven less than 1.6km (1 mile) during that 3 hour period).

Allow the tire to cool before measuring the inflation pressure. Always be sure the tire is cold before inflating to the recommended pressure.

A cold tire means the vehicle has been sitting for 3 hours and driven for less than 1.6km (1 mile) in that 3 hour period.

#### **!** CAUTION

- Do not use any tire sealant if your vehicle is equipped with a Tire Pressure Monitoring System. The liquid sealant can damage the tire pressure sensors.
- In order to correctly monitor the tires with inflation, the 4 tire pressure monitoring sensors should be exactly fitted to each of the 4 driven wheel. There should be no other sensors in the vehicle include spare tire, it may cause the system couldn't monitor the tires with inflation correctly.

### **WARNING - TPMS**

- The TPMS cannot alert you to severe and sudden tire damage caused by external factors such as nails or road debris.
- If you feel any vehicle instability, immediately take your foot off the accelerator, apply the brakes gradually and with light force, and slowly move to a safe position off the road.

# WARNING - Protecting TPMS

Tampering with, modifying, or disabling the Tire Pressure Monitoring System (TPMS) components may interfere with the system's ability to warn the driver of low tire pressure conditions and/or TPMS malfunctions. Tampering with, modifying, or disabling the Tire Pressure Monitoring System (TPMS) components may void the warranty for that portion of the vehicle.

FarmaSOS.com

#### IF YOU HAVE A FLAT TIRE



F070100ABH

#### Jack and tools

The jack, jack handle, and wheel lug nut wrench are stored in the luggage compartment. Pull up the luggage box cover to reach this equipment.

- (1) Jack handle
- (2) Jack
- (3) Wheel lug nut wrench

F070101AUN

#### Jacking instructions

The jack is provided for emergency tire changing only.

To prevent the jack from "rattling" while the vehicle is in motion, store it properly.

Follow jacking instructions to reduce the possibility of personal injury.

## **WARNING** - Changing tires

- Never attempt vehicle repairs in the traffic lanes of a public road or highway.
- Always move the vehicle completely off the road and onto the shoulder before trying to change a tire. The jack should be used on level firm ground. If you cannot find a firm, level place off the road, call a towing service company for assistance.

(Continued)

### (Continued)

- Be sure to use the correct front and rear jacking positions on the vehicle; never use the bumpers or any other part of the vehicle for jacking support.
- The vehicle can easily roll off the jack causing serious injury or death.
- Do not get under a vehicle that is supported by a jack.
- Do not start or run the engine while the vehicle is on the jack.
- Do not allow anyone to remain in the vehicle while it is on the jack.
- Make sure any children present are in a secure place away from the road and from the vehicle to be raised with the jack.



F070200ABH

# Removing and storing the spare tire

Turn the tire hold-down wing bolt counterclockwise.

Store the tire in the reverse order of removal.

To prevent the spare tire and tools from "rattling" while the vehicle is in motion, store them properly.

### **A** CAUTION

When you remove or store the spare tire, don't give a shock to the battery.

Shock to the battery may cause failure of electrical circuits.



تلفن شبانه روزی: ۱۳۸۸۶۲۰۸۵ تلفن شبانه روزی

FarmaSOS.com



F070300ABH

### **Changing tires**

- 1. Park on a level surface and apply the parking brake firmly.
- 2. Shift the shift lever into P (Park).
- 3. Activate the hazard warning flasher.



- 4. Remove the wheel lug nut wrench, jack, jack handle, and spare tire from the vehicle.
- Block both the front and rear of the wheel that is diagonally opposite the jack position.

**WARNING** - Changing a tire

- To prevent vehicle movement while changing a tire, always set the parking brake fully, and always block the wheel diagonally opposite the wheel being changed.
- We recommend that the wheels of the vehicle be blocked, and that no person remain in the vehicle that is being jacked.

تلفن شبانه روزی: ۱-۸۸۸۶۲۰۸۵ تلفن شبانه روزی

OBH061024

Insert the screwdriver into the groove of the wheel cap and pry gently to remove the wheel cap (If equipped).

FarmaSOS.com




Loosen the wheel lug nuts counterclockwise one turn each, but do not remove any nut until the tire has been raised off the ground.



8. Place the jack at the front or rear jacking position closest to the tire you are changing. Place the jack at the designated locations under the frame. The jacking positions are plates welded to the frame with two tabs and a raised dot to index with the jack.

WARNING - Jack location
To reduce the possibility of
injury, be sure to use only the
jack provided with the vehicle
and in the correct jack position;
never use any other part of the
vehicle for jack support.

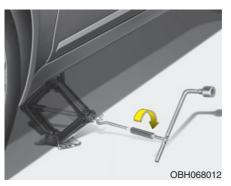

9. Insert the jack handle into the jack and turn it clockwise, raising the vehicle until the tire just clears the ground. This measurement is approximately 30 mm (1.2 in). Before removing the wheel lug nuts, make sure the vehicle is stable and that there is no chance for movement or slippage. 10. Loosen the wheel nuts and remove them with your fingers. Slide the wheel off the studs and lay it flat so it cannot roll away. To put the wheel on the hub, pick up the spare tire, line up the holes with the studs and slide the wheel onto them. If this is difficult, tip the wheel slightly and get the top hole in the wheel lined up with the top stud. Then jiggle the wheel back and forth until the wheel can be slid over the other studs.

### **WARNING**

Wheels may have sharp edges. Handle them carefully to avoid possible severe injury. Before putting the wheel into place, be sure that there is nothing on the hub or wheel (such as mud, tar, gravel, etc.) that interferes with the wheel from fitting solidly against the hub.

If there is, remove it. If there is not good contact on the mounting surface between the wheel and hub, the wheel nuts could come loose and cause the loss of a wheel. Loss of a wheel may result in loss of control of the vehicle. This may cause serious injury or death.

- 11. To reinstall the wheel, hold it on the studs, put the wheel nuts on the studs and tighten them finger tight. The nuts should be installed with their tapered small diameter ends directed inward. Jiggle the tire to be sure it is completely seated, then tighten the nuts as much as possible with your fingers again.
- 12. Lower the car to the ground by turning the wheel nut wrench counterclockwise.



Then position the wrench as shown in the drawing and tighten the wheel nuts. Be sure the socket is seated completely over the nut. Do not stand on the wrench handle or use an extension pipe over the wrench handle. Go around the wheel tightening every other nut until they are all tight. Then double-check each nut for tightness. After changing wheels, have an authorized HYUNDAI dealer tighten the wheel nuts to their proper torque as soon as possible.

### Wheel nut tightening torque:

Steel wheel & aluminum alloy wheel: 9~11 kg·m (65~79 lb·ft)

13. Reinstall the wheel cap by fitting the boss of the wheel cap in the groove of the wheel, hitting the center of the wheel cap with your hand (If equipped).

If you have a tire gauge, remove the valve cap and check the air pressure. If the pressure is lower than recommended, drive slowly to the nearest service station and inflate to the correct pressure. If it is too high, adjust it until it is correct. Always reinstall the valve cap after checking or adjusting tire pressure. If the cap is not replaced, air may leak from the tire. If you lose a valve cap, buy another and install it as soon as possible.

After you have changed wheels, always secure the flat tire in its place and return the jack and tools to their proper storage locations.

### **A** CAUTION

Your vehicle has metric threads on the wheel studs and nuts. Make certain during wheel removal that the same nuts that were removed are reinstalled or, if replaced, that nuts with metric threads and the same chamfer configuration are used. Installation of a non-metric thread nut on a metric stud or vice-versa will not secure the wheel to the hub properly and will damage the stud so that it must be replaced.

Note that most lug nuts do not have metric threads. Be sure to use extreme care in checking for thread style before installing aftermarket lug nuts or wheels. If in doubt, consult an authorized HYUNDAI dealer. WARNING - Wheel studs
If the studs are damaged, they
may lose their ability to retain
the wheel. This could lead to the
loss of the wheel and a collision
resulting in serious injuries.

To prevent the jack, jack handle, wheel lug nut wrench and spare tire from rattling while the vehicle is in motion, store them properly.

WARNING - Inadequate spare tire pressure


Check the inflation pressures as soon as possible after installing the spare tire. Adjust it to the specified pressure, if necessary. Refer to "Tires and wheels" section 8.



تلفن شبانه روزی: ۵۸۰۲۹۸۸۸ تلفن شبانه روزی:

FarmaSOS.com

#### **TOWING**

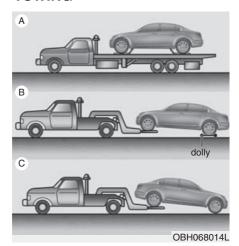

F080100ABH

#### **Towing service**


If emergency towing is necessary, we recommend having it done by an authorized HYUNDAI dealer or a commercial tow-truck service. Proper lifting and towing procedures are necessary to prevent damage to the vehicle. The use of wheel dollies or flatbed is recommended.

It is acceptable to tow the vehicle with the front wheels on the ground (without dollies) and the rear wheels off the ground. If any of the loaded wheels or suspension components are damaged or the vehicle is being towed with the rear wheels on the ground, use a towing dolly under the rear wheels.

When being towed by a commercial tow truck and wheel dollies are not used, the rear of the vehicle should always be lifted, not the front.

تلفن شبانه روزی: ۱۳۸۸۶۲۰۸۵ تلفن شبانه روزی: ۱۳۵۸۸۶۲۰۸۵

FarmaSOS.com

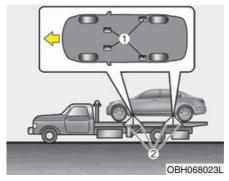

#### \* NOTICE

When you tow the vehicle as the picture (A), the cable should be secured to the vehicle towing hook (1) as the picture. If you use chains or cables to tie down your vehicle, the angle (2) must be 45°. Do not overly tighten the tie downs or the vehicle may be damaged.





## **A** CAUTION

- Do not tow the vehicle with the rear wheels on the ground as this may cause damage to the vehicle.
- Do not tow with sling-type equipment. Use wheel lift or flatbed equipment.

When towing your vehicle in an emergency without wheel dollies:


- Set the ignition switch in the ACC position.
- 2. Place the shift lever in N (Neutral).
- 3. Release the parking brake.

### **!** CAUTION

Failure to place the shift lever in N (Neutral) may cause internal damage to the transmission.




FarmaSOS.com

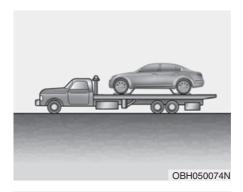


## **A** CAUTION

If the ECS malfunction indicator illuminates when there is no air in the suspension, the vehicle height will be very lower, so do not drive to protect the vehicle from the projections on the surface of the ground. Take your vehicle to an authorized HYUNDAI dealer by towing the vehicle and have the system checked. You should tow the vehicle as the picture.

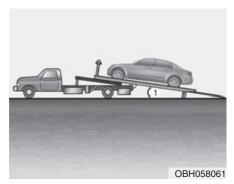

When you load the vehicle onto the tow truck, the loading angle(1) should be smaller than 6°.

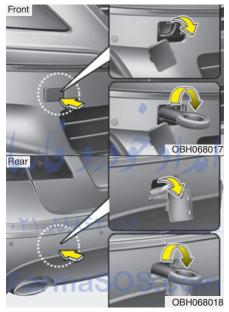


F080200ABH

# Removable towing hook (if equipped)

- 1. Open the trunk, and remove the towing hook from the tool case.
- 2. Remove the hole cover by pressing the lower part of the cover on the front and the rear bumper.

- Install the towing hook by turning it clockwise into the hole until it is fully secured.
- 4. Remove the towing hook and install the cover after use.

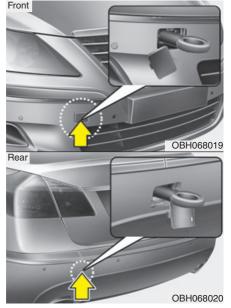

F080300AFD

#### **Emergency towing**

If towing is necessary, we recommend you to have it done by an authorized HYUNDAI dealer or a commercial tow truck service.

If towing service is not available in an emergency, your vehicle may be temporarily towed using a cable or chain secured to the emergency towing hook under the front (or rear) of the vehicle. Use extreme caution when towing the vehicle. A driver must be in the vehicle to steer it and operate the brakes.

Towing in this manner may be done only on hard-surfaced roads for a short distance and at low speeds. Also, the wheels, axles, power train, steering and brakes must all be in good condition.

- Do not use the tow hooks to pull a vehicle out of mud, sand or other conditions from which the vehicle cannot be driven out under its own power.
- Avoid towing a vehicle heavier than the vehicle doing the towing.
- The drivers of both vehicles should communicate with each other frequently.


#### **A** CAUTION

- Attach a towing strap to the tow hook.
- Using a portion of the vehicle other than the tow hooks for towing may damage the body of your vehicle.
- Use only a cable or chain specifically intended for use in towing vehicles. Securely fasten the cable or chain to the towing hook provided.
- Before emergency towing, check that the hook is not broken or damaged.
- Fasten the towing cable or chain securely to the hook.
- Do not jerk the hook. Apply steady and even force.
- To avoid damaging the hook, do not pull from the side or at a vertical angle. Always pull straight ahead.

## **WARNING**

Use extreme caution when towing the vehicle.

- Avoid sudden starts or erratic driving maneuvers which would place excessive stress on the emergency towing hook and towing cable or chain. The hook and towing cable or chain may break and cause serious injury or damage.
- If the disabled vehicle is unable to be moved, do not forcibly continue the towing. Contact an authorized HYUNDAI dealer or a commercial tow truck service for assistance.
- Tow the vehicle as straight ahead as possible.
- Keep away from the vehicle during towing.

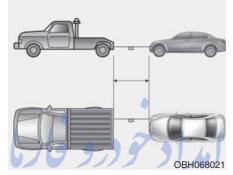

- Use a towing strap less than 5 m (16 feet) long. Attach a white or red cloth (about 30 cm (12 inches) wide) in the middle of the strap for easy visibility.
- Drive carefully so that the towing strap is not loosened during towing.

FarmaSOS.com

#### F080301ABH

#### Emergency towing precautions

- Place the ignition switch in ACC so the steering wheel isn't locked.
- Place the transmission shift lever in N (Neutral).
- Release the parking brake.
- Press the brake pedal with more force than normal since you will have reduced brake performance.
- More steering effort will be required because the power steering system will be disabled.
- If you are driving down a long hill, the brakes may overheat and brake performance will be reduced. Stop often and let the brakes cool off.

# ⚠ CAUTION - Automatic transmission

- If the car is being towed with all four wheels on the ground, it can be towed only from the front. Be sure that the transmission is in neutral. Be sure the steering is unlocked by placing the ignition switch in the ACC position. A driver must be in the towed vehicle to operate the steering and brakes.
- To avoid serious damage to the automatic transmission, limit the vehicle speed to 15 km/h (10 mph) and drive less than 1.5 km (1 mile) when towing.
- Before towing, check the automatic transmission fluid leak under your vehicle. If the automatic transmission fluid is leaking, a flatbed equipment or towing dolly must be used.



تلفن شبائه روزی: ۱۳۰۵ کا ۱۸۸۰ ۲۲۸ تلفن شبائه

FarmaSOS.com

## **EMERGENCY COMMODITY (IF EQUIPPED)**

F110000AUN

There are some emergency commodities in the vehicle to help you respond to the emergency situation.

#### F110100AUN

#### Fire extinguisher

If there is small fire and you know how to use the fire extinguisher, take the following steps carefully.

- Pull the pin at the top of the extinguisher that keeps the handle from being accidentally pressed.
- 2. Aim the nozzle toward the base of the fire.
- Stand approximately 2.5 m (8 ft) away from the fire and squeeze the handle to discharge the extinguisher. If you release the handle, the discharge will stop.
- Sweep the nozzle back and forth at the base of the fire. After the fire appears to be out, watch it carefully since it may re-ignite.

F110200AUN

#### First aid kit

There are some items such as scissors, bandage and adhesive tape and etc. in the kit to give first aid to an injured person.

F110300AUN

### Triangle reflector

Place the triangle reflector on the road to warn oncoming vehicles during emergencies, such as when the vehicle is parked by the roadside due to any problems.



# Tire pressure gauge (If equipped)

Tires normally lose some air in day-today use, and you may have to add a few pounds of air periodically and it is not usually a sign of a leaking tire, but of normal wear. Always check tire pressure when the tires are cold because tire pressure increases with temperature. To check the tire pressure, take the following steps;

- 1. Unscrew the inflation valve cap that is located on the rim of the tire.
- Press and hold the gauge against the tire valve. Some air will escape as you begin and more will escape if you don't press the gauge in firmly.
- 3. A firm non-leaking push will activate the gauge.
- Read the tire pressure on the gauge to know whether the tire pressure is low or high.
- Adjust the tire pressures to the specified pressure. Refer to "Tires and wheels" in section 8.
- 6. Reinstall the inflation valve cap.


Owner maintenance / 7-5
Scheduled maintenance service / 7-7
Explanation of scheduled maintenance items / 7-14
Engine oil / 7-17
Engine coolant / 7-18
Brakes fluid / 7-21
Power steering fluid / 7-22
Washer fluid / 7-23
Foot parking brake / 7-23
Air cleaner / 7-24
Climate control air filter / 7-25
Wiper blades / 7-27
Battery / 7-30
Tires and wheels / 7-33
Fuses / 7-43

Maintenance

Light bulbs / 7-54 Appearance care / 7-60 Emission control system / 7-66

**Engine compartment / 7-2 Maintenance services / 7-4** 

#### **ENGINE COMPARTMENT**

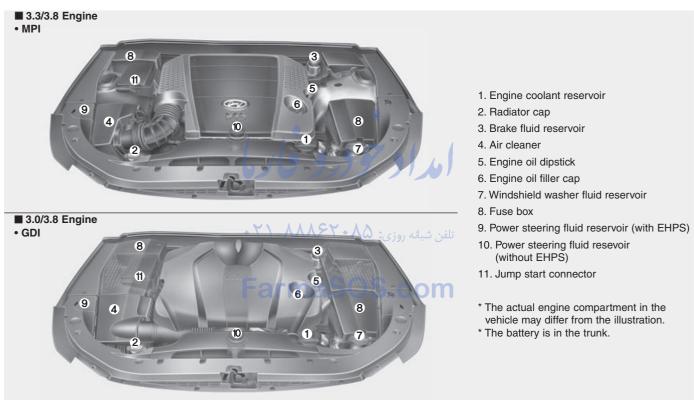

OBH018003L/OBH012101L

#### ■ 4.6 Engine

• MPI



- 1. Engine coolant reservoir
- 2. Radiator cap
- 3. Brake fluid reservoir
- 4. Air cleaner
- 5. Engine oil dipstick
- 6. Engine oil filler cap
- 7. Windshield washer fluid reservoir
- 8. Fuse box
- 9. Power steering fluid reservoir
- 10. Jump start connector
- \* The actual engine compartment in the vehicle may differ from the illustration.
- \* The battery is in the trunk.

OBH018005N

#### MAINTENANCE SERVICES

G020000AEN

You should exercise the utmost care to prevent damage to your vehicle and injury to yourself whenever performing any maintenance or inspection procedures.

Should you have any doubts concerning the inspection or servicing of your vehicle, we strongly recommend that you have an authorized HYUNDAI dealer perform this work.

An authorized HYUNDAI dealer has factory-trained technicians and genuine HYUNDAI parts to service your vehicle properly. For expert advice and quality service, see an authorized HYUNDAI dealer.

Inadequate, incomplete or insufficient servicing may result in operational problems with your vehicle that could lead to vehicle damage, an accident, or personal injury.

G020100AEN

## Owner's responsibility

#### \* NOTICE

Maintenance Service and Record Retention are the owner's responsibility.

You should retain documents that show proper maintenance has been performed on your vehicle in accordance with the scheduled maintenance service charts shown on the following pages. You need this information to establish your compliance with the servicing and maintenance requirements of your vehicle warranties. Detailed warranty information is provided in your Service Passport. تلفن شبانه روزی Repairs and adjustments required as a result of improper maintenance or a lack of required maintenance are not covered. We recommend you have your vehicle maintained and repaired by an authorized HYUNDAI dealer. An authorized HYUNDAI dealer meets HYUNDAI's high service quality standards and receives technical support from HYUNDAI in order to provide you with a high level of service satisfaction.

G020200AEN

#### Owner maintenance precautions

Improper or incomplete service may result in problems. This section gives instructions only for the maintenance items that are easy to perform.

As explained earlier in this section, several procedures can be done only by an authorized HYUNDAI dealer with special tools.

#### \* NOTICE

Improper owner maintenance during the warranty period may affect warranty coverage. For details, read the separate Service Passport provided with the vehicle. If you're unsure about any servicing or maintenance procedure, have it done by an authorized HYUNDAI dealer.

# WARNING - Maintenance work

- Performing maintenance work on a vehicle can be dangerous. You can be seriously injured while performing some maintenance procedures. If you lack sufficient knowledge and experience or the proper tools and equipment to do the work, have it done by an authorized HYUNDAI dealer.
- Working under the hood with the engine running is dangerous. It becomes even more dangerous when you wear jewelry or loose clothing. These can become entangled in moving parts and result in injury. Therefore, if you must run the engine while working under the hood, make certain that you remove all jewelry (especially rings, bracelets, watches, and necklaces) and all neckties, scarves, and similar loose clothing before getting near the engine or cooling fans.

#### **OWNER MAINTENANCE**

G030000AEN

The following lists are vehicle checks and inspections that should be performed by the owner or an authorized HYUNDAI dealer at the frequencies indicated to help ensure safe, dependable operation of your vehicle.

Any adverse conditions should be brought to the attention of your dealer as soon as possible.

These Owner Maintenance Checks are generally not covered by warranties and you may be charged for labor, parts and lubricants used.

تلفن شبانه روزی: ۱۳۸۰ ۲۹۸۸۸–۲۲

FarmaSOS.com

#### Owner maintenance schedule

G030101AUN

When you stop for fuel:

- Check the engine oil level.
- Check coolant level in coolant reservoir
- Check the windshield washer fluid level.
- · Look for low or under-inflated tires.

## **WARNING**

Be careful when checking your engine coolant level when the engine is hot. Scalding hot coolant and steam may blow out under pressure. This could cause burns or other serious injury.

#### G030102ABH

#### While operating your vehicle:

- Note any changes in the sound of the exhaust or any smell of exhaust fumes in the vehicle.
- Check for vibrations in the steering wheel. Notice any increased steering effort or looseness in the steering wheel, or change in its straight-ahead position.
- Notice if your vehicle constantly turns slightly or "pulls" to one side when traveling on smooth, level road.
- When stopping, listen and check for unusual sounds, pulling to one side, increased brake pedal travel or "hardto-push" brake pedal.
- If any slipping or changes in the operation of your transmission occurs, check the transmission fluid level.
- Check automatic transmission P (Park) function.
- Check parking brake.
- Check for fluid leaks under your vehicle (water dripping from the air conditioning system during or after use is normal).

#### G030103AUN

#### At least monthly:

- Check coolant level in the engine coolant reservoir.
- Check the operation of all exterior lights, including the stoplights, turn signals and hazard warning flashers.
- Check the inflation pressures of all tires including the spare.





FarmaSOS.com

#### G030104AUN

### At least twice a year

(i.e., every Spring and Fall):

- Check radiator, heater and air conditioning hoses for leaks or damage.
- Check windshield washer spray and wiper operation. Clean wiper blades with clean cloth dampened with washer fluid.
- Check headlight alignment.
- Check muffler, exhaust pipes, shields and clamps.
- Check the lap/shoulder belts for wear and function.
- Check for worn tires and loose wheel lug nuts.

#### G030105ABH-EU

### At least once a year:

- · Clean body and door drain holes.
- Lubricate door hinges and checks, and hood hinges.
- Lubricate door and hood locks and latches.
- Lubricate door rubber weatherstrips.
- Check the air conditioning system.
- Check the power steering fluid level.
- Inspect and lubricate automatic transmission linkage and controls.
- · Clean battery and terminals.
- · Check the brake fluid level.

## SCHEDULED MAINTENANCE SERVICE

#### G040000AUN

Follow Normal Maintenance Schedule if the vehicle is usually operated where none of the following conditions apply. If any of the following conditions apply, follow Maintenance Under Severe Usage Conditions.

- Repeated short distance driving.
- Driving in dusty conditions or sandy areas.
- Extensive use of brakes.
- Driving in areas where salt or other corrosive materials are being used.
- Driving on rough or muddy roads.
- · Driving in mountainous areas.
- Extended periods of idling or low speed operation.
- Driving for a prolonged period in cold temperatures and/or extremely humid climates.
- More than 50% driving in heavy city traffic during hot weather above 32°C (90°F).

If your vehicle is operated under the above conditions, you should inspect, replace or refill more frequently than the following Normal Maintenance Schedule. After 96 months or 120,000 km (80,000 miles) continue to follow the prescribed maintenance intervals.

#### G040100BBH

## NORMAL MAINTENANCE SCHEDULE

MAINTENANCE	Numb	Number of months or driving distance, whichever comes first							
INTERVALS	Months	12	24	36	48	60	72	84	96
MAINTENANCE	Miles×1,000	10	20	30	40	50	60	70	80
ITEM	Km×1,000	15	30	45	60	75	90	105	120
Drive belts *1	For Europe						I		I
Drive beits	Except Europe		I		I		I		
Engine oil and	For Middle East	For Middle East Replace every 10,000 km or 12 months *3							
engine oil filter *2	Except Middle East	R	R	R	R	R	R	R	R
Add fuel additives *4	For Europe	Every 15,000 km or 12 months							
Add fuel additives	Except Europe	Every 5,000 km or 6 months							

I : Inspect and if necessary, adjust, correct, clean or replace.

R : Replace or change.

تلفن شانه روزی: ۱۹۸۸۶۲۰۸۵ تلفن شانه روزی:

<sup>\*1 :</sup> Inspect and if necessary correct or replace.

<sup>\*2 :</sup> Check the engine oil level and leak every 500 km (350 miles) or before starting a long trip.

<sup>\*3 :</sup> Driving in summer season temperature over 40°C (104°F - SAUDI, UAE, OMAN, KUWAIT, BAHRAIN, QATAR, IRAN, YEMEN ETC) or driving over 170 km/h (106 mile/h) must conform the severe driving condition.

<sup>\*4:</sup> If good quality gasolines meet Europe Fuel standards (EN228) or equivalents including fuel additives is not available, one bottle of additive is recommended. Additives are available from your authorized HYUNDAI dealer along with information on how to use them. Do not mix other additives.

## NORMAL MAINTENANCE SCHEDULE (CONT.)

MAINTENANCE	Number of months or driving distance, whichever comes first								
INTERVALS	Months	12	24	36	48	60	72	84	96
MAINTENANCE	Miles×1,000	10	20	30	40	50	60	70	80
ITEM	Km×1,000	15	30	45	60	75	90	105	120
Air cleaner filter	For Middle East, India	R	R	R	R	R	R	R	R
	Except Middle East, India	I	\ \frac{1}{2}	R	1 1	I	R	I	I
Spark plugs		Replace every 165,000 km (110,000 miles) or 120 months *5							
Valve clearance (3.0L/3.3L/3.8L) *5 *6					-		I		
Vapor hose and fuel filler cap		I	I	I	ı	I	I	I	I
Fuel tank air filter		I	I	R	I	I	R	I	I
Vacuum hose		人人をイ	· AA		:1: I	I	I	I	I
Fuel filter				(6)	R				R
Fuel lines, hoses and connections		I	I	I	I	I	I	I	I
Cooling system Farr		Insp				and leal			belt

I : Inspect and if necessary, adjust, correct, clean or replace.

R : Replace or change.

<sup>\*5 :</sup> For your convenience, it can be replaced prior to it's interval when you do maintenance of other items.

<sup>\*6:</sup> Inspect for excessive valve noise and/or engine vibration and adjust if necessary. An authorized HYUNDAI dealer should perform the operation.

## NORMAL MAINTENANCE SCHEDULE (CONT.)

MAINTENANCE		3 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 -										
INTERVALS	Months	12	24	36	48	60	72	84	96			
MAINTENANCE	Miles×1,000	10	20	30	40	50	60	70	80			
ITEM	Km×1,000	15	30	45	60	75	90	105	120			
Engine coolant *7	For Europe					•	•	r 10 years r 24 mont				
Engine coolant	Except Europe	At first, replace every 200,000 km (120,000 miles) or 10 years:  after that, replace every 40,000 km (25,000 miles) or 24 months*8										
Battery condition		I	I	I	I	_	I	I	I			
All electrical systems			I		I		I		I			
Brake lines, hoses and connections	+ ۲ ۱ -	$\Lambda\Lambda\Lambda$	· A人· 1	cia, all. à	. il	Ι	I	I	I			
Brake pedal			I	2777	I		I		I			
Parking brake			I		1		I		I			
Brake fluid	Far	·mas	$S \cap S$	dol	m I	I	I	I	I			
Disc brakes and pads	1 011		)  -		I	_	I	I	I			
Power steering fluid and hoses		I	I	I	I	I	I	I	I			
EHPS motor pump and hoses (if equipped)		Inspect every 20,000 km (12,000 miles)										

I : Inspect and if necessary, adjust, correct, clean or replace.

R: Replace or change.

<sup>\*7:</sup> When adding coolant, use only deionized water or soft water for your vehicle and never mix hard water in the coolant filled at the factory. An improper coolant mixture can result in serious malfunction or engine damage.

<sup>\*8 :</sup> For your convenience, it can be replaced prior to it's interval when you do maintenance of other items.

## NORMAL MAINTENANCE SCHEDULE (CONT.)

MAINTENANCE	umber of	umber of months or driving distance, whichever comes first								
INTERVALS	Months	12	24	36	48	60	72	84	96	
MAINTENANCE	Miles×1,000	10	20	30	40	50	60	70	80	
	Km×1,000	15	30	45	60	75	90	105	120	
Steering gear rack, linkage and boots		, I	I 🖣	I	I	Ι	1	I	I	
Driveshaft and boots	1				, I		I		I	
Tire (pressure & tread wear)		a 1 a	4 12		. 1	I	I	I	I	
Front suspension ball joints		7 //	111	ノノ	/ I	I	I	I	I	
Bolt and nuts on chassis and body		I	I	- 1	I	I	I	I	I	
Air conditioner refrigerant (if equipped)		I	I	I	I	I	I	I	I	
Air conditioner compressor (if equipped)		$\lambda\lambda\lambda$	۲ + A۵ :	شانه روزې	ا تلف	I	I	I	I	
Climate control air filter (if equipped)		R	R	R	R	R	R	R	R	
Rear differential oil *9					I				I	
Propeller shaft	Far	ma	SOS	.COI	m ı		I		I	
Automatic transmission fluid *10		No check, No service required								

I : Inspect and if necessary, adjust, correct, clean or replace.

R : Replace or change.

<sup>\*9 :</sup> Rear differential oil should be changed anytime they have been submerged in water.

<sup>\*10:</sup> Use only the specified automatic transmission fluid. (Refer to "Recommended lubricants and capacities" in section 8 or the label in the engine room.)

#### G040200BBH-EE

## MAINTENANCE UNDER SEVERE USAGE CONDITIONS

The following items must be serviced more frequently on cars mainly used under severe driving conditions. Refer to the chart below for the appropriate maintenance intervals.

R: Replace I: Inspect and if necessary, adjust, correct, clean or replace

Maintenance item		Maintenance operation	Maintenance intervals	Driving condition	
Engine oil and	For Middle East	R	Every 5,000 km or 6 months	A, B, C, D, E,	
engine oil filter	Except Middle East	9 8 3 9	Every 7,500 km (5,000 miles) or 6 months	F, G, H, I, J, K	
Air cleaner filter			Inspect more frequently depending on the condition	C, E	
Spark plugs		R	Replace more frequently depending on the condition	A, B, H, I	
Steering gear rack, linkage and boots		1	Inspect more frequently depending on the condition	C, D, E, F, G	
Automatic transmission fluid	For Europe	R	Every 90,000 km	A, C, D, E, F, G, H, I	
Except Europe		rm#SO	Every 100,000 km	A, C, D, E, F, G, H, I	
Front suspension ball joints		I	Inspect more frequently depending on the condition	C, D, E, F, G	
Disc brakes and pads, calipers and rotors		I	Inspect more frequently depending on the condition	C, D, E, G, H	

MAINTENANCE ITEM	Maintenance operation	Maintenance intervals	Driving condition
Parking brake	ı	Inspect more frequently depending on the condition	C, D, G, H
Driveshaft and boots	ı	Inspect more frequently  depending on the condition	C, D, E, F
Rear differential oil	R	Every 120,000 km (80,000 miles)	C, E, G, I, J
Propeller shaft	יל פוני	Every 15,000 km (10,000 miles) or 12 months	C, E
Climate control air filter (if equipped)	R Y\_\\\\\$\	Replace more frequently depending on the condition	C, E

## Severe driving conditions

- A : Repeatedly driving short distance of less than 8 km (5 miles) in normal temperature or less than 16 km (10 miles) in freezing temperature
- B : Extensive engine idling or low speed driving for long distances
- C : Driving on rough, dusty, muddy, unpaved, graveled or saltspread roads
- D : Driving in areas using salt or other corrosive materials or in very cold weather
- E: Driving in sandy areas

- F: More than 50 % driving in heavy city traffic during hot weather above 32°C (90°F)
- G: Driving on uphill, downhill, or mountain roads
- H: Towing a trailer (if equipped)
- 1 : Driving for patrol car, taxi, commercial car or vehicle towing
- J: Driving over 170 km/h (106 mile/h)
- K: Frequently driving in stop-and-go conditions

## **EXPLANATION OF SCHEDULED MAINTENANCE ITEMS**

G050100AUN

## Engine oil and filter

The engine oil and filter should be changed at the intervals specified in the maintenance schedule. If the car is being driven in severe conditions, more frequent oil and filter changes are required.

G050200AUN

#### **Drive belts**

Inspect all drive belts for evidence of cuts, cracks, excessive wear or oil saturation and replace if necessary.

G050300ABH

#### **Fuel filter**

A clogged filter can limit the speed at which the vehicle may be driven, damage the emission system and cause multiple issues such as hard starting. If an excessive amount of foreign matter accumulates in the fuel tank, the filter may require replacement more frequently.

After installing a new filter, run the engine for several minutes, and check for leaks at the connections. Fuel filters should be installed by an authorized HYUNDAI dealer.

G050400ABH

# Fuel lines, fuel hoses and connections

Check the fuel lines, fuel hoses and connections for leakage and damage. Have an authorized HYUNDAI dealer replace any damaged or leaking parts immediately.

G050600AUN

## Vapor hose and fuel filler cap

The vapor hose and fuel filler cap should be inspected at those intervals specified in the maintenance schedule. Make sure that a new vapor hose or fuel filler cap is correctly replaced.

FarmaSOS.com

G050700AUN

# Vacuum crankcase ventilation hoses (if equipped)

Inspect the surface of hoses for evidence of heat and/or mechanical damage. Hard and brittle rubber, cracking, tears, cuts, abrasions, and excessive swelling indicate deterioration. Particular attention should be paid to examine those hose surfaces nearest to high heat sources, such as the exhaust manifold.

Inspect the hose routing to assure that the hoses do not come in contact with any heat source, sharp edges or moving component which might cause heat damage or mechanical wear. Inspect all hose connections, such as clamps and couplings, to make sure they are secure, and that no leaks are present. Hoses should be replaced immediately if there is any evidence of deterioration or damage.

G050800AEN

#### Air cleaner filter

A Genuine HYUNDAI air cleaner filter is recommended when the filter is replaced.

G050900AUN

## Spark plugs

Make sure to install new spark plugs of the correct heat range.

G051000AEN

## Valve clearance (3.0L/3.3L/3.8L)

Inspect excessive valve noise and/or engine vibration and adjust if necessary. An authorized HYUNDAI dealer should perform the operation.

G051100AUN

## **Cooling system**

Check cooling system components, such as radiator, coolant reservoir, hoses and connections for leakage and damage. Replace any damaged parts.

G051200AUN

#### Coolant

The coolant should be changed at the intervals specified in the maintenance schedule.

## **Automatic transmission fluid**

Automatic transmission fluid should not be checked under normal usage conditions.

But in severe conditions, the fluid should be changed at an authorized HYUNDAI dealer in accordance to the scheduled maintenance at the beginning of this chapter.

# تلفن شبانه روزی: NOTICE \*NOTICE

Automatic transmission fluid color is basically red.

As the vehicle is driven, the automatic transmission fluid will begin to look darker.

It is normal condition and you should not judge the need to replace the fluid based upon the changed color.

## **A** CAUTION

The use of a non-specified fluid could result in transmission malfunction and failure.

Use only specified automatic transmission fluid. (Refer to "Recommended lubricants and capacities" in section 8.)

G051500AUN

## Brake hoses and lines

Visually check for proper installation, chafing, cracks, deterioration and any leakage. Replace any deteriorated or damaged parts immediately.

G051600AUN

#### **Brake fluid**

Check brake fluid level in the brake fluid reservoir. The level should be between "MIN" and "MAX" marks on the side of the reservoir. Use only hydraulic brake fluid conforming to DOT 3 or DOT 4 specification.

G051700AUN

## Parking brake

Inspect the parking brake system including the parking brake pedal and cables.

G051900AUN

## Brake discs, pads, calipers and rotors

Check the pads for excessive wear, discs for run out and wear, and calipers for fluid leakage.

For more information on checking the pads or lining wear limit, refer to the Hyundai web site.

(http://brakemanual.hmc.co.kr)

G052100AUN

## Suspension mounting bolts

G052200AUN

# Steering gear box, linkage & boots/lower arm ball joint

With the vehicle stopped and engine off, check for excessive free-play in the steering wheel.

Check the linkage for bends or damage. Check the dust boots and ball joints for deterioration, cracks, or damage. Replace any damaged parts.

G052300AEN

## Power steering pump, belt and hoses

Check the power steering pump and hoses for leakage and damage. Replace any damaged or leaking parts immediately. Inspect the power steering belt (or drive belt) for evidence of cuts, cracks, excessive wear, oiliness and proper tension. Replace or adjust it if necessary.

G052400AUN

## **Drive shafts and boots**


Check the drive shafts, boots and clamps for cracks, deterioration, or damage. Replace any damaged parts and, if necessary, repack the grease.

G052500AUN

# Air conditioning refrigerant (if equipped)

Check the air conditioning lines and connections for leakage and damage.

### **ENGINE OIL**

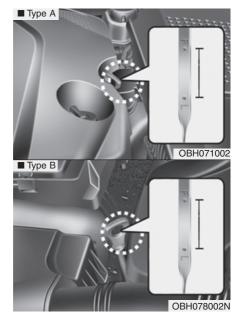

G060100AEN

## Checking the engine oil level

- 1. Be sure the vehicle is on level ground.
- 2. Start the engine and allow it to reach normal operating temperature.
- Turn the engine off and wait for a few minutes (about 5 minutes) for the oil to return to the oil pan.

4. Pull the dipstick out, wipe it clean, and re-insert it fully.


WARNING - Radiator hose Be very careful not to touch the radiator hose when checking or adding the engine oil as it may be hot enough to burn you.

Pull the dipstick out again and check the level. The level should be between F and L.

## **A** CAUTION

- Do not overfill with engine oil.

  Engine damage may result.
- Do not spill engine oil, when adding or changing engine oil. If you drop the engine oil on the engine room, wipe it off immediately.

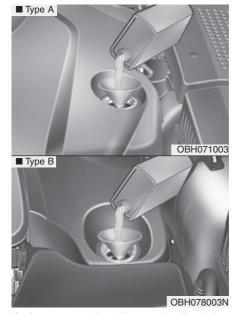

If it is near or at L, add enough oil to bring the level to F. **Do not overfill.** 

Use a funnel to help prevent oil from being spilled on engine components.

Use only the specified engine oil. (Refer to "Recommended lubricants and capacities" in section 8.)



G060200AFN

## Changing the engine oil and filter

Have engine oil and filter changed by an authorized HYUNDAI dealer according to the Maintenance Schedule at the beginning of this section.

## **WARNING**

Used engine oil may cause irritation or cancer of the skin if left in contact with the skin for prolonged periods of time. Used engine oil contains chemicals that have caused cancer in laboratory animals. Always protect your skin by washing your hands thoroughly with soap and warm water as soon as possible after handling used oil.

### **ENGINE COOLANT**

G070000AUN

The high-pressure cooling system has a reservoir filled with year-round antifreeze coolant. The reservoir is filled at the factory.

Check the antifreeze protection and coolant level at least once a year, at the beginning of the winter season, and before traveling to a colder climate.



تلفن شانه روزی: ۵۸۰۲۹۸۸ – ۲۱

FarmaSOS.com

G070100AFN

## Checking the coolant level

## **A** WARNING



Removing radiator cap

- Never attempt to remove the radiator cap while the engine is operating or hot. Doing so might lead to cooling system and engine damage and could result in serious personal injury from escaping hot coolant or steam.
- Turn the engine off and wait until it cools down. Use extreme care when removing the radiator cap. Wrap a thick towel around it, and turn it counterclockwise slowly to the first stop. Step back while the pressure is released from the cooling system. When you are sure all the pressure has been released, press down on the cap. using a thick towel, and continue turning counterclockwise to remove it.

(Continued)

## (Continued)


Even if the engine is not operating, do not remove the radiator cap or the drain plug while the engine and radiator are hot. Hot coolant and steam may still blow out under pressure, causing serious injury.

## **WARNING**



The electric motor (cooling fan) is controlled by engine coolant temperature, refrigerant pressure and vehicle speed.

It may sometimes operate even when the engine is not running. Use extreme caution when working near the blades of the cooling fan so that you are not injured by a rotating fan blades. As the engine coolant temperature decreases, the electric motor will automatically shut off. This is a normal condition. If your vehicle is equipped with GDI, the electric motor (cooling fan) may operate until you disconnect the negative battery cable.

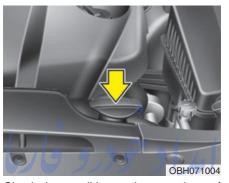

Check the condition and connections of all cooling system hoses and heater hoses. Replace any swollen or deteriorated hoses.



The coolant level should be filled between F and L marks on the side of the coolant reservoir when the engine is cool.

If the coolant level is low, add enough distilled (deionized) water. Bring the level to F, but do not overfill. If frequent additions are required, see an authorized HYUNDAI dealer for a cooling system inspection.


#### G070101AUN

## Recommended engine coolant

- When adding coolant, use only deionized water or soft water for your vehicle and never mix hard water in the coolant filled at the factory. An improper coolant mixture can result in serious malfunction or engine damage.
- The engine in your vehicle has aluminum engine parts and must be protected by an ethylene-glycol-based coolant to prevent corrosion and freezing.
- DO NOT USE alcohol or methanol coolant or mix them with the specified coolant.
- Do not use a solution that contains more than 60% antifreeze or less than 35% antifreeze, which would reduce the effectiveness of the solution.

For mixture percentage, refer to the following table.

Ambient Temperature	Mixture Percentage (volume)						
remperature	Antifreeze	Water					
-15°C (5°F)	35	65					
-25°C (-13°F)	40	60					
-35°C (-31°F)	50	50					
-45°C (-49°F)	60	40					

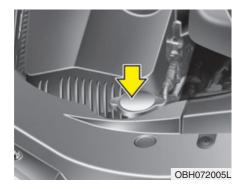





Radiator cap

Do not remove the radiator cap when the engine and radiator are hot. Scalding hot coolant and steam may blow out under pressure causing serious injury.

G070200AFN

## Changing the coolant

Have coolant changed by an authorized HYUNDAI dealer according to the Maintenance Schedule at the beginning of this section.

## **⚠** CAUTION




Put a thick cloth around the radiator cap before refilling the coolant in order to prevent the coolant from overflowing into engine parts such as the generator.

## A WARNING - Coolant

- Do not use radiator coolant or antifreeze in the washer fluid reservoir.
- Radiator coolant can severely obscure visibility when sprayed on the windshield and may cause loss of vehicle control or damage to paint and body trim.

### **BRAKE FLUID**

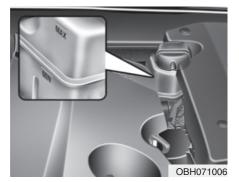

G080100AEN

## Checking the brake fluid level

Check the fluid level in the reservoir periodically. The fluid level should be between MAX and MIN marks on the side of the reservoir.

Before removing the reservoir cap and adding brake fluid, clean the area around the reservoir cap thoroughly to prevent brake fluid contamination.

If the level is low, add fluid to the MAX level. The level will fall with accumulated mileage. This is a normal condition associated with the wear of the brake linings. If the fluid level is excessively low, have the brake system checked by an authorized HYUNDAI dealer.

Use only the specified brake fluid. (Refer to "Recommended lubricants or capacities" in section 8.)

Never mix different types of fluid.

# A WARNING - Loss of brake fluid

In the event the brake system requires frequent additions of fluid, the vehicle should be inspected by an authorized HYUNDAI dealer.


## **WARNING** - Brake fluid

When changing and adding brake fluid, handle it carefully. Do not let it come in contact with your eyes. If brake fluid should come in contact with your eyes, immediately flush them with a large quantity of fresh tap water. Have your eyes examined by a doctor as soon as possible.

## **A** CAUTION

Do not allow brake fluid to contact the vehicle's body paint, as paint damage will result. Brake fluid, which has been exposed to open air for an extended time should never be used as its quality cannot be guaranteed. It should be disposed of properly. Don't put in the wrong kind of fluid. A few drops of mineral-based oil, such as engine oil, in your brake system can damage brake system parts.

## **POWER STEERING FLUID**

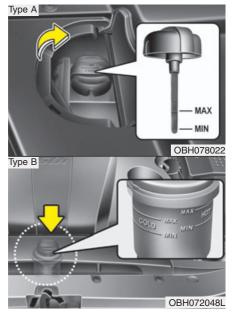

G090100ABH

## Checking the power steering fluid level

With the vehicle on level ground, check the fluid level in the power steering reservoir periodically. The fluid should be between MAX and MIN marks on the side of the gauge at the normal temperature. Before adding power steering fluid, thoroughly clean the area around the reservoir cap to prevent power steering fluid contamination.

If the level is low, add fluid to the MAX level.

## \* NOTICE - (if equipped)

Check that the fluid level is in the "HOT" range on the gauge. If the fluid is cold, check that it is in the "COLD" range (if equipped).

In the event the power steering system requires frequent addition of fluid, the vehicle should be inspected by an authorized HYUNDAI dealer.

FarmaSOS.com

## **A** CAUTION

- To avoid damage to the power steering pump, do not operate the vehicle for prolonged periods with a low power steering fluid level.
- Never start the engine when the reservoir tank is empty.
- When adding fluid, be careful that dirt does not get into the tank.
- Too little fluid can result in increased steering effort and/or noise from the power steering system.
- The use of the non-specified fluid could reduce the effectiveness of the power steering system and cause damage to it.

Use only the specified power steering fluid. (Refer to "Recommended lubricants or capacities" in section 8.)

G090200AEN

# Checking the power steering hose

Check the connections for oil leaks, damage and twists in the power steering hose before driving.

### **WASHER FLUID**



G120100AUN

## Checking the washer fluid level

The reservoir is translucent so that you can check the level with a quick visual inspection.

Check the fluid level in the washer fluid reservoir and add fluid if necessary. Plain water may be used if washer fluid is not available. However, use washer solvent with antifreeze characteristics in cold climates to prevent freezing.

## **WARNING - Coolant**

- Do not use radiator coolant or antifreeze in the washer fluid reservoir.
- Radiator coolant can severely obscure visibility when sprayed on the windshield and may cause loss of vehicle control or damage to paint and body trim.
- Windshield Washer fluid agents contain some amounts of alcohol and can be flammable under certain circumstances. Do not allow sparks or flame to contact the washer fluid or the washer fluid reservoir. Damage to the vehicle or occupants could occur.
- Windshield washer fluid is poisonous to humans and animals.
   Do not drink and avoid contacting windshield washer fluid. Serious injury or death could occur.

# FOOT PARKING BRAKE (IF EQUIPPED)




G140100ABH

## Checking the parking brake

Check whether the stroke is within specification when the parking brake pedal is depressed with 20 kg (44 lb, 196 N) of force. Also, the parking brake alone should securely hold the vehicle on a fairly steep grade. If the stroke is more or less than specified, have the parking brake adjusted by an authorized HYUNDAL Dealer.

Stroke: 3 notch


## **AIR CLEANER**

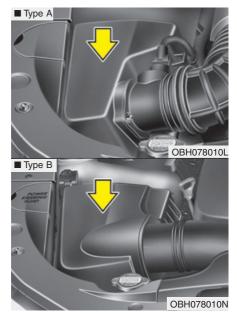

G160100ABH

## Filter replacement

It must be replaced when necessary, and should not be cleaned and reused.

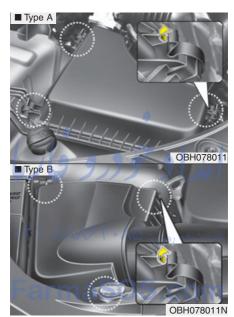

1. Loosen the air cleaner cover attaching clips and open the cover.



- 2. Replace the air cleaner filter.
- 3. Lock the cover with the cover attaching clips.

Replace the filter according to the Maintenance Schedule.

If the vehicle is operated in extremely dusty or sandy areas, replace the element more often than the usual recommended intervals. (Refer to "Maintenance under severe usage conditions" in this section.)

## **!** CAUTION


- Do not drive with the air cleaner removed; this will result in excessive engine wear.
- When removing the air cleaner filter, be careful that dust or dirt does not enter the air intake, or damage may result.
- Use a HYUNDAI genuine part. Use of non-genuine parts could damage the air flow sensor.

## **CLIMATE CONTROL AIR FILTER (IF EQUIPPED)**

G170100AFN

## Filter inspection

The climate control air filter should be replaced every 15,000 km (10,000 miles). If the vehicle is operated in severely air-polluted cities or on dusty rough roads for a long period, it should be inspected more frequently and replaced earlier. When you replace the climate control air filter, replace it performing the following procedure, and be careful to avoid damaging other components.

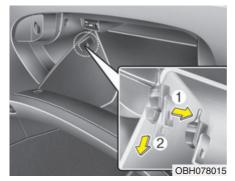


G170200ABH

## Filter replacement

1. With the glove box open, remove the stoppers on both sides to allow the glove box to hang freely on the hinges.

تلفن شبانه روزی: ۱-۸۸۸۶۲۰۸۵ تلفن شبانه روزی

FarmaSOS.com

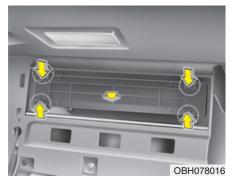

Remove the climate control air filter case pulling out both sides of the cover.




- 3. Replace the climate control air filter.

## \* NOTICE

When replacing the climate control air filter install it properly. Otherwise, the system may produce noise and the effectiveness of the filter may be reduced.

## **WIPER BLADES**

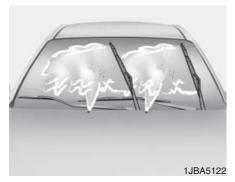

G180100AUN

## Blade inspection

## \* NOTICE

Commercial hot waxes applied by automatic car washes have been known to make the windshield difficult to clean.

Contamination of either the windshield or the wiper blades with foreign matter can reduce the effectiveness of the windshield wipers. Common sources of contamination are insects, tree sap, and hot wax treatments used by some commercial car washes. If the blades are not wiping properly, clean both the window and the blades with a good cleaner or mild detergent, and rinse thoroughly with clean water.

## **A** CAUTION

To prevent damage to the wiper blades, do not use gasoline, kerosene, paint thinner, or other solvents on or near them.

#### G180200AUN

## Blade replacement


When the wipers no longer clean adequately, the blades may be worn or cracked, and require replacement.

## **A** CAUTION

To prevent damage to the wiper arms or other components, do not attempt to move the wipers manually.

## 1 CAUTION US.CO

The use of a non-specified wiper blade could result in wiper malfunction and failure.

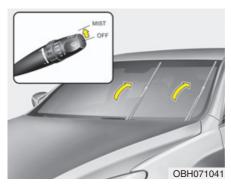


G180201ABH

## Front windshield wiper blade

For your convenience, move the windshield wiper blades to the service position as follows:

Remove the key from the ignition switch or turn off the engine.

Move the wiper switch to the single wiping (MIST/ $\wedge$ ) position within 20 seconds and hold the switch until the wiper blade is in the fully up position.

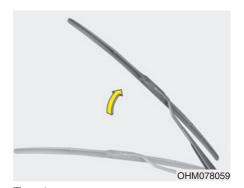


Type A

1. Raise the wiper arm.

## **!** CAUTION


Do not allow the wiper arm to fall against the windshield, since it may chip or crack the windshield.

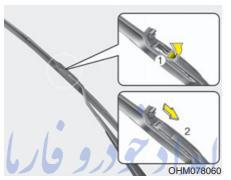


2. Open the cover of the blade. Press the clip behind the wiper arm and remove the blade assembly downward.

تلفن شبانه روزی: ۱۹۰۵ *۱۹۸۸* ۲۰۸۸ تلفن شبانه روزی: ۱۹۰۵ ۲۰۸۸ تلفن شبانه روزی:

FarmaSOS.com

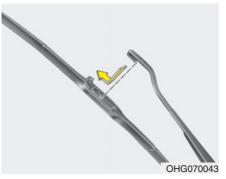


- 3. Install the new blade assembly in the reverse order of removal.
- 4. Return the wiper arm on the windshield.
- 5. Turn the ignition switch to the ON position.
- 6. Move the wiper switch to any position and then to the OFF position.

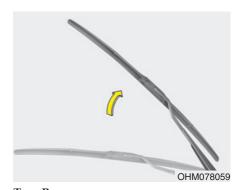

Type B
1. Raise the wiper arm.

## **A** CAUTION

Do not allow the wiper arm to fall against the windshield, since it may chip or crack the windshield.

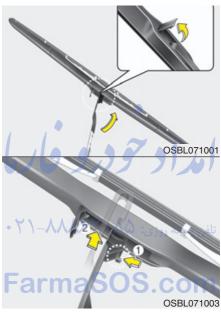

- 2. Turn the wiper blade clip. Then lift up the blade clip.
- 3. Push the clip (1) and push up the wiper arm (2).



- 4. Push down the wiper arm (3) and install the new blade assembly in the reverse order of removal.
- 5. Return the wiper arm on the windshield.

## **BATTERY**



G190100BBH

## For best battery service

The battery is in the trunk.

- Keep the battery securely mounted.
- Keep the battery top clean and dry.
- Keep the terminals and connections clean, tight, and coated with petroleum jelly or terminal grease.
- Rinse any spilled electrolyte from the battery immediately with a solution of water and baking soda.

# WARNING - Battery dangers



Always read the following instructions carefully when handling a battery.



Keep lighted cigarettes and all other flames or sparks away from the battery.



Hydrogen, a highly combustible gas, is always present in battery cells and may explode if ignited.



Keep batteries out of the reach of children because batteries contain highly corrosive SULFURIC ACID. Do not allow battery acid to contact your skin, eyes, clothing or paint finish.



If any electrolyte gets into your eyes, flush your eyes with clean water for at least 15 minutes and get immediate medical attention. If electrolyte gets on your skin, thoroughly wash the contacted area.

(Continued)

## (Continued)

If you feel a pain or a burning sensation, get medical attention immediately.



Wear eye protection when charging or working near a battery. Always provide ventilation when working in an enclosed space.



An inappropriately disposed battery can be harmful to the environment and human health. Dispose the battery according to your local law(s) or regulation.

- When lifting a plastic-cased battery, excessive pressure on the case may cause battery acid to leak, resulting in personal injury. Lift with a battery carrier or with your hands on opposite corners.
- Never attempt to recharge the battery when the battery cables are connected.
- The electrical ignition system works with high voltage. Never touch these components with the engine running or the ignition switched on.

(Continued)

## (Continued)

Failure to follow the above warnings can result in serious bodily injury or death.

## **A** CAUTION


 When you don't use the vehicle for a long time in the low temperature area, separate the battery and keep it indoors.

The power trunk is not closed completely when the battery is separated. When you separate the battery from the vehicle, refer to "Power trunk" in section 4.

- Always charge the battery fully to prevent the battery case damaged in low temperature area.
- If you connect unauthorized electronic devices to the battery, the battery may be discharged. Never use unauthorized devices.

## **A** WARNING

Separating the battery from the vehicle should be done in an authorized HYUNDAI dealer.

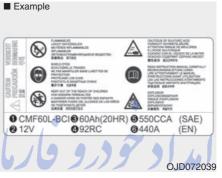

\*\* The actual battery label in the vehicle may differ from the illustration.

## تلفن شبانه روزی Battery capacity label

- CMF65L-BCI : The HYUNDAI model name of battery
- 2. 12V: The nominal voltage
- 3. 60Ah(20HR) : The nominal capacity (in Ampere hours)
- 4. 92RC : The nominal reserve capacity (in min.)
- 5. 550CCA: The cold-test current in amperes by SAE
- 6. 440A: The cold-test current in amperes by EN

G190200AUN

## **Battery recharging**

Your vehicle has a maintenance-free, calcium-based battery.

- If the battery becomes discharged in a short time (because, for example, the headlights or interior lights were left on while the vehicle was not in use), recharge it by slow charging (trickle) for 10 hours.
- If the battery gradually discharges because of high electric load while the vehicle is being used, recharge it at 20-30A for two hours.

# WARNING - Recharging battery

When recharging the battery, observe the following precautions:

- The battery must be removed from the vehicle and placed in an area with good ventilation.
- Do not allow cigarettes, sparks, or flame near the battery.
- Watch the battery during charging, and stop or reduce the charging rate if the battery cells begin gassing (boiling) violently or if the temperature of the electrolyte of any cell exceeds 49°C (120°F).
- Wear eye protection when checking the battery during charging.
- Disconnect the battery charger in the following order.
- 1. Turn off the battery charger main switch.
- 2. Unhook the negative clamp from the negative battery terminal.
- 3. Unhook the positive clamp from the positive battery terminal.

## **WARNING**

- Before performing maintenance or recharging the battery, turn off all accessories and stop the engine.
- The negative battery cable must be removed first and installed last when the battery is disconnected.
- Operation related to the battery should be done in an authorized HYUNDAI dealer.

## **A** CAUTION

- Keep the battery away from water or any liquid.
- The battery is in the trunk, so you should be careful when you load a container filled with liquid into the trunk.
- For your safety, use the authenticity by approved authorized HYUNDAI dealer, when you replace the battery.

G190300ABH

#### Reset items

Items should be reset after the battery has been discharged or the battery has been disconnected.

- Power trunk (See section 4)
- Auto up/down window (See section 4)
- Sunroof (See section 4)
- Driver position memory system (See section 4)
- Trip computer (See section 4)
- Climate control system (See section 4)
- Clock (See section 4)
- Audio (See section 4)

### **TIRES AND WHEELS**

G200100AUN

#### Tire care

For proper maintenance, safety, and maximum fuel economy, you must always maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle.

#### G200200AEN

# Recommended cold tire inflation pressures

All tire pressures (including the spare) should be checked when the tires are cold. "Cold Tires" means the vehicle has not been driven for at least three hours or driven less than 1.6 km (one mile).

Recommended pressures must be maintained for the best ride, top vehicle handling, and minimum tire wear. For recommended inflation pressure, refer to "Tire and wheels" in section 8



All specifications (sizes and pressures) can be found on a label attached to the vehicle.

## WARNING - Tire underinflation

Severe underinflation can lead to severe heat build-up, causing blowouts, tread separation and other tire failures that can result in the loss of vehicle control leading to severe injury or death. This risk is much higher on hot days and when driving for long periods at high speeds.

## **A** CAUTION

- Underinflation also results in excessive wear, poor handling and reduced fuel economy. Wheel deformation also is possible. Keep your tire pressures at the proper levels. If a tire frequently needs refilling, have it checked by an authorized HYUNDAI dealer.
- Overinflation produces a harsh ride, excessive wear at the center of the tire tread, and a greater possibility of damage from road hazards.

## **A** CAUTION

- Warm tires normally exceed recommended cold tire pressures by 28 to 41 kPa (4 to 6 psi). Do not release air from warm tires to adjust the pressure or the tires will be underinflated.
- Be sure to reinstall the tire inflation valve caps. Without the valve cap, dirt or moisture could get into the valve core and cause air leakage. If a valve cap is missing, install a new one as soon as possible.

WARNING - Tire Inflation
Overinflation or underinflation
can reduce tire life, adversely
affect vehicle handling, and
lead to sudden tire failure. This
could result in loss of vehicle
control and potential injury.

# **!** CAUTION - Tire pressure Always observe the following:

- Check tire pressure when the tires are cold. (After vehicle has been parked for at least three hours or hasn't been driven more than 1.6 km (one mile) since startup.)
- Check the pressure of your spare tire each time you check the pressure of other tires.
- Never overload your vehicle. Be careful not to overload a vehicle luggage rack if your vehicle is equipped with one.
- Worn, old tires can cause accidents. If your tread is badly worn, or if your tires have been damaged, replace them.

G200300AUN

## Checking tire inflation pressure

Check your tires once a month or more.

Also, check the tire pressure of the spare tire.

G200301AEN

How to check

Use a good quality gage to check tire pressure. You can not tell if your tires are properly inflated simply by looking at them. Radial tires may look properly inflated even when they're underinflated.

Check the tire's inflation pressure when the tires are cold. - "Cold" means your vehicle has been sitting for at least three hours or driven no more than 1.6 km (1 mile).

Remove the valve cap from the tire valve stem. Press the tire gage firmly onto the valve to get a pressure measurement. If the cold tire inflation pressure matches the recommended pressure on the tire and loading information label, no further adjustment is necessary. If the pressure is low, add air until you reach the recommended amount.

If you overfill the tire, release air by pushing on the metal stem in the center of the tire valve. Recheck the tire pressure with the tire gage. Be sure to put the valve caps back on the valve stems. They help prevent leaks by keeping out dirt and moisture.

## **WARNING**

- Inspect your tires frequently for proper inflation as well as wear and damage. Always use a tire pressure gauge.
- Tires with too much or too little pressure wear unevenly causing poor handling, loss of vehicle control, and sudden tire failure leading to accidents, injuries, and even death. The recommended cold tire pressure for your vehicle can be found in this manual and on the tire label located on the driver's side center pillar.
- Worn tires can cause accidents. Replace tires that are worn, show uneven wear, or are damaged.
- Remember to check the pressure of your spare tire.
   HYUNDAI recommends that you check the spare every time you check the pressure of the other tires on your vehicle.


G200400ABH

#### Tire rotation

To equalize tread wear, it is recommended that the tires be rotated every 12,000 km (7,500 miles) or sooner if irregular wear develops.

During rotation, check the tires for correct balance.

When rotating tires, check for uneven wear and damage. Abnormal wear is usually caused by incorrect tire pressure, improper wheel alignment, out-of-balance wheels, severe braking or severe cornering. Look for bumps or bulges in the tread or side of tire. Replace the tire if you find either of these conditions. Replace the tire if fabric or cord is visible. After rotation, be sure to bring the front and rear tire pressures to specification and check lug nut tightness.

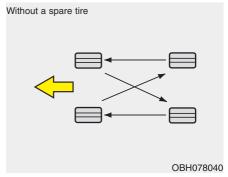

Disc brake pads should be inspected for wear whenever tires are rotated.

## \* NOTICE

Rotate radial tires that have an asymmetric tread pattern only from front to rear and not from right to left.

## **WARNING**

Do not mix bias ply and radial ply tires under any circumstances. This may cause unusual handling characteristics that could result in death, severe injury, or property damage.



تلفن شیانه روزی: ۱۲۱-۸۸۸۶۲۰۸۵ تلفن

FarmaSOS.com

G200500AUN

## Wheel alignment and tire balance

The wheels on your vehicle were aligned and balanced carefully at the factory to give you the longest tire life and best overall performance.

In most cases, you will not need to have your wheels aligned again. However, if you notice unusual tire wear or your vehicle pulling one way or the other, the alignment may need to be reset.

If you notice your vehicle vibrating when driving on a smooth road, your wheels may need to be rebalanced.

## **!** CAUTION

Improper wheel weights can damage your vehicle's aluwheels. Use minum only approved wheel weights.



G200600AEN

## Tire replacement

If the tire is worn evenly, a tread wear indicator will appear as a solid band across the tread. This shows there is less than 1.6 mm (1/16 inch) of tread left on the tire. Replace the tire when this happens.

Do not wait for the band to appear across the entire tread before replacing the tire.

# **WARNING** - Replacing tires

To reduce the chance or serious or fatal injuries from an accident caused by tire failure or loss of vehicle control:

- Replace tires that are worn, show uneven wear, or are damaged. Worn tires can cause loss of braking effectiveness, steering control, and traction.
- Do not drive your vehicle with too little or too much pressure in your tires. This can lead to uneven wear and tire failure.
- When replacing tires, never mix radial and bias-ply tires on the same car. You must replace all tires (including the spare) if moving from radial to bias-ply tires.

(Continued)

## (Continued)

- Using tires and wheel other than the recommended sizes could cause unusual handling characteristics and poor vehicle control, resulting in a serious accident.
- Wheels that do not meet HYUNDAI's specifications may fit poorly and result in damage to the vehicle or unusual handling and poor vehicle control.
- The ABS works by comparing the speed of the wheels. Tire size can affect wheel speed. When replacing tires, all 4 tires must use the same size originally supplied with the vehicle. Using tires of a different size can cause the ABS (Anti-lock Brake System) and ESP (Electronic Stability Program) to work irregularly.

G200700ABH

## Wheel replacement

When replacing the metal wheels for any reason, make sure the new wheels are equivalent to the original factory units in diameter, rim width and offset.

## **WARNING**

A wheel that is not the correct size may adversely affect wheel and bearing life, braking and stopping abilities, handling characteristics, ground clearance, body-to-tire clearance, snow chain clearance, speedometer and odometer calibration, headlight aim and bumper height.

G200800AUN

#### Tire traction

Tire traction can be reduced if you drive on worn tires, tires that are improperly inflated or on slippery road surfaces. Tires should be replaced when tread wear indicators appear. To reduce the possibility of losing control, slow down whenever there is rain, snow or ice on the road.



تلفن شبائه روزی: ۱۵۸۰۲۹۸۸۸–۲۲


FarmaSOS.com

G200900AUN

#### Tire maintenance

In addition to proper inflation, correct wheel alignment helps to decrease tire wear. If you find a tire is worn unevenly, have your dealer check the wheel alignment.

When you have new tires installed, make sure they are balanced. This will increase vehicle ride comfort and tire life. Additionally, a tire should always be rebalanced if it is removed from the wheel.

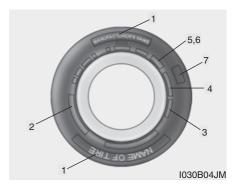

G201000AUN

## Tire sidewall labeling

This information identifies and describes the fundamental characteristics of the tire and also provides the tire identification number (TIN) for safety standard certification. The TIN can be used to identify the tire in case of a recall.

#### G201001AUN

1. Manufacturer or brand name
Manufacturer or Brand name is shown.

#### G201002ABH

## 2. Tire size designation

A tire's sidewall is marked with a tire size designation. You will need this information when selecting replacement tires for your car. The following explains what the letters and numbers in the tire size designation mean.

## Example tire size designation:

(These numbers are provided as an example only; your tire size designator could vary depending on your vehicle.)

## P235/45R19 95V

P - Applicable vehicle type (tires marked with the prefix "P" are intended for use on passenger cars or light trucks; however, not all tires have this marking).

235 - Tire width in millimeters.

- 45 Aspect ratio. The tire's section height as a percentage of its width.
- R Tire construction code (Radial).
- 19 Rim diameter in inches.

- 95 Load Index, a numerical code associated with the maximum load the tire can carry.
- V Speed Rating Symbol. See the speed rating chart in this section for additional information.

## Wheel size designation

Wheels are also marked with important information that you need if you ever have to replace one. The following explains what the letters and numbers in the wheel size designation mean.

Example wheel size designation:

## 8.0JX19

- 8.0 Rim width in inches.
- J Rim contour designation.
- 19 Rim diameter in inches.

## Tire speed ratings

The chart below lists many of the different speed ratings currently being used for passenger car tires. The speed rating is part of the tire size designation on the sidewall of the tire. This symbol corresponds to that tire's designed maximum safe operating speed.

Speed Rating Symbol	Maximum Speed
S	180 km/h (112 mph)
Т	190 km/h (118 mph)
Н	210 km/h (130 mph)
V	240 km/h (149 mph)
Z	Above 240 km/h (149 mph)

#### G201003AEN

## 3. Checking tire life (TIN : Tire Identification Number)

Any tires that are over 6 years old, based on the manufacturing date, (including the spare tire) should be replaced by new ones. You can find the manufacturing date on the tire sidewall (possibly on the inside of the wheel), displaying the DOT Code. The DOT Code is a series of numbers on a tire consisting of numbers and English letters. The manufacturing date is designated by the last four digits (characters) of the DOT code.

## تلفن شبانه (OOOO تلکن شبانه (DOT: XXXX XXXX OOOO

The front part of the DOT means a plant code number, tire size and tread pattern and the last four numbers indicate week and year manufactured.

## For example:

DOT XXXX XXXX 1612 represents that the tire was produced in the 16th week of 2012.

## **A** WARNING - Tire age

Tires degrade over time, even when they are not being used.

Regardless of the remaining tread, it is recommended that tires generally be replaced after six (6) years of normal service. Heat caused by hot climates or frequent high loading conditions can accelerate the aging process. Failure to follow this warning can result in sudden tire failure, which could lead to a loss of control and an accident involving serious injury or death.

#### G201004AEN

4. Tire ply composition and material

The number of layers or plies of rubber-coated fabric in the tire. Tire manufacturers also must indicate the materials in the tire, which include steel, nylon, polyester, and others. The letter "R" means radial ply construction; the letter "D" means diagonal or bias ply construction; and the letter "B" means belted-bias ply construction.

#### G201005AUN

5. Maximum permissible inflation pressure

This number is the greatest amount of air pressure that should be put in the tire. Do not exceed the maximum permissible inflation pressure. Refer to the Tire and Loading Information label for recommended inflation pressure.

#### G201006AUN

6. Maximum load rating

This number indicates the maximum load in kilograms and pounds that can be carried by the tire. When replacing the tires on the vehicle, always use a tire that has the same load rating as the factory installed tire.

## G2010007BEN

7. Uniform tire quality grading

Quality grades can be found where applicable on the tire sidewall between tread shoulder and maximum section width. ما تلفن شبك روزي:

## For example:

TREADWEAR 200

TRACTION AA
TEMPERATURE A

#### Tread wear

The tread wear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course. For example, a tire graded 150 would wear one-and-a-half times (1½) as well on the government course as a tire graded 100.

The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

These grades are molded on the side-walls of passenger vehicle tires. The tires available as standard or optional equipment on your vehicle may vary with respect to grade.

#### Traction - AA, A, B & C

The traction grades, from highest to lowest, are AA, A, B and C. Those grades represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance.

## **A WARNING**

The traction grade assigned to this tire is based on straightahead braking traction tests, and does not include acceleration, cornering, hydroplaning, or peak traction characteristics.

## Temperature -A, B & C

The temperature grades are A (the highest), B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel.


Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure. Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.

# **▲** WARNING - Tire temperature

The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat build-up and possible sudden tire failure. This can cause loss of vehicle control and serious injury or death.

FarmaSOS.com

## **FUSES**

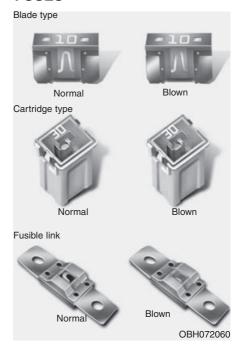

G210000ABH

A vehicle's electrical system is protected from electrical overload damage by fuses.

This vehicle has 4 fuse panels, one located in the driver's side panel bolster, another is in the front passenger's side panel bolster, the others are in the engine compartment.

If any of your vehicle's lights, accessories, or controls do not work, check the appropriate circuit fuse. If a fuse has blown, the element inside the fuse will be melted.

If the electrical system does not work, first check the driver's side fuse panel. Before replacing a blown fuse, disconnect the negative battery cable.

Always replace a blown fuse with one of the same rating.

If the replacement fuse blows, this indicates an electrical problem. Avoid using the system involved and immediately consult an authorized HYUNDAI dealer.

Three kinds of fuses are used: blade type for lower amperage rating, cartridge type, and fusible link for higher amperage ratings.

# **WARNING** - Fuse replace-

- Never replace a fuse with anything but another fuse of the same rating.
- A higher capacity fuse could cause damage and possibly a fire.
- Never install a wire or aluminum foil instead of the proper fuse even as a temporary repair. It may cause extensive wiring damage and a possible fire.

# **A** CAUTION


Do not use a screwdriver or any other metal object to remove fuses because it may cause a short circuit and damage the system.

# \* NOTICE

The actual fuse/relay panel label may differ from equipped items.

# **A** CAUTION

- When replacing a blown fuse or relay with a new one, make sure the new fuse or relay fits tightly into the clips. The incomplete fastening fuse or relay may cause the vehicle wiring and electric systems damage and a possible fire.
- Do not remove fuses, relays and terminals fastened with bolts or nuts. The fuses, relays and terminals may be fastened incompletely, and it may cause a possible fire. If fuses, relays and terminals fastened with bolts or nuts are blown, consult with an authorized HYUNDAI dealer.
- Do not input any other objects except fuses or relays into fuse/relay terminals such as a driver or wiring. It may cause contact failure and system malfunction.

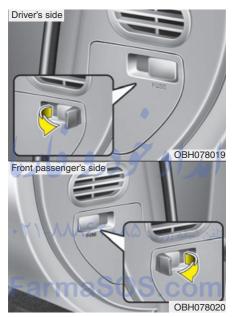

G210100ABH


# Instrument panel fuse replacement

- 1. Turn the ignition switch and all other switches off.
- 2. Open the fuse panel cover.



- 3. Pull the suspected fuse straight out. Use the removal tool provided in the front passenger's side panel.
- 4. Check the removed fuse; replace it if it is blown.
  - Spare fuses are provided in the passenger compartment panel fuse panel (or in the engine compartment fuse panel).
- Push in a new fuse of the same rating, and make sure it fits tightly in the clips.
   If it fits loosely, consult an authorized HYUNDAI dealer.

If you do not have a spare, use a fuse of the same rating from a circuit you may not need for operating the vehicle, such as the cigarette lighter fuse. If the headlights or other electrical components do not work and the fuses are OK, check the fuse panel in the engine compartment. If a fuse is blown, it must be replaced.

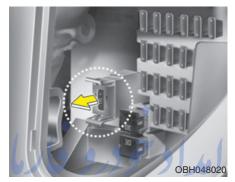

G210101AUN


Memory fuse

Your vehicle is equipped with a memory fuse to prevent battery discharge if your vehicle is parked without being operated for prolonged periods. Use the following procedures before parking the vehicle for prolonged periods.

- 1. Turn off the engine.
- 2. Turn off the headlights and tail lights.
- 3. Open the driver's side panel cover and pull up the memory fuse.

# \* NOTICE

- If the memory fuse is pulled up from the fuse panel, the warning chime, audio, clock and interior lamps, etc., will not operate. Some items must be reset after replacement. Refer to "Battery" in this section.
- Even though the memory fuse is pulled up, the battery can still be discharged by operation of the headlights or other electrical devices.

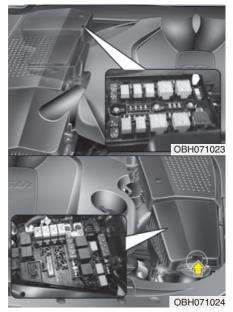

G210200AEN

# Engine compartment fuse replacement

- Turn the ignition switch and all other switches off.
- 2. Remove the fuse panel cover by pressing the tab and pulling up.


- Check the removed fuse; replace it if it is blown. To remove or insert the fuse, use the fuse puller in the front passenger's side panel.
- Push in a new fuse of the same rating, and make sure it fits tightly in the clips.
   If it fits loosely, consult an authorized HYUNDAI dealer.

# **A** CAUTION

After checking the fuse panel in the engine compartment, securely install the fuse panel cover. If not, electrical failures may occur from water contact.

تلفن شبانه روزی: ۱۲۰۸۸۶۲۰۸۵ ۲۲۰

# FarmaSOS.com

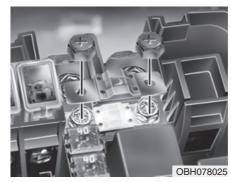

G210201ABH

If the main fuse is blown, it must be removed as follows:

- 1. Remove the fuse panel on the right side in the engine compartment.
- 2. Remove the nuts shown in the picture above.
- 3. Replace the fuse with a new one of the same rating.
- 4. Reinstall in the reverse order of removal.

## \* NOTICE

If the main fuse is blown, consult an authorized HYUNDAI dealer.

#### G210300BBH

# Fuse/relay panel description

Inside the fuse/relay panel covers, you can find the fuse/relay label describing fuse/relay name and capacity.

# Instrument panel fuse panel Driver's side Front passenger's side

# **Engine compartment fuse panel**





OBH071026/OBH071027/OBH071028/OBH071029

# \* NOTICE

Not all fuse panel descriptions in this manual may be applicable to your vehicle. It is accurate at the time of printing. When you inspect the fuse panel in your vehicle, refer to the fuse panel label.

# Instrument panel (Driver's side fuse panel)

Description	Fuse rating	Protected component						
P/WDW(LH)	30A	Driver Power Window Module, Rear Power Window Module LH						
P/WDW(RH)	30A	Passenger Power Window Module, Rear Power Window Module RH						
MODULE 2	10A	Console Switch LH/RH, ECS Control Module, Steering Angle Sensor, Key Lock Module, Tire Pressure Monitoring Module						
CURISE SW	10A	Multifunction Switch, Crash Pad Switch, A/C Control Module, Instrument Cluster, Rear Seat Warmer Module LH, Driver Seat Warmer Module Rear Seat Warmer Module RH, Passenger Seat Warmer Module, Passenger CCS Control Module, Driver CCS Control Module, Generator						
START	10A	Transmission Range Switch						
PDM 2	10A	Fob Holder, Start Stop Button Switch						
CLUSTER	10A	Instrument Cluster (IND.)						
A/CON(IG1)	10A	A/C Control Module						
KEY ILLUMINATION	10A	Start Stop Button Switch, Door Warning Switch, Fob Holder, Key Solenoid						
IG KEY SUPPLY	30A	E/R Junction Box Fuse (INHIBITOR SW 15A, ECU-2 10A, EHPS 10A, CRUISE 10A, TCU 15A, ESP 10A,STOP LP 10A, AFLS 10A)						
INTELLIGENT A/PEDAL	10A	Intelligent Accel Pedal Unit						
DR LOCK DRV	10A	Driver Door Module						
STOP LP	10A	Stop Lamp Switch						
A/BAG IND	10A	Instrument Cluster (Air Bag IND.)						
AFLS	10A	Auto Head Lamp Leveling Device Sensor, Adaptive Front Lighting Module, Head Lamp LH, Head Lamp RH						
PDM 1	10A	PDM						
SECURITY LP	10A	Data Link Connector, Auto Light Sensor & Security Indicator, Rear Door Module LH/RH,Shift Lock						

Description	Fuse rating	Protected component
MODULE 1	10A	FAM, IPM, Tilt & Telescopic Module, PDM, Driver Door Module, Passenger Door Module, IMS Control Module, Multifunction Switch, Electronic Parking Brake Module, Power Trunk Lid Control Module, Forward & Rear Parking Assist Control Module
MODULE 3	10A	FAM, Multifunction Switch, Tilt & Telescopic Module, Instrument Cluster, Driver Door Module, Passenger Door Module, Power Trunk Lid Control Module, IMS Control Module, Rear Curtain Module
P/HANDLE	15A	Tilt & Telescopic Module
ECS	15A	ECS Control Module
A/BAG	15A	SRS Control Module
AUDIO(B+)	15A	Audio, Front Monitor, AV Head Module, Rear Monitor (With AV), Rear Audio Switch, Media Module (With AV)
S/HEATER DRV	15A	Driver CCS Control Module, Driver Seat Warmer Module (W/O CCS)
P/TRUNK	30A	Power Trunk Lid Control Module
F/LID	10A	Trunk Lid & Fuel Filler Door Switch (Fuel Filler Door Switch)
AUDIO(IG1)	10A	AV Head Module, Audio, Active Headrest Sensor Module
RF RECEIVER	10A	RF Receiver
A/CON(B+)	10A	A/C Control Module, Tire Pressure Monitoring Module
I.O.D	30A	I/P Junction Box LH Fuse (MODULE 3 10A, AUDIO(B+) 15A ,Rf Receiver 10A , A/CON(IG1) 15A)

# Instrument panel (Passanger's side fuse panel)

Description	Fuse rating	Protected component
CURTAIN (RR)	10A	Rear Curtain Module
MIRROR	10A	Driver Door Module, Passenger Door Module
IG KEY SUPPLY	30A	E/R Junction Box Fuse (AQS 10A, WASHER 15A)
SUNROOF	20A	Overhead Console Lamp
CONSOLE SW	10A	Console Switch LH/RH, Piezo Buzzer
A/CON(IG2)	10A	Active Incar Sensor, A/C Control Module
P/SEAT PASS	20A	Passenger Power Seat Relay Box
S/HEATER RR	20A	Rear Seat Warmer Module LH/RH, Rear Power Seat Control Switch
MODULE 1	10A	Instrument Cluster, Rheostat, Driver CCS Control Module, Passenger CCS Control Module, PDM, IPM
MODULE 3	10A	Electro Chromic Mirror, Overhead Console Lamp, Rain Sensor, Rear Curtain Module, Camera Module
S/HEATER PASS	20A	Passenger CCS Control Module, Passenger Seat Warmer Module
DR LOCK PASS	15A	Passenger Door Module
P/SEAT RR	20A	Rear Power Seat Relay Box, Rear Slide Limit Switch LH
HTD STRG	15A	Steering Wheel Heater
P/OUTLET RR	15A	Rear Accessory Socket
P/OUTLET FRT	10A	ACC Socket Relay
MODULE 2	10A	A/C Control Module, IPM, PDM, Key Lock Module
PDM	25A	PDM
AUDIO	10A	Audio, Camera Module, Rear Audio Switch, Front Monitor, Media Module, AV Head Module

# Engine compartment fuse panel

Description	Fuse rating	Protected component
ALT	200A	Generator
I/P LH PWR	60A	I/P Junction Box LH
I/P RH PWR	60A	I/P Junction Box RH
C/FAN	60A	Cooling Fan Relay
EHPS	80A	EHPS Module
AIR ECS	40A	ECS Compressor Relay
AMP 1	40A	AV JBL AMP
AMP 2	30A	AMP / A / A / A
PDM(ACC)	30A	PDM (ACC) Relay
VDC/ESC 1	30A	VDC/ESP Control Module, Multipurpose Check Connector
VDC/ESC 2	30A	VDC/ESP Control Module, Multipurpose Check Connector
PDM(IG1)	30A	PDM (IG1) Relay
PDM(IG2)	30A	الله (IG2) Relay المالة (وزى الله PDM (IG2) Relay
P/SEAT DRV	30A	Driver Power Seat Relay Box, IMS Control Module, Driver Lumbar Support Switch
H/LP WASHER	20A	Head Lamp Washer Relay
VACUUM PUMP	20A	Brake Vacuum Pump Relay
P/OUTLET FRT	25A	ACC Socket Relay
TRUNK	10A	Trunk Lid Relay
IMS	10A	-
STOP LP	10A	Stop Lamp Relay, Stop Lamp Switch, IPM
B/UP LP	10A	Rear Combination Lamp LH/RH (IN), Electro Chromic Mirror, Camera Module, Rear Curtain Module

Description	Fuse rating	Protected component						
ECU	30A	Engine Control Relay						
BLOWER	40A	Blower Relay						
IGN SW 2 (PRESAFETY PASS)	40A	Ignition Switch (IG 2, START), Presafety Seat Belt Passenger						
RR HTD	40A	E/R Junction Box Fuse (AQS 10A, WASHER 15A)						
IGN SW 1 (PRESAFETY DRV)	40A	n Switch (IG 1, ACC), Presafety Seat Belt Driver						
A/CON	10A	A/C Control Module						
EPB 1	15A	Electric Parking Brake Module						
EPB 2	15A	Electric Parking Brake Module						
HORN	15A	Horn Relay						
IPM	10A	IPM, Head Lamp (Low) Relay						
AQS	10A	AQS Sensor, Electronic Control Wiper Module, Blower Relay						
DEICER	15A	تلفن شبانه روزی د (FR) Relay						
WASHER	15A	sher Relay						
WIPER	30A	Wiper Motor						
HTD MIRR	10A	A/C Control Module, Power Outside Mirror & Mirror Folding Motor LH/RH						
TCU	15A	TCM						
AFLS	10A	Head Lamp LH/RH						
EHPS	10A	EHPS Module						
VDC/ESC	10A	ESP Control Module, Multipurpose Check Connector						
ECU(IG1)	10A	ECM						
IGN COIL	20A	Ignition Coil #1,2,3,4,5,6						
INJECTOR(B+)	15A	Injector Drive Box						

Description	Fuse rating	Protected component
SENSOR 1	10A	ECM, Mass Air Flow Sensor, Oxygen Sensor #1,2,3,4
SENSOR 2	10A	Canister Purge Control Solenoid Valve, Variable Intake Manifold Valve, Oil Control Valve, ECM, Cooling Fan Relay, Immobilizer Module, Fuel Pump Resister
SENSOR 3	10A	ECM, Injector #1~#6, Fuel Pump Relay
H/LP RH	15A	Head Lamp RH
H/LP LH	15A	Head Lamp LH
INJECTOR(IG1)	10A	Injector Drive Box
CRUSIE	10A	Smart Cruise Control Module
STOP LP	10A	Stop Lamp Switch, Stop Lamp Relay, Generator, Vacuum Sw
ECU(B+)	15A	ECM,TCM,Injector Drive Box
ROOM LP	10A	Room Lamp Relay
F/PUMP	20A	Fuel Pump Relay
START	30A	Start Solenoid تلفن شبانه روزی: مدم

# FarmaSOS.com

# LIGHT BULBS

G220000AFN



# **WARNING** - Working on the lights

Prior to working on the light, firmly apply the parking brake, ensure that the ignition switch is turned to the LOCK position and turn off the lights to avoid sudden movement of the vehicle and burning your fingers or receiving an electric shock.

Use only the bulbs of the specified wattage.



# **A** CAUTION

Be sure to replace the burned-out bulb with one of the same wattage rating. Otherwise, it may cause damage to the fuse or electric wiring system.



# ↑ CAUTION

If you don't have necessary tools, the correct bulbs and the expertise. consult an authorized HYUNDAI dealer. In many cases, it is difficult to replace vehicle light bulbs because other parts of the vehicle must be removed before you can get to the bulb. This is especially true if you have to remove the headlight assembly to get to the bulb(s). Removing/installing the headlight assembly can result in damage to the vehicle.



## \* NOTICE


After heavy, driving rain or washing, headlight and taillight lenses could appear frosty. This condition is caused by the temperature difference between the lamp inside and outside. This is similar to the condensation on your windows inside your vehicle during the rain and doesn't indicate a problem with your vehicle. If the water leaks into the lamp bulb circuitry, have the vehicle checked by an authorized HYUNDAI dealer.



G220100ABH

# Headlight, position light, turn signal light, front fog light bulb replacement

- (1) Headlight (High)
- (2) Headlight (Low)
- (3) Position light
- (4) Front turn signal light
- (5) Front fog light (if equipped)

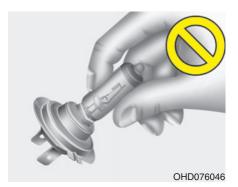

G220101ABH

Headlight bulb

# **WARNING** - Halogen bulbs

- Halogen bulbs contain pressurized gas that will produce flying pieces of glass if broken.
- Always handle them carefully, and avoid scratches and abrasions. If the bulbs are lit, avoid contact with liquids. Never touch the glass with bare hands. Residual oil may cause the bulb to overheat and burst when lit. A bulb should be operated only when installed in a headlight.

(Continued)

# (Continued)

- If a bulb becomes damaged or cracked, replace it immediately and carefully dispose of it.
- Wear eye protection when changing a bulb. Allow the bulb to cool down before handling it.

Headlight (HID type) bulb replacement (if equipped)

If the light bulb is not operating, have the vehicle checked by an authorized HYUNDAI dealer.

# WARNING - HID Headlight low beam (if equipped)

Do not attempt to replace or inspect the low beam (XENON bulb) due to electric shock danger. If the low beam (XENON bulb) is not working, have your vehicle checked by an authorized HYUNDAI dealer.

# \* NOTICE

HID lamps have superior performance vs. halogen bulbs. HID lamps are estimated by the manufacturer to last twice as long or longer than halogen bulbs depending on their frequency of use. They will probably require replacement at some point in the life of the vehicle. Cycling the headlamps on and off more than typical use will shorten HID lamps life. HID lamps do not fail in the same manner as halogen incandescent lamps. If a headlamp goes out after a period of operation but will immediately relight when the headlamp switch is cycled it is likely the HID lamp needs to be replaced. HID lighting components are more complex than conventional halogen bulbs thus have higher replacement cost.

G220102ABH

Headlight (bulb type), position, turn signal and front fog light bulbs replacement (if equipped)

If the light bulb is not operating, have the vehicle checked by an authorized HYUNDAI dealer.

## \* NOTICE

If the headlight aiming adjustment is necessary after the headlight assembly is reinstalled, consult an authorized HYUNDAI dealer.

## **Traffic Change (For Europe)**

The low beam light distribution is asymmetric.

If you go abroad to a country with opposite traffic direction, this asymmetric part will dazzle oncoming car driver. To prevent dazzle, ECE regulation demand several technical solutions (ex. automatic change system, adhesive sheet, down aiming). This headlamps are designed not to dazzle opposite drivers. So, you need not change your headlamps in a country with opposite traffic direction.




FarmaSOS.com



G220200AEN

# Side repeater light bulb replacement (if equipped)


If the light bulb is not operating, have the vehicle checked by an authorized HYUNDAI dealer.

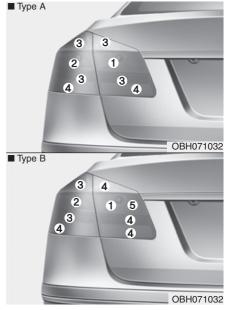

G220300ABH

# Rear combination light bulb replacement

- (1) Back-up light
- (2) Rear turn signal light
- (3) Stop and tail light
- (4) Tail light
- (5) Rear fog light (if equipped)

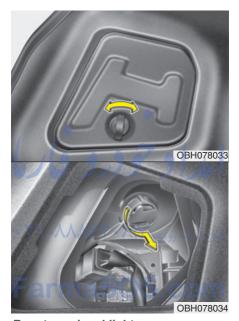

Rear turn signal light

- 1. Open the trunk lid.
- 2. Remove the service cover by pulling out the service cover.

- 3. Remove the socket from the assembly by turning the socket counterclockwise until the tabs on the socket align with the slots on the assembly.
- 4. Remove the bulb from the socket by pressing it in and rotating it counterclockwise until the tabs on the bulb align with the slots in the socket. Pull the bulb out of the socket.
- Insert a new bulb by inserting it into the socket and rotating it until it locks into place.
- Install the socket in the assembly by aligning the tabs on the socket with the slots in the assembly. Push the socket into the assembly and turn the socket clockwise.
- 7. Install the service cover by putting it into the service hole.

Back-up, stop and tail light, rear fog light (if equipped)

If the light is not operating, have the vehicle checked by an authorized HYUNDAI dealer.



G220400AEN

# High mounted stop light replacement

If the light is not operating, have the vehicle checked by an authorized HYUNDAI dealer.

FarmaSOS.com



G220500AFN

# License plate light bulb replacement

- 1. Loosen the lens retaining screws with a philips head screwdriver.
- 2. Remove the lens.
- 3. Remove the bulb by pulling it straight out.
- 4. Install a new bulb.
- 5. Reinstall the lens securely with the lens retaining screws.



G220900ABH

# Door courtesy lamp bulb replacement

If the light is not operating, have the vehicle checked by an authorized HYUNDAI dealer.



#### G220600BBH

# Interior light bulb replacement

- Using a flat-blade screwdriver, gently pry the lens from the interior light housing.
- 2. Remove the bulb by pulling it straight out.
- 3. Install a new bulb in the socket.
- 4. Align the lens tabs with the interior light housing notches and snap the lens into place.
- If the map lamp and room lamp are not operating, have the vehicle checked by an authorized HYUNDAI dealer.

# **A** CAUTION

Use care not to dirty or damage lens, lens tab, and plastic housings.

## APPEARANCE CARE

## **Exterior care**

G230101AUN

## Exterior general caution

It is very important to follow the label directions when using any chemical cleaner or polish. Read all warning and caution statements that appear on the label.

G230102ABH

Finish maintenance

#### Washing

To help protect your vehicle's finish from rust and deterioration, wash it thoroughly and frequently at least once a month with lukewarm or cold water.

If you use your vehicle for off-road driving, you should wash it after each off-road trip. Pay special attention to the removal of any accumulation of salt, dirt, mud, and other foreign materials. Make sure the drain holes in the lower edges of the doors and rocker panels are kept clear and clean.

Insects, tar, tree sap, bird droppings, industrial pollution and similar deposits can damage your vehicle's finish if not removed immediately.

Even prompt washing with plain water may not completely remove all these deposits. A mild soap, safe for use on painted surfaces, may be used.

After washing, rinse the vehicle thoroughly with lukewarm or cold water. Do not allow soap to dry on the finish.

# **A** CAUTION

- Do not use strong soap, chemical detergents or hot water, and do not wash the vehicle in direct sunlight or when the body of the vehicle is warm.
- Be careful when washing the side windows of your vehicle. Especially, with high-pressure water, water may leak through the windows and wet the interior.
- To prevent damage to the plastic parts and lamps, do not clean with chemical solvents or strong detergents.

# **WARNING** - Wet brakes

After washing the vehicle, test the brakes while driving slowly to see if they have been affected by water. If braking performance is impaired, dry the brakes by applying them lightly while maintaining a slow forward speed.



# **A** CAUTION

- Water washing in the engine compartment including high pressure water washing may cause the failure of electrical circuits or engine and related part located in the engine compartment.
- Never allow water or other liquids to come in contact with electrical/electronic components and air duct inside the vehicle as this may damage them.

## Waxing

Wax the vehicle when water will no longer bead on the paint.

Always wash and dry the vehicle before waxing. Use a good quality liquid or paste wax, and follow the manufacturer's instructions. Wax all metal trim to protect it and to maintain its luster.

Removing oil, tar, and similar materials with a spot remover will usually strip the wax from the finish. Be sure to re-wax these areas even if the rest of the vehicle does not yet need waxing.

# **A** CAUTION

- Wiping dust or dirt off the body with a dry cloth will scratch the finish.
- Do not use steel wool, abrasive cleaners, or strong detergents containing highly alkaline or caustic agents on chrome-plated or anodized aluminum parts. This may result in damage to the protective coating and cause discoloration or paint deterioration.

#### G230103AUN

## Finish damage repair

Deep scratches or stone chips in the painted surface must be repaired promptly. Exposed metal will quickly rust and may develop into a major repair expense.

# \* NOTICE

If your vehicle is damaged and requires any metal repair or replacement, be sure the body shop applies anti-corrosion materials to the parts repaired or replaced.



FarmaSOS.com

#### G230104AUN

## Bright-metal maintenance

- To remove road tar and insects, use a tar remover, not a scraper or other sharp object.
- To protect the surfaces of bright-metal parts from corrosion, apply a coating of wax or chrome preservative and rub to a high luster.
- During winter weather or in coastal areas, cover the bright metal parts with a heavier coating of wax or preservative. If necessary, coat the parts with non-corrosive petroleum jelly or other protective compound.

#### G230105AUN

# Underbody maintenance

Corrosive materials used for ice and snow removal and dust control may collect on the underbody. If these materials are not removed, accelerated rusting can occur on underbody parts such as the fuel lines, frame, floor pan and exhaust system, even though they have been treated with rust protection.

Thoroughly flush the vehicle underbody and wheel openings with lukewarm or cold water once a month, after off-road driving and at the end of each winter. Pay special attention to these areas because it is difficult to see all the mud and dirt. It will do more harm than good to wet down the road grime without removing it. The lower edges of doors, rocker panels, and frame members have drain holes that should not be allowed to clog with dirt; trapped water in these areas can cause rusting.

# **WARNING**

After washing the vehicle, test the brakes while driving slowly to see if they have been affected by water. If braking performance is impaired, dry the brakes by applying them lightly while maintaining a slow forward speed.





FarmaSOS.com

#### G230106AUN

Aluminum or chrome wheel maintenance

The aluminum or chrome wheels are coated with a clear protective finish.

- Do not use any abrasive cleaner, polishing compound, solvent, or wire brushes on aluminum or chrome wheels. They may scratch or damage the finish.
- · Clean the wheel when it has cooled.
- Use only a mild soap or neutral detergent, and rinse thoroughly with water.
   Also, be sure to clean the wheels after driving on salted roads. This helps prevent corrosion.
- Avoid washing the wheels with highspeed car wash brushes.
- Do not use any alkaline or acid detergent. It may damage and corrode the aluminum or chrome wheels coated with a clear protective finish.

#### G230107AUN

# Corrosion protection

## Protecting your vehicle from corrosion

By using the most advanced design and construction practices to combat corrosion, we produces cars of the highest quality. However, this is only part of the job. To achieve the long-term corrosion resistance your vehicle can deliver, the owner's cooperation and assistance is also required.

#### Common causes of corrosion

The most common causes of corrosion on your car are:

- Road salt, dirt and moisture that is allowed to accumulate underneath the car.
- Removal of paint or protective coatings by stones, gravel, abrasion or minor scrapes and dents which leave unprotected metal exposed to corrosion.

# **High-corrosion areas**

If you live in an area where your car is regularly exposed to corrosive materials, corrosion protection is particularly important. Some of the common causes of accelerated corrosion are road salts, dust control chemicals, ocean air and industrial pollution.

## Moisture breeds corrosion

Moisture creates the conditions in which corrosion is most likely to occur. For example, corrosion is accelerated by high humidity, particularly when temperatures are just above freezing. In such conditions, the corrosive material is kept in contact with the car surfaces by moisture that is slow to evaporate.

Mud is particularly corrosive because it is slow to dry and holds moisture in contact with the vehicle. Although the mud appears to be dry, it can still retain the moisture and promote corrosion.

High temperatures can also accelerate corrosion of parts that are not properly ventilated so the moisture can be dispersed. For all these reasons, it is particularly important to keep your car clean and free of mud or accumulations of other materials. This applies not only to the visible surfaces but particularly to the underside of the car.

# To help prevent corrosion

You can help prevent corrosion from getting started by observing the following:

# Keep your car clean

The best way to prevent corrosion is to keep your car clean and free of corrosive materials. Attention to the underside of the car is particularly important.

If you live in a high-corrosion area —
where road salts are used, near the
ocean, areas with industrial pollution,
acid rain, etc.—, you should take extra
care to prevent corrosion. In winter,
hose off the underside of your car at
least once a month and be sure to
clean the underside thoroughly when
winter is over.

- When cleaning underneath the car, give particular attention to the components under the fenders and other areas that are hidden from view. Do a thorough job; just dampening the accumulated mud rather than washing it away will accelerate corrosion rather than prevent it. Water under high pressure and steam are particularly effective in removing accumulated mud and corrosive materials.
- When cleaning lower door panels, rocker panels and frame members, be sure that drain holes are kept open so that moisture can escape and not be trapped inside to accelerate corrosion.

## Keep your garage dry

Don't park your car in a damp, poorly ventilated garage. This creates a favorable environment for corrosion. This is particularly true if you wash your car in the garage or drive it into the garage when it is still wet or covered with snow, ice or mud. Even a heated garage can contribute to corrosion unless it is well ventilated so moisture is dispersed.

# Keep paint and trim in good condition

Scratches or chips in the finish should be covered with "touch-up" paint as soon as possible to reduce the possibility of corrosion. If bare metal is showing through, the attention of a qualified body and paint shop is recommended.

Bird droppings: Bird droppings are highly corrosive and may damage painted surfaces in just a few hours. Always remove bird droppings as soon as possible.

## Don't neglect the interior

Moisture can collect under the floor mats and carpeting to cause corrosion. Check under the mats periodically to be sure the carpeting is dry. Use particular care if you carry fertilizers, cleaning materials or chemicals in the car.

These should be carried only in proper containers and any spills or leaks should be cleaned up, flushed with clean water and thoroughly dried.

## Interior care

G230201AUN

# Interior general precautions

Prevent chemicals such as perfume, cosmetic oil, sun cream, hand cleaner, and air freshener from contacting the interior parts because they may cause damage or discoloration. If they do contact the interior parts, wipe them off immediately. See the instructions for the proper way to clean vinyl.

# **⚠** CAUTION

Never allow water or other liquids to come in contact with electrical/ electronic components inside the vehicle as this may damage them.

# **A** CAUTION

When cleaning leather products (steering wheel, seats etc.), use neutral detergents or low alcohol content solutions. If you use high alcohol content solutions or acid/alkaline detergents, the color of the leather may fade or the surface may get stripped off.

Alcantara® leather care (if equipped)

- Remove dust and loose dirt with a soft brush or roller.
- If other materials (liquids, perfume, cosmetic oil etc.) contact the leather, pat dry with a paper towel or clean cloth.
- For stubborn stains, use a soft cloth or sponge with lukewarm water, squeezing out water. Then, let the leather dry naturally and wipe it off with a soft brush.

# **A** CAUTION

- Do not scrub the leather. This may cause damage or discoloration.
- When cleaning Alcantara® leather, do not use neutral detergents, and do not pour detergents directly on the leather. The color of the leather may fade or the surface may get stripped off.

If you use neutral detergents, dilute it ten to one and wipe it off with a soft brush.

G230202AUN

Cleaning the upholstery and interior trim

#### Vinyl

Remove dust and loose dirt from vinyl with a whisk broom or vacuum cleaner. Clean vinyl surfaces with a vinyl cleaner.

#### Fabric

Remove dust and loose dirt from fabric with a whisk broom or vacuum cleaner. Clean with a mild soap solution recommended for upholstery or carpets. Remove fresh spots immediately with a fabric spot cleaner. If fresh spots do not receive immediate attention, the fabric can be stained and its color can be affected. Also, its fire-resistant properties can be reduced if the material is not properly maintained.

# **⚠** CAUTION

Using anything but recommended cleaners and procedures may affect the fabric's appearance and fireresistant properties.

G230203AUN

Cleaning the lap/shoulder belt webbing

Clean the belt webbing with any mild soap solution recommended for cleaning upholstery or carpet. Follow the instructions provided with the soap. Do not bleach or re-dye the webbing because this may weaken it.

G230204AUN

Cleaning the interior window glass
If the interior glass surfaces of the vehicle become fogged (that is, covered with an oily, greasy or waxy film), they should be cleaned with glass cleaner. Follow the directions on the glass cleaner container.

# **A** CAUTION

Do not scrape or scratch the inside of the rear window. This may result in damage to the rear window defroster grid.

# **EMISSION CONTROL SYSTEM (IF EQUIPPED)**

G270000AEN

The emission control system of your vehicle is covered by a written limited warranty. Please see the warranty information contained in the Service Passport in your vehicle.

Your vehicle is equipped with an emission control system to meet all applicable emission regulations.

There are three emission control systems, as follows.

- (1) Crankcase emission control system
- (2) Evaporative emission control system
- (3) Exhaust emission control system

In order to assure the proper function of the emission control systems, it is recommended that you have your car inspected and maintained by an authorized HYUNDAI dealer in accordance with the maintenance schedule in this manual. Caution for the Inspection and Maintenance Test (With Electronic Stability Program (ESP) system)

- To prevent the vehicle from misfiring during dynamometer testing, turn the Electronic Stability Program (ESP) system off by pressing the ESP switch.
- After dynamometer testing is completed, turn the ESP system back on by pressing the ESP switch again.

تلفن شبانه روزی: ۱-۸۸۸۶۲۰۸۵ تلفن شبانه روزی

FarmaSOS.com

G270100AUN

# 1. Crankcase emission control system

The positive crankcase ventilation system is employed to prevent air pollution caused by blow-by gases being emitted from the crankcase. This system supplies fresh filtered air to the crankcase through the air intake hose. Inside the crankcase, the fresh air mixes with blow-by gases, which then pass through the PCV valve into the induction system.

#### G270200AEN

# 2. Evaporative emission control system

The Evaporative Emission Control System is designed to prevent fuel vapors from escaping into the atmosphere.

#### G270201AUN

#### Canister

Fuel vapors generated inside the fuel tank are absorbed and stored in the onboard canister. When the engine is running, the fuel vapors absorbed in the canister are drawn into the surge tank through the purge control solenoid valve.

#### G270202AUN

Purge Control Solenoid Valve (PCSV)
The purge control solenoid valve is con-

rne purge control solenoid valve is controlled by the Engine Control Module (ECM); when the engine coolant temperature is low during idling, the PCSV closes so that evaporated fuel is not taken into the engine. After the engine warms-up during ordinary driving, the PCSV opens to introduce evaporated fuel to the engine.

#### G270300AUN

# 3. Exhaust emission control system

The Exhaust Emission Control System is a highly effective system which controls exhaust emissions while maintaining good vehicle performance.

#### G270301AUN

## Vehicle modifications

- This vehicle should not be modified. Modification of your vehicle could affect its performance, safety or durability and may even violate governmental safety and emissions regulations.
  - In addition, damage or performance problems resulting from any modification may not be covered under warranty.
- If you use unauthorized electronic devices, it may cause the vehicle to operate abnormally, wire damage, battery discharge and fire. For your safety, do not use unauthorized electronic devices.

#### G270302AUN

# Engine exhaust gas precautions (carbon monoxide)

 Carbon monoxide can be present with other exhaust fumes. Therefore, if you smell exhaust fumes of any kind inside your vehicle, have it inspected and repaired immediately. If you ever suspect exhaust fumes are coming into your vehicle, drive it only with all the windows fully open. Have your vehicle checked and repaired immediately.

# **WARNING** - Exhaust

Engine exhaust gases contain carbon monoxide (CO). Though colorless and odorless, it is dangerous and could be lethal if inhaled. Follow the instructions on this page to avoid CO poisoning.

- Do not operate the engine in confined or closed areas (such as garages) any more than what is necessary to move the vehicle in or out of the area.
- When the vehicle is stopped in an open area for more than a short time with the engine running, adjust the ventilation system (as needed) to draw outside air into the vehicle.
- Never sit in a parked or stopped vehicle for any extended time with the engine running.
- When the engine stalls or fails to start, excessive attempts to restart the engine may cause damage to the emission control system.

G270303AEN

Operating precautions for catalytic converters (if equipped)

# **A** WARNING - Fire

- A hot exhaust system can ignite flammable items under your vehicle. Do not park, idle, or drive the vehicle over or near flammable objects, such as grass, vegetation, paper, leaves, etc.
- The exhaust system and catalytic system are very hot while the engine is running or immediately after the engine is turned off. Keep away from the exhaust system and catalytic, you may get burned. Also, do not remove the heat sink around the exhaust system, do not seal the bottom of the vehicle or do not coat the vehicle for corrosion control. It may present a fire risk under certain conditions.

Your vehicle is equipped with a catalytic converter emission control device.

Therefore, the following precautions must be observed:

- Make sure to refuel your vehicle according to the "Fuel requirements" suggested in section 1.
- Do not operate the vehicle when there are signs of engine malfunction, such as misfire or a noticeable loss of performance.
- Do not misuse or abuse the engine. Examples of misuse are coasting with the ignition off and descending steep grades in gear with the ignition off.
- Do not operate the engine at high idle speed for extended periods (5 minutes or more).
- Do not modify or tamper with any part of the engine or emission control system. All inspections and adjustments must be made by an authorized HYUNDAI dealer.
- Avoid driving with a very low fuel level.
   If you run out of gasoline, it could cause the engine to misfire and result in excessive loading of the catalytic converter.

Failure to observe these precautions could result in damage to the catalytic converter and to your vehicle. Additionally, such actions could void your warranties.

# **DIMENSIONS**

I010000ABH

Item	mm (in)					
Overall length	4985 (196.3)					
Overall width	1890 (74.4)					
Overall height	1480 (58.2)*1 / 1485 (58.5)*2					
Front tread	1619 (63.7)*1 / 1604 (63.1)*2					
Rear tread	1635 (64.4)*1 / 1620 (63.8)*2					
Wheelbase	2935 (115.6)					

<sup>\*1:</sup> with 225/55R17 tire

<sup>\*2:</sup> with 235/50R18 tire or with P235/45R19 tire





# **BULB WATTAGE**

1030000ABH

Light Bulb	Wattage		
Headlights (Low)	55 or 35 (HID)		
Headlights (High)	55		
Front turn signal lights	24		
Position lights	LED		
Side repeater lights*	LED		
Front fog lights*	35		
Rear fog light*	LED		
Stop and tail lights	LED		
Tail light	LED		
Rear turn signal lights	21		
Back-up lights	16		
High mounted stop light*	LED		
License plate lights	5		
Map lamps	LED		
Room lamps	LED		
Luggage lamp	5		
Glove box lamp	5		
Vanity mirror lamps*	5		
Door courtesy lamps*	5		

<sup>\*:</sup> If equipped

# **TIRES AND WHEELS**

1020000ABH

Item			Inf	Wheel lug nut			
	Tire size	Wheel size	Norma	l load *1	Maximu	ım load	torque kg•m (lb•ft, N•m)
			Front	Rear	Front	Rear	
Full size tire	225/55R17	6.5J×17	2.2 (32, 220)	2.3 (33, 230)	2.2 (32, 220)	2.3 (33, 230)	9~11
	235/50R18	7.5J×18					(65~79, 88~107)
	P235/45R19	P235/45R19 8.0J×19		(00, 200)	(02, 220)	(55, 255)	(00~79, 00~107)

امداد خودرو جارما

# **A** CAUTION

When replacing tires, use the same size originally supplied with the vehicle. Using tires of a different size can damage the related parts or make it work irregularly.

FarmaSOS.com

<sup>\*</sup> Normal load : Up to 3 persons

# RECOMMENDED LUBRICANTS AND CAPACITIES

I040000BBH

To help achieve proper engine and powertrain performance and durability, use only lubricants of the proper quality. The correct lubricants also help promote engine efficiency that results in improved fuel economy. These lubricants and fluids are recommended for use in your vehicle.

Lubricar	nt	Volume	Classification
Engine oil *1 *2 (drain and refill) Recommends	3.0L/3.3L/3.8L	5.7 l (6.02 US qt.)	API Service SM*3,
HELIX Motor oils	4.6L	6.5 l (6.87 US qt.)	ILSAC GF-4 or above, ACEA A5
Engine oil consumption	Normal driving condition	MAX. 1 / /1500 km	-
Lingine on consumption	Severe driving condition	MAX.1 1/1000 km	-
Automatic transmission fluid		10.1 <i>l</i> (10.67 US qt.)	GS ATF SP-IV-RR, HYUNDAI genuine ATF SP-IV-RR
Power steering	With EHPS	0.9 L (0.95 US qt.)	Pentosin CHF 202
Fower steering	Without EHPS	0.9 l (0.95 US qt.)	PSF-4
Coolant	3.0L/3.3L/3.8L	8.4~8.6 l (8.88~9.09 US qt.)	Mixture of antifreeze and water
Coolant	4.6L	13.5 l (14.27 US qt.)	(Ethylene glycol base coolant for aluminum radiator)
Brake fluid	Far	0.7~0.8 l (0.7~0.8 US qt.)	SAE J1703, FMVSS116 DOT-3 or DOT-4
Rear differential oil		1.4 <i>l</i> (1.48 US qt.)	Hypoid gear oil API GL-5, SAE 75W/90 (SHELL SPIRAX X Equivalent)
Fuel	3.0L/3.3L/3.8L	73 l (19.28 US gal.)	Refer to "Fuel requirements" in section 1
l'uei	4.6L	77 l (20.34 US gal.)	neler to Tuerrequirements in Section 1

<sup>\*1:</sup> Refer to the recommended SAE viscosity numbers on the next page.

<sup>\*2:</sup> Engine oils labeled Energy Conserving Oil are now available. Along with other additional benefits, they contribute to fuel economy by reducing the amount of fuel necessary to overcome engine friction. Often, these improvements are difficult to measure in everyday driving, but in a year's time, they can offer significant cost and energy savings.

<sup>\*3:</sup> If the API service SM or ACEA A5 engine oil is not available in your country, you are able to use API service SL or ACEA A3.

#### I040100ABH

# Recommended SAE viscosity number

# **A** CAUTION

Always be sure to clean the area around any filler plug, drain plug, or dipstick before checking or draining any lubricant. This is especially important in dusty or sandy areas and when the vehicle is used on unpaved roads. Cleaning the plug and dipstick areas will prevent dirt and grit from entering the engine and other mechanisms that could be damaged.

Engine oil viscosity (thickness) has an effect on fuel economy and cold weather operating (engine start and engine oil flowability). Lower viscosity engine oils can provide better fuel economy and cold weather performance, however, higher viscosity engine oils are required for satisfactory lubrication in hot weather. Using oils of any viscosity other than those recommended could result in engine damage.


When choosing an oil, consider the range of temperature your vehicle will be operated in before the next oil change. Proceed to select the recommended oil viscosity from the chart.

#### 3.3L/3.8L/4.6L - MPI

Temperature Range for SAE Viscosity Numbers											
Temperature	°C	-30	-20		-10	0	10	20	30	40	50
Temperature	(°F)	1	0	0	20		40	60	80	100	120
Gasoline Engine Oil *1		~ ·		4	1			20 15W- 10W-30			
					5\	<b>N-20*</b> ², 5	W-30				


- \*1. For better fuel economy, it is recommended to use the engine oil of a viscosity grade SAE 5W-20\*2 (API SM/ILSAC GF-4/ACEA A5). However, if the engine oil is not available in your country, select the proper engine oil using the engine oil viscosity chart.
- \*2. In Middle East, do not use the engine oil of viscosity grade SAE 5W-20.

#### 3.0L/3.8L - GDI

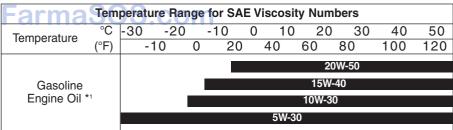

<sup>\*1.</sup> For better fuel economy, it is recommended to use the engine oil of a viscosity grade SAE 5W-30 (API SM/ILSAC GF-4/ACEA A5). However, if the engine oil is not available in your country, select the proper engine oil using the engine oil viscosity chart.


# VEHICLE IDENTIFICATION NUMBER (VIN)

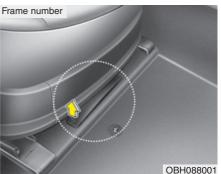

H010000ABH

The vehicle identification number (VIN) is the number used in registering your car and in all legal matters pertaining to its ownership, etc.

The number is punched on floor under the passenger's seat.

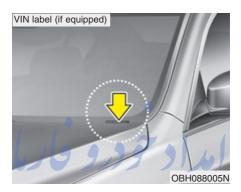

The VIN is also on a plate attached to the top of the dashboard. The number on the plate can easily be seen through the windshield from outside.

FarmaSOS.com

# VEHICLE CERTIFICATION LABEL



H020000AEN

The vehicle certification label attached on the driver's (or front passenger's) side center pillar gives the vehicle identification number (VIN).

# TIRE SPECIFICATION AND PRESSURE LABEL




H030000AUN

The tires supplied on your new vehicle are chosen to provide the best performance for normal driving.

The tire label located on the driver's side center pillar gives the tire pressures recommended for your car.

## **ENGINE NUMBER**

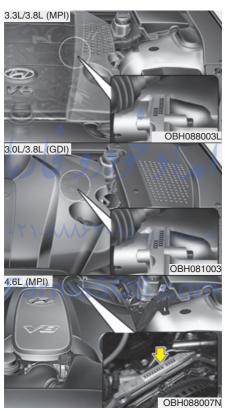

H04000AUN

The engine number is stamped on the engine block as shown in the drawing.

# AIR CONDITIONER **COMPRESSOR LABEL**



OHC081001

A compressor label informs you the type of compressor your vehicle is equipped with such as model, supplier part number, production number, refrigerant (1) and refrigerant oil (2).