

HYUNDAI

OWNER'S MANUAL

Operation
Maintenance
Specifications

All information in this Owner's Manual is current at the time of publication. However, HYUNDAI reserves the right to make changes at any time so that our policy of continual product improvement may be carried out.

This manual applies to all HYUNDAI models and includes descriptions and explanations of optional as well as standard equipment. As a result, you may find material in this manual that does not apply to your specific vehicle.

CAUTION: MODIFICATIONS TO YOUR HYUNDAI

Your HYUNDAI should not be modified in any way. Such modifications may adversely affect the performance, safety or durability of your HYUNDAI and may, in addition, violate conditions of the limited warranties covering the vehicle. Certain modifications may also be in violation of regulations established by the U.S. Department of Transportation and other federal or state agencies.

TWO-WAY RADIO OR CELLULAR TELEPHONE INSTALLATION

Your vehicle is equipped with electronic fuel injection and other electronic components. It is possible for an improperly installed/adjusted two-way radio or cellular telephone to adversely affect electronic systems. For this reason, we recommend that you carefully follow the radio manufacturer's instructions or consult your HYUNDAI dealer for precautionary measures or special instructions if you choose to install one of these devices.

SAFETY AND VEHICLE DAMAGE WARNING

This manual includes information titled as WARNING, CAUTION and NOTICE.
These titles indicate the following:

WARNING

This indicates that a condition may result in harm, serious injury, or death to you or other persons if the warning is not heeded. Follow the advice provided with the warning.

CAUTION

This indicates that a condition may result in damage to your vehicle or its equipment if the caution is not heeded. Follow the advice provided with the caution.

* NOTICE

This indicates that interesting or helpful information is being provided.

FOREWORD

Thank you for choosing HYUNDAI. We are pleased to welcome you to the growing number of discriminating people who drive HYUNDAI. The advanced engineering and high-quality construction of each HYUNDAI we build is something of which we're very proud.

Your Owner's Manual will introduce you to the features and operation of your new HYUNDAI. It is suggested that you read it carefully because the information it contains can contribute greatly to the satisfaction you receive from your new car.

The manufacturer also recommends that all service and maintenance on your car be performed by an authorized HYUNDAI dealer. HYUNDAI dealers are prepared to provide high-quality service, maintenance and any other assistance that may be required.

HYUNDAI MOTOR AMERICA

Note : Because future owners will also need the information included in this manual, if you sell this HYUNDAI, please leave the manual in the vehicle for their use. Thank you.

CAUTION

Severe engine and transmission damage may result from the use of poor quality fuels and lubricants that do not meet HYUNDAI specifications. You must always use high quality fuels and lubricants that meet the specifications listed on Page 8-6 in the Vehicle Specifications section of the Owner's Manual.

Copyright 2014 HYUNDAI Motor America. All rights reserved. No part of this publication may be reproduced, stored in any retrieval system or transmitted in any form or by any means without the prior written permission of HYUNDAI Motor America.

GUIDE TO HYUNDAI GENUINE PARTS

1. What are HYUNDAI Genuine Parts?

HYUNDAI Genuine Parts are the same parts used by HYUNDAI Motor Company to manufacture vehicles. They are designed and tested for the optimum safety, performance, and reliability to our customers.



2. Why should you use genuine parts?

HYUNDAI Genuine Parts are engineered and built to meet rigid manufacturing requirements. Using imitation, counterfeit or used salvage parts is not covered under the HYUNDAI New Vehicle Limited Warranty or any other HYUNDAI warranty.

In addition, any damage to or failure of HYUNDAI Genuine Parts caused by the installation or failure of an imitation, counterfeit or used salvage part is not covered by any HYUNDAI Warranty.




3. How can you tell if you are purchasing HYUNDAI Genuine Parts?

Look for the HYUNDAI Genuine Parts Logo on the package (see below).

HYUNDAI Genuine Parts exported to the U.S. are packaged with labels written only in English.

HYUNDAI Genuine Parts are only sold through authorized HYUNDAI Dealerships.

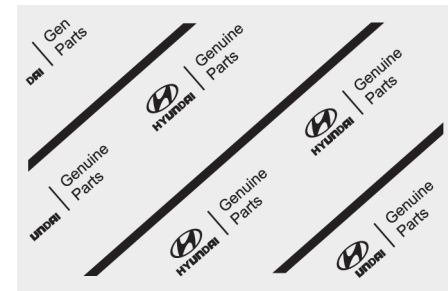

HOW TO USE THIS MANUAL

We want to help you get the greatest possible driving pleasure from your vehicle. Your Owner's Manual can assist you in many ways. We strongly recommend that you read the entire manual. In order to minimize the chance of death or injury, you must read the WARNING and CAUTION sections in this manual.

Illustrations complement the words in this manual to best explain how to enjoy your vehicle. By reading your manual, you will learn about features, important safety information, and driving tips under various road conditions.

The general layout of the manual is provided in the Table of Contents. A good place to start is the index; it has an alphabetical listing of all information in your manual.

Sections: This manual has eight chapters plus an index. Each chapter begins with a brief list of contents so you can tell at a glance if that chapter has the information you want.

You will find various WARNINGS, CAUTIONS, and NOTICES in this manual. These WARNINGS were prepared to enhance your personal safety. You should carefully read and follow ALL procedures and recommendations provided in these WARNINGS, CAUTIONS and NOTICES.

WARNING

A WARNING indicates a situation in which harm, serious bodily injury, or death could result if the warning is ignored.

CAUTION

A CAUTION indicates a situation in which damage to your vehicle could result if the caution is ignored.

*** NOTICE**

A NOTICE indicates interesting or helpful information is being provided.

FUEL REQUIREMENTS

Your new vehicle is designed to obtain maximum performance with UNLEADED FUEL, as well as minimize exhaust emissions and spark plug fouling.

3.8 engine

Your new vehicle is designed to use only unleaded fuel having an octane number $((R+M)/2)$ of 87 (Research Octane Number 91) or higher.


5.0 engine

Your new vehicle is designed to use only unleaded fuel having an octane number $((R+M)/2)$ of 87 (Research Octane Number 91) or higher. For improved vehicle performance, premium unleaded fuel with an octane number $((R+M)/2)$ of 91 (Research Octane Number 96) or higher is recommended.

CAUTION

Never add any fuel system cleaning agents to the fuel tank other than what has been specified. (Consult an authorized HYUNDAI dealer for details.)

WARNING

- **Do not "top off" after the nozzle automatically shuts off when refueling.**
- **Tighten the cap until it clicks one time, otherwise the Check Engine  light will illuminate.**
- **Always check that the fuel cap is installed securely to prevent fuel spillage in the event of an accident.**

Gasoline containing alcohol and methanol

Gasohol, a mixture of gasoline and ethanol (also known as grain alcohol), and gasoline or gasohol containing methanol (also known as wood alcohol) are being marketed along with or instead of leaded or unleaded gasoline.

Do not use gasohol containing more than 10% ethanol, and do not use gasoline or gasohol containing any methanol. Either of these fuels may cause drivability problems and damage to the fuel system.

Discontinue using gasohol of any kind if drivability problems occur.

Vehicle damage or drivability problems may not be covered by the manufacturer's warranty if they result from the use of:

1. Gasohol containing more than 10% ethanol.
2. Gasoline or gasohol containing methanol.
3. Leaded fuel or leaded gasohol.

"E85" fuel is an alternative fuel comprised of 85 percent ethanol and 15 percent gasoline, and is manufactured exclusively for use in Flexible Fuel Vehicles. "E85" is not compatible with your vehicle. Use of "E85" may result in poor engine performance and damage to your vehicle's engine and fuel system. HYUNDAI recommends that customers do not use fuel with an ethanol content exceeding 10 percent.

 **CAUTION**

Your New Vehicle Limited Warranty does not cover damage to the fuel system or any performance problems caused by the use of "E85" fuel.

 **CAUTION**

Never use gasohol which contains methanol. Discontinue use of any gasohol product which impairs driveability.

Gasoline containing MMT

Some gasoline contains harmful manganese-based fuel additives such as MMT (Methylcyclopentadienyl Manganese Tricarbonyl).

HYUNDAI does not recommend the use of gasoline containing MMT.

This type of fuel can reduce vehicle performance and affect your emission control system.

The malfunction indicator lamp on the cluster may come on.

Do not use methanol

Fuels containing methanol (wood alcohol) should not be used in your vehicle. This type of fuel can reduce vehicle performance and damage components of the fuel system.

 **CAUTION**

Your New Vehicle Limited Warranty may not cover damage to the fuel system and any performance problems that are caused by the use of fuels containing methanol.

Fuel Additives

HYUNDAI recommends that you use good quality gasolines treated with detergent additives such as TOP TIER Detergent Gasoline, which help prevent deposit formation in the engine. These gasolines will help the engine run cleaner and enhance performance of the Emission Control System. For more information on TOP TIER Detergent Gasoline, please go to the website (www.toptiergas.com).

For customers who do not use TOP Tier Detergent Gasoline regularly, and have problems starting or the engine does not run smoothly, additives that you can buy separately may be added to the gasoline. If TOP TIER Detergent Gasoline is not available, one bottle of additive added to the fuel tank at every 7,500 miles or every engine oil change is recommended. Additives are available from your authorized HYUNDAI dealer along with information on how to use them. Do not mix other additives.

Operation in foreign countries

If you are going to drive your vehicle in another country, be sure to:

- Observe all regulations regarding registration and insurance.
- Determine that acceptable fuel is available.

VEHICLE BREAK-IN PROCESS

No special break-in period is needed. By following a few simple precautions for the first 600 miles (1,000 km) you may add to the performance, economy and life of your vehicle.

- Do not race the engine.
- While driving, keep your engine speed (rpm, or revolutions per minute) between 2,000 rpm and 4,000 rpm.
- Do not maintain a single speed for long periods of time, either fast or slow. Varying engine speed is needed to properly break-in the engine.
- Avoid hard stops, except in emergencies, to allow the brakes to seat properly.

⚠ CALIFORNIA PROPOSITION 65 WARNING

Items contained in motor vehicles or emitted from them are known to the State of California to cause cancer and birth defects or reproductive harm. These include:

- Gasoline and its vapors
- Engine exhaust
- Used engine oil
- Interior passenger compartment components and materials
- Component parts which are subject to heat and wear

In addition, battery posts, terminals and related accessories contain lead, lead compounds and other chemicals known to the State of California to cause cancer and reproductive harm.

VEHICLE DATA COLLECTION AND EVENT DATA RECORDERS

This vehicle is equipped with an event data recorder (EDR). The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an air bag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less. The EDR in this vehicle is designed to record such data as:

- How various systems in your vehicle were operating;
- Whether or not the driver and passenger safety belts were buckled/ fastened;
- How far (if at all) the driver was depressing the accelerator and/or brake pedal; and,
- How fast the vehicle was traveling.

These data can help provide a better understanding of the circumstances in which crashes and injuries occur. **NOTE:** EDR data are recorded by your vehicle only if a non-trivial crash situation occurs; no data are recorded by the EDR under normal driving conditions and no personal data (e.g., name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties, such as law enforcement, that have the special equipment, can read the information if they have access to the vehicle or the EDR.

TABLE OF CONTENTS

Your vehicle at a glance	1
Safety system of your vehicle	2
Convenient features of your vehicle	3
Multimedia System	4
Driving your vehicle	5
What to do in an emergency	6
Maintenance	7
Specifications, Consumer information and Reporting safety defects	8
Index	I

1 Your vehicle at a glance

Exterior overview (I)	1-2
Exterior overview (II)	1-3
Interior overview	1-4
Instrument panel overview (I)	1-5
Instrument panel overview (II)	1-6
Engine compartment	1-7

2 Safety system of your vehicle

Important safety precautions	2-2
Always wear your seat belt	2-2
Restrain all children	2-2
Air bag hazards	2-2
Driver distraction	2-2
Control your speed	2-3
Keep your vehicle in safe condition	2-3
Seats	2-4
Safety precautions	2-5
Front seats	2-6
Rear seats	2-11
Headrest	2-14
Seat warmers and coolers	2-18

Seat belts	2-22
Seat belt safety precautions	2-22
Seat belt warning light	2-23
Seat belt restraint system	2-25
Pre-Safe Seat belt (PSB)	2-30
Additional seat belt safety precautions	2-31
Care of seat belts	2-34
Child restraint system (CRS)	2-35
Selecting a child restraint system (CRS)	2-36
Installing a child restraint system (CRS)	2-38
Air bag -	
advanced supplemental restraint system	2-46
Where are the air bags?	2-48
How does the air bags system operate?	2-51
What to expect after an air bag inflates	2-56
Occupant classification system (OCS)	2-57
Why didn't my air bag go off in a collision? (Air bags are not designed to inflate in every collision.)	2-61
SRS care	2-66
Additional safety precautions	2-67
Air bag warning labels	2-68

3 Convenient features of your vehicle

Accessing your vehicle	3-4
Smart key	3-4
Smart key precautions	3-7
Immobilizer System	3-9
Door locks	3-11
Operating door locks from outside the vehicle	3-11
Power Door Latch	3-12
Operating door locks from inside the vehicle	3-12
Auto door lock/unlock features	3-14
Child-protector rear door locks	3-14
Theft-alarm system	3-15
Driver position memory system	3-16
Storing positions into memory	3-16
Easy access function	3-17
Steering wheel	3-18
Electric power steering (EPS)	3-18
Tilt steering / Telescope steering	3-18
Heated steering wheel	3-19
Horn	3-20
Mirrors	3-21
Inside rearview mirror	3-21
Outside rearview mirror	3-35
Reverse parking aid function	3-38
Windows	3-39
Power windows	3-40
Panorama sunroof	3-43
Sunshade	3-43
Sliding the sunroof	3-44
Tilting the sunroof	3-44
Closing the sunroof	3-45
Resetting the sunroof	3-46
Exterior features	3-47
Hood	3-47
Trunk	3-48
Smart trunk	3-54
Fuel filler door	3-58
Instrument cluster	3-61
Instrument Cluster Control	3-62
LCD Display Control	3-62
Gauges	3-63

LCD display	3-67	Light	3-109
LCD Modes.....	3-67	Exterior lights	3-109
Trip Computer Mode.....	3-68	Smart High Beam	3-111
Turn By Turn (TBT) Mode	3-69	Welcome system	3-116
ASCC/LKAS Mode	3-69	Interior lights.....	3-117
A/V Mode.....	3-69	Wipers and washers	3-122
Information Mode	3-70	Windshield wipers	3-122
User Settings Mode.....	3-72	Windshield washers	3-124
Warning Messages.....	3-79	Driver assist system	3-125
Trip computer	3-89	Rear view camera.....	3-125
Overview.....	3-89	Parking Guide System.....	3-126
Trip A/B.....	3-90	Parking Assist System	3-127
Fuel Economy.....	3-91	Defroster	3-131
Digital Speedometer	3-93	Rear window defroster	3-131
Warning and indicator lights	3-94	Automatic climate control system	3-133
Warning lights	3-94	Automatic heating and air conditioning.....	3-134
Indicator Lights.....	3-102	Manual heating and air conditioning.....	3-135
Head Up Display (HUD)	3-106	System operation.....	3-143
Description.....	3-106	Climate control air filter	3-145
Head Up Display ON/OFF	3-107	Air conditioner refrigerant and compressor lubricant	3-146
Head Up Display Information.....	3-107	Air Conditioning refrigerant label.....	3-146
Head Up Display Setting	3-108	Windshield defrosting and defogging	3-147
		Auto defogging system ON/OFF.....	3-149

Climate control additional features.....	3-150
Cluster ionizer.....	3-150
Smart ventilation.....	3-150
Rear climate system ON/OFF.....	3-151
CO2 control auto air conditioner.....	3-151
Storage compartment.....	3-152
Center console storage.....	3-152
Glove box.....	3-153
Sunglass holder.....	3-153
Interior features.....	3-154
Ashtray.....	3-154
Cup holder.....	3-154
Sunvisor.....	3-155
Power outlet.....	3-156
Clock.....	3-157
Clothes hanger.....	3-158
Bag hanger.....	3-158
Floor mat anchor(s).....	3-159
Rear curtain.....	3-160
Side curtain.....	3-160
Luggage net holder.....	3-161

4 Multimedia system

Multimedia system.....	4-2
AUX, USB and iPod® port.....	4-2
Antenna.....	4-3
Steering wheel audio control.....	4-4
Audio / Video / Navigation system (AVN).....	4-5
<i>Bluetooth</i> ® Wireless Technology hands-free.....	4-5

5 Driving your vehicle

Before driving.....	5-4
Before entering the vehicle	5-4
Before starting.....	5-4
Engine Start/Stop button.....	5-6
Automatic transmission.....	5-11
Automatic transmission operation	5-11
Parking.....	5-17
Good driving practices.....	5-17
All Wheel Drive (AWD).....	5-19
Using All Wheel Drive (AWD)	5-19
Emergency precautions.....	5-21
Braking system	5-23
Power brakes	5-23
Disc brakes wear indicator	5-24
Foot parking brake	5-24
Electric parking brake (EPB).....	5-26
AUTO HOLD	5-31
Anti-lock Brake System (ABS)	5-35
Electronic Stability Control (ESC).....	5-38
Hill-Start Assist Control (HAC).....	5-41
Good braking practices.....	5-41
Drive mode integrated control system	5-42
Electronic Control Suspension (ECS).....	5-44
ECS malfunction indicator.....	5-44
Autonomous Emergency Braking (AEB).....	5-45
AEB operation.....	5-46
To cancel the AEB	5-47
Warning light and message	5-48
Cruise control	5-50
Cruise control operation.....	5-50
Advanced smart cruise control system	5-54
To convert to cruise control mode.....	5-55
Smart cruise control speed	5-55
Cancelled automatically	5-58
Smart cruise control vehicle-to-vehicle distance.....	5-60
Sensor to detect distance to the vehicle ahead.....	5-62
Limitations of the system	5-64
Lane Keeping Assist System (LKAS).....	5-69
LKAS operation.....	5-70
LKAS malfunction.....	5-75
LKAS function change	5-76
Blind Spot Detection System (BSD)	5-78
BSD (Blind Spot Detection) /	
LCA (Lane Change Assist).....	5-79
RCTA (Rear Cross Traffic Alert)	5-82

Special driving conditions	5-86
Hazardous driving conditions.....	5-86
Rocking the vehicle	5-86
Smooth cornering	5-87
Driving at night.....	5-87
Driving in the rain	5-88
Driving in flooded areas.....	5-88
Winter driving	5-89
Snow or icy conditions	5-89
Vehicle load limit	5-92
Tire loading information label.....	5-93
Trailer towing	5-97

6 What to do in an emergency

Hazard warning flasher	6-2
In case of an emergency while driving	6-2
If the engine stalls while driving	6-2
If the engine stalls at a crossroad or crossing	6-2
If you have a flat tire while driving.....	6-3
If the engine will not start	6-3
If the engine doesn't turn over or turns over slowly	6-3
If the engine turns over normally but doesn't start.....	6-3

Jump starting	6-4
Push-starting	6-6
If the engine overheats	6-7
Tire Pressure Monitoring System (TPMS)	6-9
Check tire pressure.....	6-9
Tire pressure monitoring system.....	6-10
Low tire pressure telltale	6-11
Low tire pressure position and tire pressure telltale	6-11
TPMS (Tire Pressure Monitoring System) malfunction indicator	6-12
Changing a tire with TPMS.....	6-13
If you have a flat tire	6-15
Jack and tools	6-15
Changing tires	6-16
Jack label.....	6-21
Towing	6-22
Towing service	6-22
Removable towing hook	6-23
Emergency towing	6-24

7 Maintenance

Engine compartment	7-3
Maintenance services	7-5
Owner's responsibility	7-5
Owner maintenance precautions	7-5
Owner maintenance.....	7-6
Owner maintenance schedule.....	7-7
Scheduled maintenance services.....	7-8
Normal maintenance schedule.....	7-9
Maintenance under severe usage conditions.....	7-22
Explanation of scheduled maintenance items.....	7-24
Engine oil	7-27
Checking the engine oil level	7-27
Checking the engine oil and filter	7-28
Engine coolant.....	7-29
Checking the engine coolant level.....	7-29
Changing engine coolant.....	7-31
Brake fluid	7-32
Checking the brake fluid level.....	7-32
Washer fluid	7-34
Checking the washer fluid level	7-34
Parking brake	7-34
Checking the parking brake	7-34
Air cleaner	7-35
Filter replacement.....	7-35
Climate control air filter	7-36
Filter inspection.....	7-36
Wiper blades.....	7-38
Blade inspection	7-38
Blade replacement	7-38
Battery.....	7-40
For best battery service.....	7-41
Battery recharging	7-42
Reset features	7-44
Tires and wheels.....	7-45
Tire care.....	7-45
Recommended cold tire inflation pressures.....	7-46
Check tire inflation pressure.....	7-47
Tire rotation	7-48
Wheel alignment and tire balance	7-49
Tire replacement	7-49
Wheel replacement.....	7-50
Tire traction.....	7-50
Tire maintenance	7-51
Tire sidewall labeling.....	7-51
Tire terminology and definitions.....	7-55
All season tires	7-58
Summer tires	7-58
Snow tires	7-58

Radial-ply tires	7-59
Low aspect ratio tires	7-59
Fuses	7-61
Instrument panel fuse replacement	7-62
Engine compartment panel fuse replacement.....	7-64
Fuse/Relay panel description	7-66
Light bulbs	7-79
Headlamp, position lamp, turn signal lamp, side marker and front fog lamp bulb replacement	7-79
Side repeater lamp replacement	7-83
Rear combination light bulb replacement	7-83
High mounted stop lamp	7-85
License plate light bulb replacement	7-86
Interior light bulb replacement	7-86
Appearance care	7-87
Exterior care	7-87
Interior care.....	7-92
Emission control system	7-94
California perchlorate notice	7-98

8 Specifications, Consumer information and Reporting safety defects


Dimensions	8-2
Engine	8-2
Bulb wattage	8-3
Tires and wheels	8-4
Luggage volume	8-5
Air conditioning system	8-5
Gross vehicle weight	8-5
Recommended lubricants and capacities	8-6
Recommended SAE viscosity number	8-7
Vehicle identification number (VIN).....	8-8
Vehicle certification label	8-8
Tire specification and pressure label	8-9
Engine number	8-9
Refrigerant label	8-9
Consumer information.....	8-10
Reporting safety defects.....	8-11

Your vehicle at a glance

Exterior overview (I)	1-2
Exterior overview (II)	1-3
Interior overview.....	1-4
Instrument panel overview (I).....	1-5
Instrument panel overview (II).....	1-6
Engine compartment	1-7

EXTERIOR OVERVIEW (I)

■ Front view

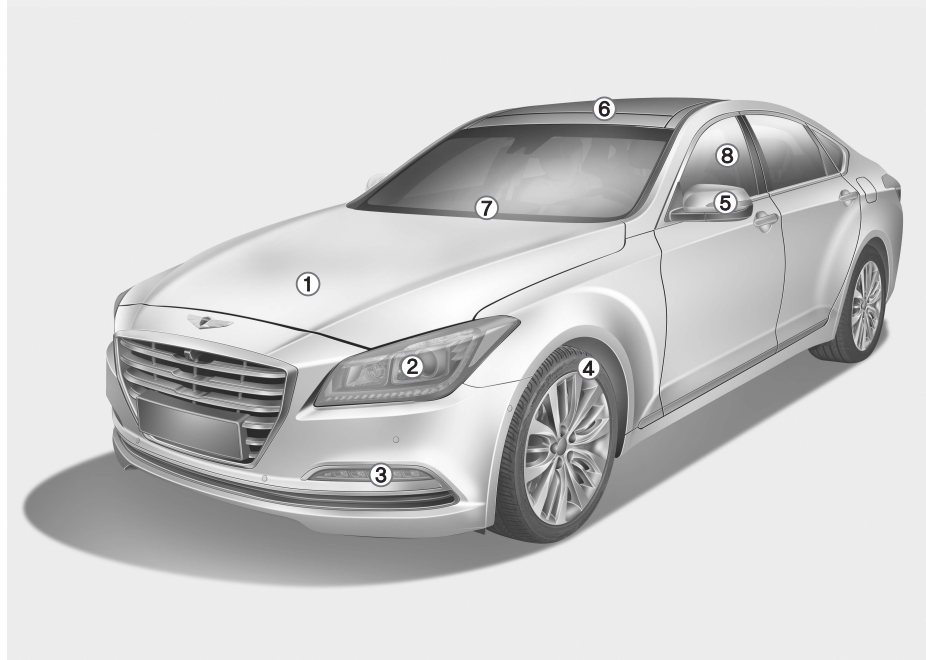


1. Hood	3-47
2. Headlamp	7-79
3. Front fog light.....	7-79
4. Tires and wheels	7-45
5. Outside rearview mirror	3-35
6. Panorama sunroof	3-43
7. Front windshield wiper blades	7-39
8. Windows	3-39

The actual shape may differ from the illustration.

ODH013001

EXTERIOR OVERVIEW (II)

■ Rear view

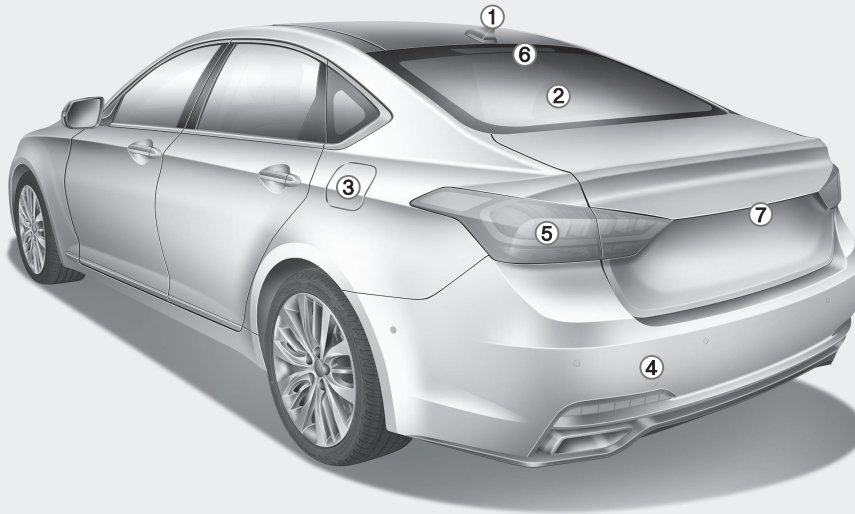


- 1. Antenna4-3
- 2. Defroster3-131
- 3. Fuel filler lid3-58
- 4. Towing hook6-23
- 5. Rear combination lamp7-83
- 6. High mounted stop lamp7-85
- 7. Rearview camera.....3-125

The actual shape may differ from the illustration.

ODH014002N

INTERIOR OVERVIEW

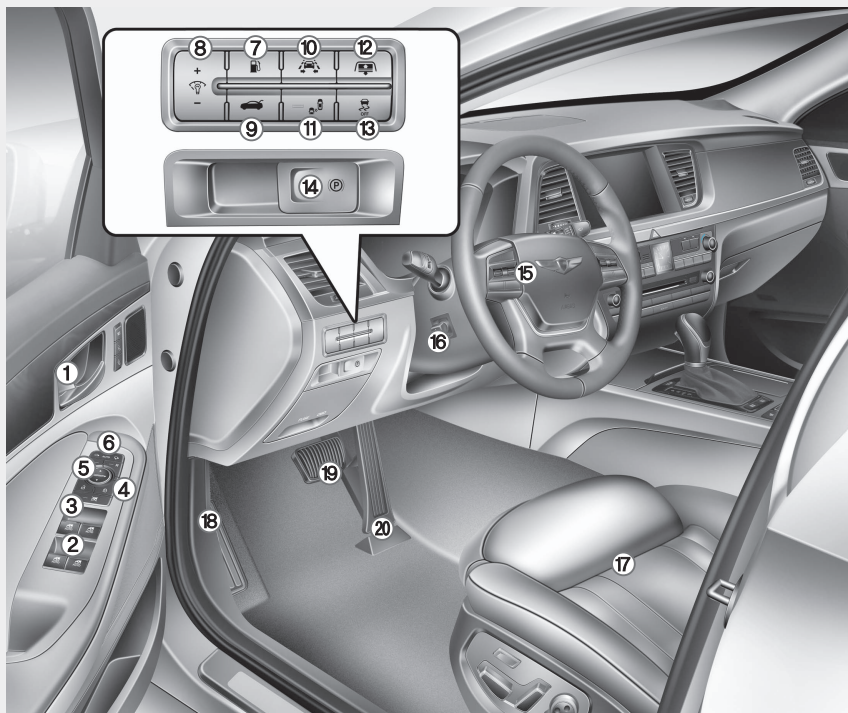


- 1. Door lock/unlock button3-12
- 2. Power window switches3-39
- 3. Power window lock switch3-42
- 4. Central door lock switch3-13
- 5. Outside rearview mirror control switch3-36
- 6. Outside rearview mirror folding button3-37
- 7. Fuel filler lid release button3-58
- 8. Instrument panel illumination control switch3-62
- 9. Trunk release button3-48
- 10. Lane keeping assist system button* ..5-69
- 11. Blind spot detection system button* ..5-78
- 12. Rear curtain button*3-160
- 13. ESC OFF button5-38
- 14. Electric parking brake switch*5-26
- 15. Steering wheel3-18
- 16. Steering wheel tilt/telescope control ..3-18
- 17. Seat2-4
- 18. Hood release lever3-47
- 19. Brake pedal5-23
- 20. Accelerator pedal

* : if equipped

The actual shape may differ from the illustration.

ODH014003N

INSTRUMENT PANEL OVERVIEW (I)

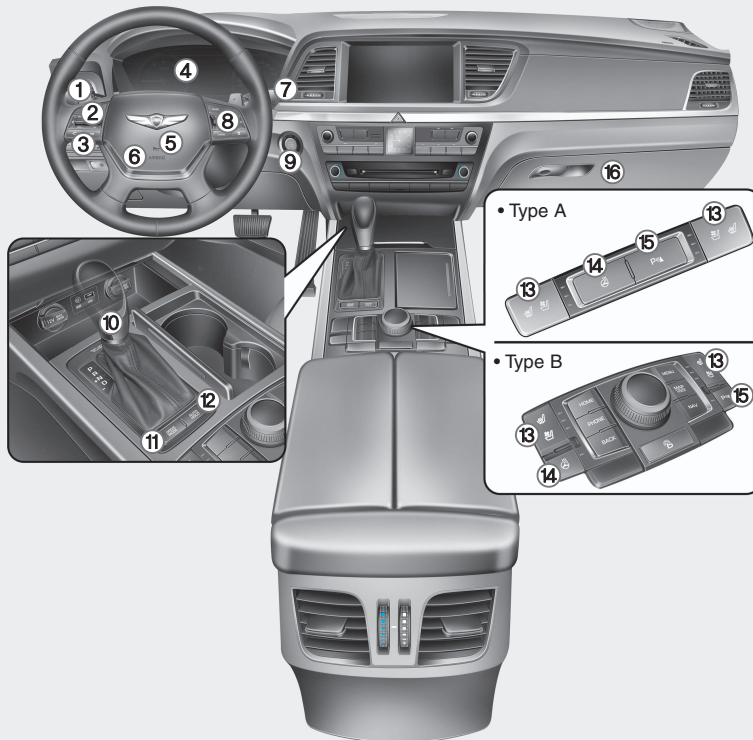

1. Light control/Turn signals..3-109 / 3-113
 2. Steering wheel audio controls*4-4
 3. *Bluetooth*[®] wireless technology hands-free controls*4-5
 4. Instrument cluster3-61
 5. Horn3-20
 6. Driver's front air bag.....2-48
 7. Wiper/Washer.....3-122
 8. Advanced smart cruise controls*5-54
 9. Engine start/stop button.....5-6
 10. Automatic transmission5-11
 11. Drive mode integrated control system5-42
 12. AUTO HOLD5-31
 13. Seat warmers and coolers.....2-18
 14. Heated steering wheel button3-19
 15. Parking assist system3-127
 16. Glove box3-153
- * : if equipped

The actual shape may differ from the illustration.

ODH014004N

INSTRUMENT PANEL OVERVIEW (II)

1. Audio remote control buttons.....4-4

2. *Bluetooth*[®] wireless technology hands-free button.....4-5

3. Cruise control button / Advanced smart cruise control button5-50 / 5-54

4. Smart cruise control vehicle-to-vehicle distance button5-59

5. Light control / Turn signals lever3-109 / 3-113

6. Wiper and washer control lever3-122


7. LCD display control.....3-62

The actual shape may differ from the illustration.


ODH014006N

ENGINE COMPARTMENT

■ Gasoline Engine (Lambda 3.8)

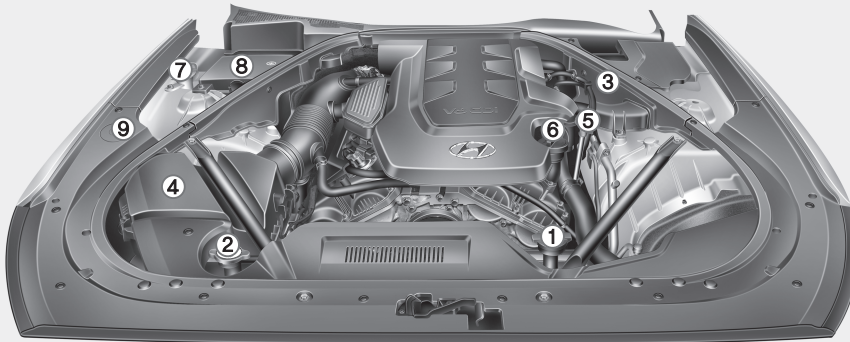

■ Gasoline Engine (Tau 5.0)

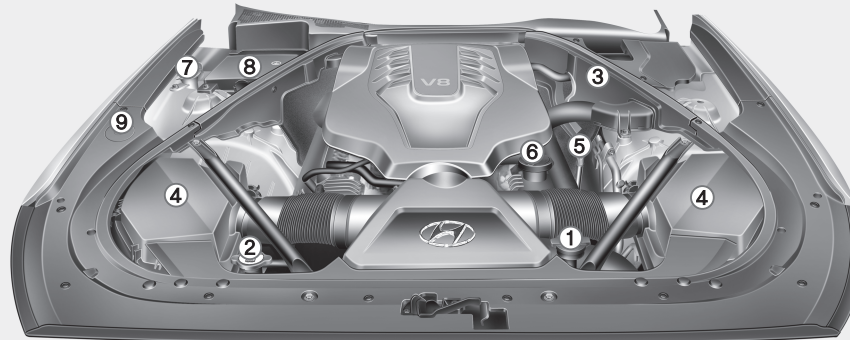

- 1. Engine coolant reservoir7-29
- 2. Radiator cap7-29
- 3. Brake fluid reservoir7-32
- 4. Air cleaner.....7-35
- 5. Engine oil dipstick7-27
- 6. Engine oil filler cap7-28
- 7. Windshield washer fluid reservoir7-34
- 8. Fuse box7-61
- 9. Jumper terminal6-5

The actual engine room in the vehicle may differ from the illustration.

ODH013005/ODH013006L